


ROBE.

Digital Spot 3000^{DT II}

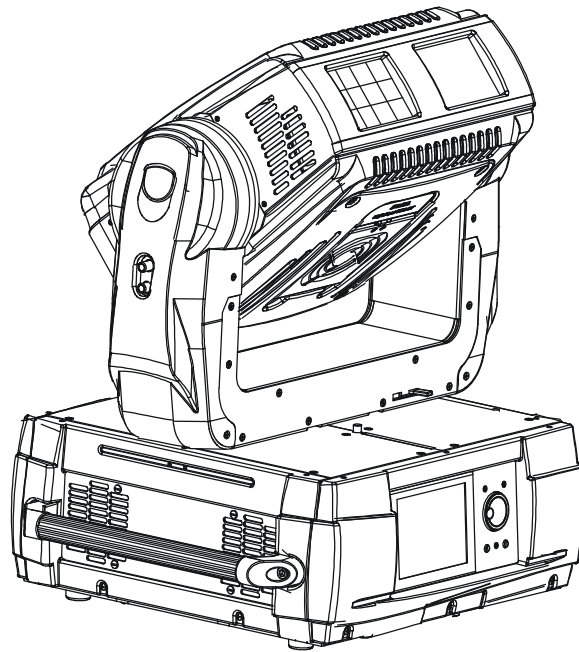

DT series

USER MANUAL

Version 1.3

ROBE® lighting s.r.o. • Czech republic • www.robe.cz

Table of contents

| | |
|---|----|
| 1. Safety instructions | 4 |
| 2. Unpacking | 5 |
| 3. Introduction | 6 |
| 4. Fixture exterior view | 6 |
| 4.1 Placing fixture head covers | 7 |
| 5. Video inputs | 7 |
| 6. Connection to the mains | 8 |
| 6.1 Powering on the DigitalSpot 3000 DT II | 8 |
| 6.2 Power down mode | 8 |
| 7. Shutting down the DigitalSpot 3000 DT II | 8 |
| 8. Positioning the DigitalSpot 3000 DT II | 8 |
| 8.1 Changing the zoom | 10 |
| 9. Rigging the fixture | 10 |
| 10. DMX 512 connection | 12 |
| 11. Ethernet connection | 12 |
| 12. Folder organization | 14 |
| 13. Control menu map | 15 |
| 14. Operating modes | 20 |
| 15. Control menu | 20 |
| 15.1 Fixture Address | 20 |
| 15.2 Fixture information | 21 |
| 15.3 Personality | 21 |
| 15.4 Lamp On/Off | 23 |
| 15.5 Manual control | 23 |
| 15.6 Stand-alone setting | 23 |
| 15.7 Preview mode | 25 |
| 15.8 Reset functions | 25 |
| 15.9 Service menu | 25 |
| 15.10 Special functions | 26 |
| 15.11 Fixture Off | 28 |
| 16. Keystones | 28 |
| 16.1 Global keystone parameters | 28 |
| 16.2 Layer keystone parameters | 29 |
| 17. In Frame and Out Frame parameters | 33 |
| 18. Video Control | 33 |

| | |
|---|----|
| 19. Playback speed | 34 |
| 20. Graphic effects..... | 35 |
| 20.1 Kaleidoscopic effect..... | 35 |
| 20.2 Circular effect (Fish eye)..... | 37 |
| 20.3 RGB (CMY) effects..... | 37 |
| 20.4 Iris effect on layer | 42 |
| 20.5 Auto iris effect on layer | 45 |
| 20.6 Zoom effects on layer | 45 |
| 20.7 Another graphic effects on layers..... | 46 |
| 21. Media content management..... | 48 |
| 21.1 Moving files between the fixture and a PC | 48 |
| 21.2 Moving files between networked fixtures..... | 52 |
| 22. Remote control of the fixture via WWW browser | 52 |
| 23. Picture merging..... | 56 |
| 23.1 Picture merging control channels..... | 56 |
| 23.2 Picture merging example..... | 64 |
| 24. Pre-cut content mode for Picture Merging | 65 |
| 25. Effect video synchronization | 67 |
| 26. Projection onto angular, cylindric or spheric surfaces | 68 |
| 26.1 Curved surface support channels | 68 |
| 26.2 Rectangle onto circle (sphere) mapping with picture merging..... | 70 |
| 27. Video processing on gobo layers from a streaming video server | 71 |
| 28. RDM | 78 |
| 28.1 CIP/MSEX protocol..... | 78 |
| 29. Technical specifications | 80 |
| 30. Error and information messages | 83 |
| 31. Maintenance..... | 85 |
| 31.1 Replacing the lamp | 85 |
| 31.2 Replacing the projector | 87 |
| 31.3 Replacing the air filters..... | 88 |
| 31.4 Replacing the fuse | 89 |
| 31.5 System restore..... | 89 |
| 31.6 Installing the DVI/VGA capture card..... | 90 |
| 31.7 Installing the SDI/ASI capture card | 91 |
| 31.8 Cleaning | 92 |

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY
BEFORE POWERING OR INSTALLING YOUR DIGITALSPOT 3000 DT II !
Save it for future reference.**

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

The DigitalSpot 3000 DT II was designed for indoor use and it is intended for professional application only. It is not for household use.

1. Safety instructions

DANGEROUS VOLTAGE CONSTITUTING A RISK OF ELECTRIC SHOCK IS PRESENT WITHIN THIS UNIT!

Make sure that the available voltage is not higher than stated on the rear panel of the fixture. This fixture should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied, consult your authorized distributor or local power company.

Always disconnect the fixture from AC power before cleaning, removing or installing the fuses, or any part.

Make sure that the power switch is set to off-position before you connect the fixture to the mains. The power plug has to be accessible after installing the fixture. Do not overload wall outlets and extension cords as this can result in fire or electric shock.

Do not allow anything to rest on the power cord. Do not locate this fixture where the cord may be damaged by persons walking on it.

Make sure that the power cord is never crimped or damaged by sharp edges. Check the fixture and the power cord from time to time.

Refer servicing to qualified service personnel.

This fixture falls under protection class I. Therefore this fixture has to be connected to a mains socket outlet with a protective earthing connection.

Do not look straight at the fixture objective lens or LED module during operation. The intense light beam may damage your eyes.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

Do not shake the device. Avoid brute force when installing or operating the device.

This fixture was designed for indoor use only, Do not expose this unit to rain or use near water.

When choosing the installation spot, please make sure that the device is not exposed to extreme heat, moisture or dust.

Air vents and slots in the fixture's head and base are provided for ventilation, to ensure reliable operation of the device and to protect it from overheating.

The openings should never be covered with cloth or other materials, and never must be blocked.

This fixture should not be placed in a built-in installation unless proper ventilation is provided.

Always use a secondary safety cable when mounting this fixture.

Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.

Make sure that the area below the installation place is blocked when rigging, derigging or servicing the fixture.

Do not block the front objective lens with any object when the fixture is under operation.

The lamp becomes extremely hot during operation. Allow the fixture to cool approximately 40 minutes prior to removing the lamp assembly for replacement. Do not operate lamps beyond the rated lamp life.

Operate the fixture only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the fixture. Most damages are the result of unprofessional operation!

Please use the original packaging if the fixture is to be transported.

Please consider that unauthorized modifications on the fixture are forbidden due to safety reasons!

If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to dangers like short-circuit, burns, electric shock, lamp explosion, crash etc.

To switch the DigitalSpot 3000 DT II off, always use either option "Fixture Off" in main menu or set a DMX value of channel 8 between 240-249.
Never switch the fixture off by pulling out the power plug from the socket otherwise the fixture may be damaged (projector lamp, operating system...)!

2. Unpacking

The DigitalSpot 3000 DT II is packaged in either a cardboard box or one-unit (two-unit) flight case to protect the product during shipment.

The following items are included:

- the DigitalSpot 3000 DT II
- 2 omega holders
- the USB 2.0 flash drive with a System recovery utility
- this user manual


3. Introduction

The DigitalSpot 3000 DT II features moving head with a video projection and automated lighting technologies including a DMX controllable digital media server installed in a fixture's base. The built-in 32-bit Graphics Engine utilizes Linux and DirectX application programming interface to provide extensive image control of graphic objects. The Digital spot 3000 DT II uses DMX512 protocol to control hardware functions like pan, tilt, and focus, as well as media fixture capabilities including loading images and movies. The graphics engine allows you manipulate position, scale, rotation, apply visual effects and colour mix each image.

S-Video and VGA inputs for direct input to data projectors are handy for performing presentations.


S-Video and Composite live inputs can be used in graphics effects of DigitalSpot 3000 DT II

4. Fixture exterior view

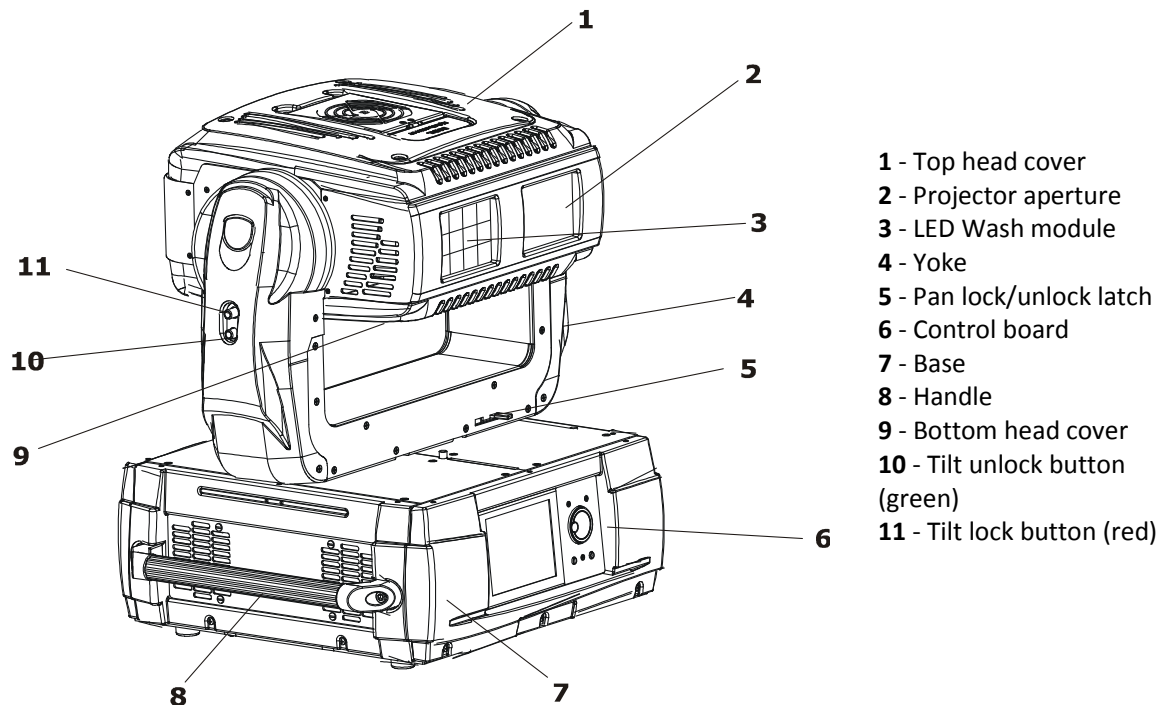


- 1 - Top head cover
- 2 - Projector aperture
- 3 - LED Wash module
- 4 - Yoke
- 5 - Pan lock/unlock latch
- 6 - Control board
- 7 - Base
- 8 - Handle
- 9 - Bottom head cover
- 10 - Tilt unlock button (green)
- 11 - Tilt lock button (red)

Front panel of fixture base

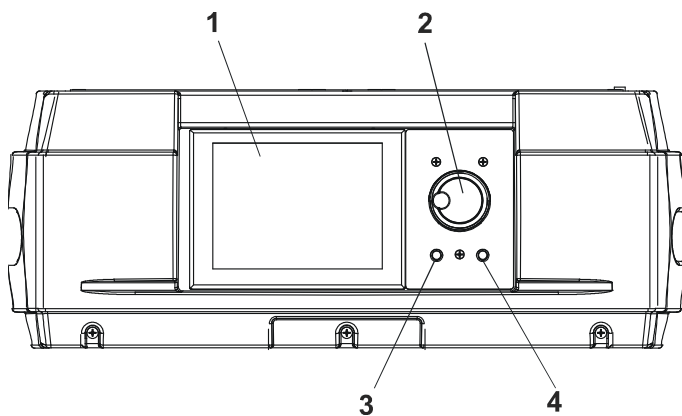

- 1 - Display
- 2 - Rotary control wheel
- 3 - Escape button
- 4 - Enter button

Rear panel of the fixture base

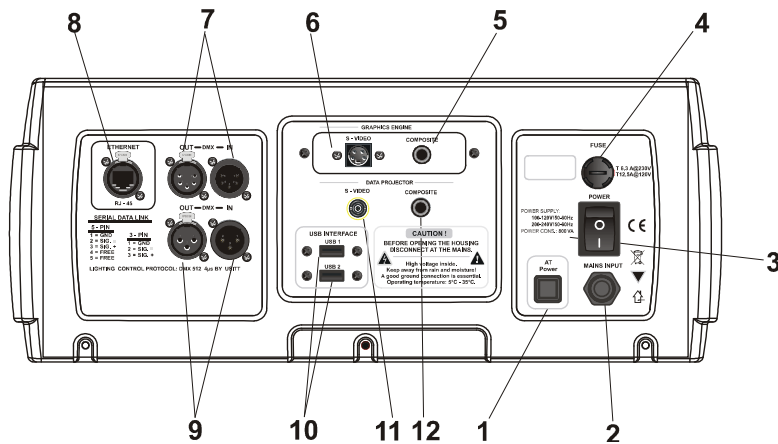


- 1 - AT power
- 2 - Power cord
- 3 - Power switch
- 4 - Fuse
- 5 - Composite input-graphics engine
- 6 - S-video input- graphics engine
- 7 - DMX input/output (5-pin XLR)
- 8 - LAN (RJ-45) port
- 9 - DMX input/output (3-pin XLR)
- 10 - 2 x USB port
- 11 - S-video input-dataprojector
- 12 - Composite input-dataprojector

Optional Inputs



4.1 Placing fixture head covers

The head cooling fans are fixed in head covers and their supply is realized by a pair of springy contacts. **The head covers cannot be interchanged otherwise the fans will not work.** Pay attention to correct placing the covers on the fixture head.

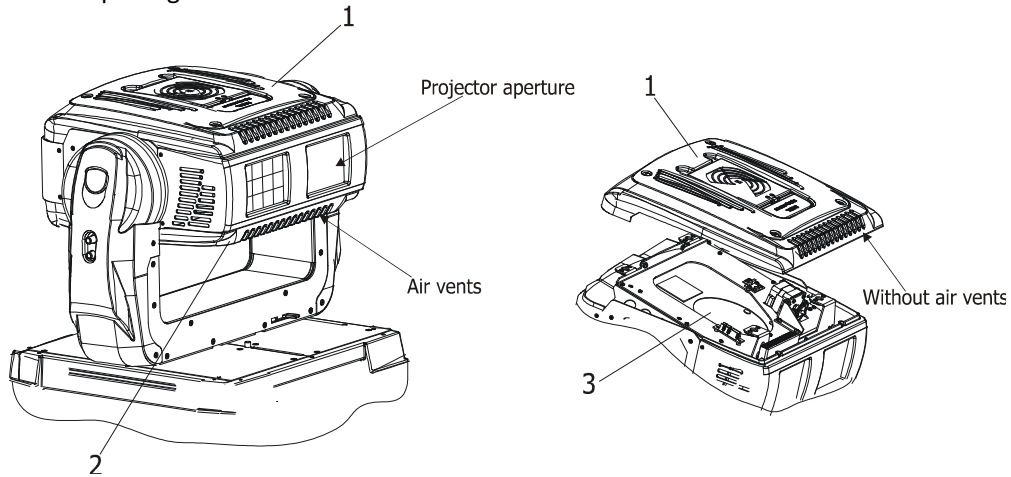


The top head cover (1) does not have air vents at its front and shelters the top projector side with the lamp cover (3). The bottom head cover (2) has air vents at its front and shelters the bottom projector side.

5. Video inputs

Both **Composite** (8) and **S-Video** (9) inputs provide direct connection to the projector. The inputs are intended for a static presentation as data going through the inputs cannot be processed in a graphics engine, it means that graphics effects from a DMX protocol will not be usable. In this use of the fixture, the function of Keystoning from a DMX protocol will not operate. Next, both inputs **Composite** (10) and **S-Video** (11) enable to process data in a graphics engine, it means that you can use all spectrum of effects that the DMX protocol offers.

6. Connection to the mains

Install a suitable plug on the power cord, note that the cores in the power cord are colored according to the following table.

| Core (Eu) | Core (US) | Pin | Symbol |
|--------------|-----------|---------|---|
| Brown | Black | Live | L |
| Light blue | White | Neutral | N |
| Yellow/Green | Green | Earth |  |

The earth has to be connected!

6.1 Powering on the DigitalSpot 3000 DT II

When the fixture is connected to the AC mains supply and the power switch is on, it automatically begins a homing procedure to verify that all functions of the fixture and its internal projector are in good order.

Note: If the fixture was switched off by DMX command (channel 8 "Power / Special Functions" → DMX range of 240-249), you can switch it on by DMX command on the same channel: DMX range of 45-49, function "Wake On DMX" or by sending a special data packet via Ethernet – fixture supports function Wake On LAN.

6.2 Power down mode

This mode omits fixture reset after switching the fixture on and deactivates all motors. The "Power down mode" is useful in special events e. g. if the fixture is placed in a flight case and you want to set its DMX address without taking it out from the case. To enter the "Power down mode", press and hold the [ENTER] button and at the same time switch on the Power switch. Press the [ESC] button to see a notice "Power Down Mode."

Now you can use the fixture menu to set desired behaviour of the unit. If you want to go to the standard operation mode without switching the fixture off, run total reset of the fixture (menu item **Reset all Systems**).

7. Shutting down the DigitalSpot 3000 DT II

There are two recommended ways how to shutdown the fixture:

1. A DMX controller can switch off the projector lamp and shut down the fixture with the "Lamp Off, Fixture Off" option on the control channel 8 "Power / Special Functions" (see DMX protocol).
2. The option "Fixture Off" in main menu of DigitalSpot 3000 DT II switches off the projector's lamp and shuts down the fixture.

After shutting down the fixture switch the power switch on the rear side of the fixture base to the off position in order to save energy.

***Removing power directly without the shutdown procedure
can reduce fixture reliability!***

8. Positioning the DigitalSpot 3000 DT II

The DigitalSpot 3000 DT II is designed to be installed in one of four possible installation locations:

1. Front Table - the fixture is placed near the floor in front of the screen.
2. Front Ceiling - the fixture is suspended upside-down from the ceiling (truss) in front of the screen.
Set Ceiling Projection in the menu Personality ("Personality--->"Projection Presetting"
--->"Ceiling Projection"--->"On")
3. Rear Table - the fixture is placed near the floor behind the screen. Set Rear Projection in the menu Personality ("Personality--->"Projection Presetting"--->"Rear Projection"--->"On")
Note that a special rear projection screen is required.
4. Rear Ceiling - the fixture is suspended upside-down from the ceiling (truss) behind the screen.
Set Rear Projection in the menu Personality ("Personality--->"Projection Presetting"--->
"Rear Projection"--->"On") and Ceiling Projection ("Personality--->"Projection Presetting"

DigitalSpot 3000 DT II


--->"Ceiling Projection"--->"On")

Note that a special rear projection screen is required.

When determining the position of the fixture and projection screen, you will need to account for the projected image size, which is directly proportional to the projection distance.

There is a chart of throw distance ratio of 1.93-2.16 : 1 to assist you in determining the ideal location for your fixture.

| Illuminance (white output) | | | | Image Size | |
|----------------------------|-------------------|-----------|-----------|----------------------------------|----------------------------------|
| Max. zoom | Min. zoom | | | Max. zoom | Min. zoom |
| 50 lx 5 fc | 58 lx 5 fc | Max. zoom | Min. zoom | X=9.3m (30.5') Y=7.0m (23') | X=8.3m (27.2') Y=6.3m (20.7') |
| 63 lx 6 fc | 73 lx 7 fc | | | X=8.3m (27.2') Y=6.2m (20.3') | X=7.4m (24.3') Y=5.6m (18.4') |
| 71 lx 7 fc | 83 lx 8 fc | | | X=7.8m (25.6') Y=5.8m (19') | X=6.9m (22.6') Y=5.2m (17.1') |
| 95 lx 9 fc | 111 lx 10 fc | | | X=6.7m (22') Y=5.1m (16.7') | X=6.0m (19.7') Y=4.5m (14.8') |
| 132 lx 12 fc | 155 lx 14 fc | | | X=5.7m (18.7') Y=4.3m (14.1') | X=5.1m (16.7') Y=3.8m (12.5') |
| 197 lx 18 fc | 231 lx 21 fc | | | X=4.7m (15.4') Y=3.5m (11.5') | X=4.2m (13.8') Y=3.1m (10.2') |
| 250 lx 23 fc | 293 lx 27 fc | | | X=4.1m (13.5') Y=3.1m (10.2') | X=3.7m (12.1') Y=2.8m (9.2') |
| 326 lx 30 fc | 383 lx 36 fc | | | X=3.6m (11.8') Y=2.7m (8.9') | X=3.2m (10.5') Y=2.4m (7.9') |
| 444 lx 41 fc | 521 lx 48 fc | | | X=3.1m (10.2') Y=2.3m (7.5') | X=2.8m (9.2') Y=2.1m (6.9') |
| 640 lx 60 fc | 750 lx 70 fc | | | X=2.6m (8.5') Y=1.9m (6.2') | X=2.3m (7.5') Y=1.7m (5.6') |
| 1000 lx 93 fc | 1172 lx 109 fc | | | X=2.1m (6.9') Y=1.6m (5.2') | X=1.9m (6.2') Y=1.4m (4.6') |
| 1778 lx 165 fc | 2083 lx 194 fc | | | X=1.6m (5.2') Y=1.2m (3.9') | X=1.4m (4.6') Y=1.0m (3.3') |
| 4000 lx 372 fc | 4868 lx 435 fc | | | X=1.0m (3.3') Y=0.8m (2.6') | X=0.9m (3.0') Y=0.7m (2.3') |

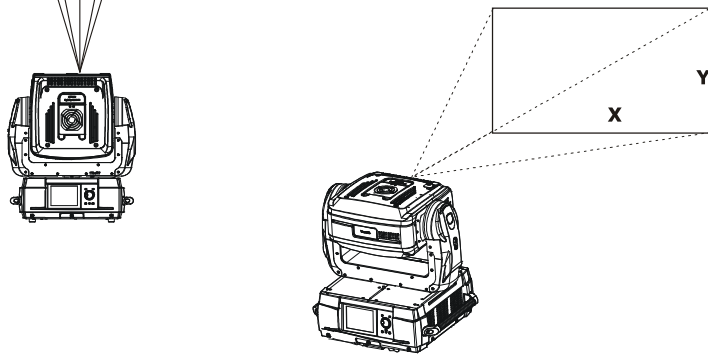


Min zoom is default setting. Max. zoom is possible after manual adjustment only. See instructions below.

Note: There is a tolerance among these numbers due to optical component variations. We recommend that if you intend to permanently install the DigitalSpot 3000 DT II, you should physically test the projection size and distance using the actual fixture in m before you permanently install it, so as to make allowance for this projector's optical

characteristics. This will help you determine the exact mounting position so that it best suits your installation location

8.1 Changing the zoom

1. Turn the power off and if the projector lamp was on, wait 10 minutes until the projector has cooled.
2. Remove the top cover of the fixture head by loosening the four quarter-turn fasteners (1).
3. Unscrew 2 fastening screws (2) which securing the focus driving motor (3). Turn the motor up in order to allow an access to the zoom ring (4).
4. Turn the zoom ring to the left position to set max. zoom. (Right position-min. zoom-default setting).
5. Tilt the focus driving motor back to the chassis and secure it by 2 crews.
6. Fasten the top cover back on the fixture head.

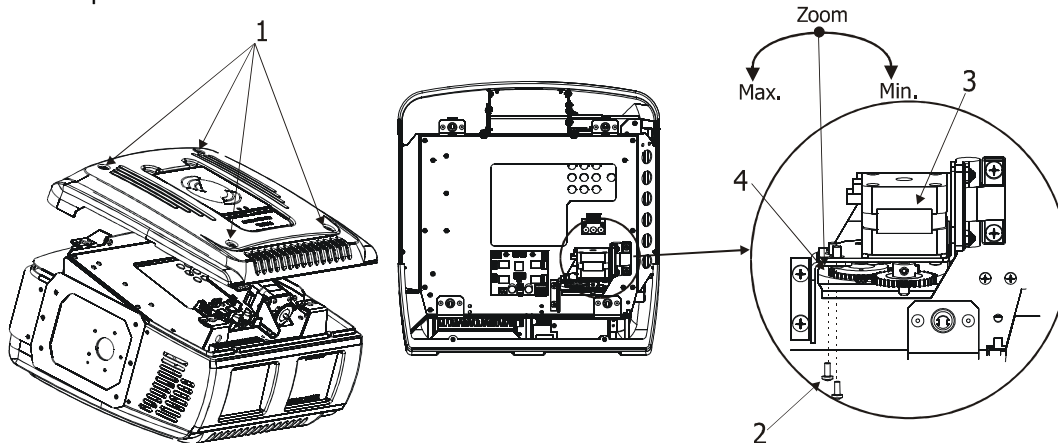

9. Rigging the fixture

Please consider the respective national norms during the installation!

Verify the truss or support will handle the combined weight of all the fixtures on the truss

Always use a secondary safety cable when mounting this fixture

When rigging, derigging or servicing the fixture staying in the area below the installation place, on bridges, under high working places and other endangered areas is forbidden.

The operator has to make sure that safety-relating and machine-technical installations are approved by an expert before taking into operation for the first time and after changes before taking into operation another time.

The operator has to make sure that safety-relating and machine-technical installations are approved by a skilled person once a year.

To ensure reliable operation of the product and to protect it from overheating, the vents must not be blocked or covered.

Hot air is exhausted from the exhaust vent. Do not put any flammable object near the fixture, hot air is exhausted from the air vents.

Keep the exhaust vents at least 1 m away from any objects.

Do not touch peripheral parts of the exhaust vent, especially screws, grids and metallic parts. These areas will become hot while the fixture is being used.

Do not put anything on the fixture. Objects put on the fixture will not only get damaged but also may cause fire hazard by heat.

Allow the fixture to cool for 20 minutes before handling.

The fixture should be installed out of the reach of people.

IMPORTANT! Overhead rigging requires extensive experience, including calculation of working load limits, installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack

these qualifications, do not attempt the installation yourself, but instead use a professional structural rigger. Improper installation can result in bodily injury and or damage to property. The fixture must never be fixed swinging freely in the room.

Use 2 appropriate clamps to rig the fixture on a truss.


Make sure that the device is fixed properly!
Ensure that the structure (truss) to which you are attaching the fixtures is secure.

A pair of the Omega holders can be placed in 2 positions on the bottom of the base. Use 2 clamps (not supplied) with screws M12.

For overhead use, always install a safety cable that can hold at least 10 times the weight of the fixture. You must only use safety cables with screw-on carbiners. Pull the safety cable through the two apertures on the bottom of the base and over the trussing system etc. Insert the end in the carbine and tighten the fixation screw.

To install the fixture on the truss:

1. Bolt clamp (1) to the omega holder (2) with M12 bolt and lock nut through the hole in the holder.
2. Fasten the omega holders on the bottom of the base by inserting both quick-lock fasteners (3) into the holes of the base and tighten fully clockwise.
3. Fasten the safety-rope (4) through the two apertures in the bottom of the base and over the trussing system.

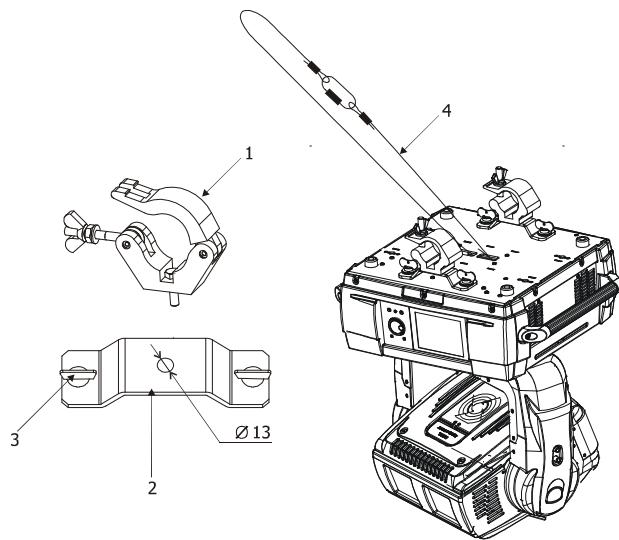

Before taking into operation for the first time, the installation has to be approved by an expert!


We recommend avoiding dusty/smoky environments when operating the fixture. Usage in these environments may cause a poor image quality. When using the projector under dusty or smoky conditions, dust may accumulate on a lens or optical elements inside the projector. Such condition may degrade the quality of the projected image.

10. DMX 512 connection


The fixture is equipped with both 3-pin and 5-pin XLR sockets for DMX input and output. Only use a shielded twisted-pair cable designed for RS-485 and 3-pin/5-pin XLR- connectors in order to connect the controller with the fixture or one fixture with another.

Wiring of the XLR connectors:

DMX output
XLR mounting sockets (rear view):

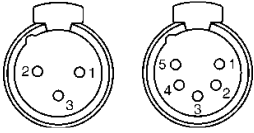

DMX input
XLR mounting plugs (rear view):

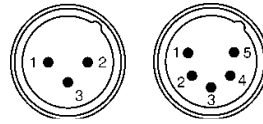


1 – Shield 2 - Signal (-) 3 - Signal (+) 4 – Not connected 5 – Not connected

To build a DMX chain

1. Connect the DMX output of the first fixture in the DMX chain with the DMX input of the next fixture. Always connect one output with the input of the next fixture until all fixtures are connected.
2. Use menu "DMX Settings " to set the DMX start address on all fixtures (see the "Fixture address" menu).
3. The option Activate DMX mode has to be confirmed in the "DMX Settings" menu on all fixtures.
Do not overload the link. Max. 32 fixtures may be connected on a DMX link.

Example:

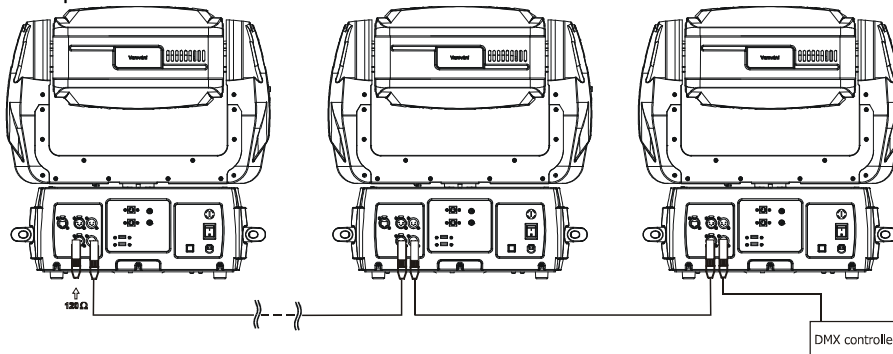

Caution: Terminate the link by installing a termination plug in the DMX output of the last fixture. The termination plug is a male 3-pin XLR plug with a 120 Ohm resistor soldered between Signal (-) and Signal (+).

11. Ethernet connection

The fixtures on a data link are connected to the Ethernet network with an Art-Net communication protocol. The controlling software from PC (or lighting console) has to support the Art-Net protocol.


The Art-Net communication protocol is a 10 Base T Ethernet protocol based on the TCP/IP. Its purpose is to allow transfer of large amounts of DMX 512 data over a wide area using standard network technology.

IP address is the Internet protocol address. The IP uniquely identifies any node (fixture) on a network.

The Universe is a single DMX 512 frame of 512 channels.

The DigitalSpot 3000 DT II is equipped with 8-pin RJ-45 socket for Ethernet input. Use a network cable category 5 (with four "twisted" wire pairs) and standard RJ-45 plugs in order to connect the fixture to the network.

RJ-45 socket (front view):



1- TD+

5- Not connected

RJ-45 plug (front view):



12

DigitalSpot 3000 DT II

| | |
|------------------|------------------|
| 2- TD- | 6- RX- |
| 3- RX+ | 7- Not connected |
| 4- Not connected | 8- Not connected |

Patch cables that connect fixtures to the hubs or LAN sockets are wired 1:1, that is, pins with the same numbers are connected together:

| | | | | | | | |
|-----|-----|-----|-----|-----|-----|-----|-----|
| 1-1 | 2-2 | 3-3 | 4-4 | 5-5 | 6-6 | 7-7 | 8-8 |
|-----|-----|-----|-----|-----|-----|-----|-----|

If only the fixture and the computer are to be interconnected, no hubs or other active components are needed. A cross-cable has to be used:

| | | | | | | | |
|-----|-----|-----|-----|-----|-----|-----|-----|
| 1-3 | 2-6 | 3-1 | 4-8 | 5-7 | 6-2 | 7-5 | 8-4 |
|-----|-----|-----|-----|-----|-----|-----|-----|

Ethernet operation.

Connect the Ethernet inputs of all fixtures in the fixture chain with the network.

Use the menu "Artnet Settings " to set an IP address , artnet universe and artnet subnet on all fixtures (see the "Fixture address" menu).

The option "Activate Artnet mode" has to be confirmed in "Artnet Settings " menu on all fixtures.

Example:

(DMX address=1)

DMX address=273

IP address=002.168.002.004

Artnet Universe=1

Artnet Subnet=0

DMX address=137

IP address=002.168.002.003

Artnet Universe=1


Artnet Subnet=0

DMX address=1

IP address=002.168.002.002

Artnet Universe=1

Artnet Subnet=0

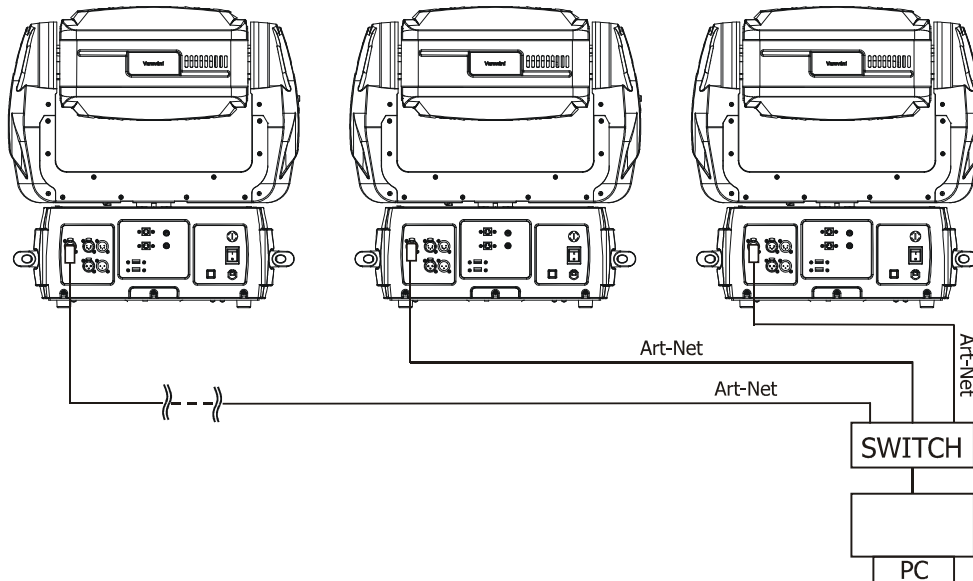

12. Folder organization

The library structure is reflected on the hard drive where all files for the library are stored. The whole library is contained within a special folder called 'Media'.

Inside the Media folder is a collection of folders (000,001...240) each named with a 3-digit number. Each folder following this convention represents a library folder and the 3-digit number represents the name of the folder. Because of this, you can't have folders without the 3 digit number scheme. You can't neither have two folders with the same digits.

Inside each folder is a collection of media files that the library folder holds. The media files also should follow the 3-digit conventions where a 3-digit number is followed by an underscore and a name e.g.: 001_testfile1.png.

Note that for media files the digit starts at 001_ since visual 0 is always considered as being empty.

The media files assigned to the DMX values can be sorted either in an **alphabetical** or **numerical order**. Default assigning is the alphabetical order. If you need to change this sorting, go to the menu "Personality" and select "Gobo selection mode" option.

The numerical order is suitable in the case that you need to exactly assign certain media files to specified DMX addresses.

The table below show differences in file→DMX assignment between the alphabetical and numerical sorting. The table also includes file names without a correct 3-digit convention to illustrate their behaviour in the numerical sorting.

| Media file name | DMX value at Alphabetical Sorting | DMX value at Numerical Sorting |
|-------------------|--------------------------------------|-----------------------------------|
| 001_testfile1.png | 1 | 1 |
| 020_testfile2.png | 2 | 20 |
| 19_testfile3.png | 3 | 19 |
| 3_testfile4.png | 4 | 3 |
| 460_testfile5.png | 5 | Not Assigned* |
| testfile6.png | 6 | Not Assigned** |

* The 3-digit number has to be in range of 001-255. If there is more than 255 media files in the folder, files above 255 are ignored.

** The media file name does not contain any digit.

Subfolders 000-020 are reserved for default gobos and videos (from factory) and their content cannot be changed.


The images and video clips can be in one of the following formats: bmp, jpg, tga; .png, gif, pcx, pnm, xpm and lbm for images and mpeg1, mpeg2 for videos.

The folder "Programs" serves for saving recorded DMX programs (dprg_01.csv,.....dprg_10.csv).

The folder named "Update" contains subfolders with the update files. The subfolders are created automatically during software updating and their names matching to date when software update has been executed.

The folder a "Log" serves for saving log files generate by the option "Generate Log File" in a menu "Special Functions" of the control panel. Log file names are deducated from the date when the file has been logged out.

Top level folder

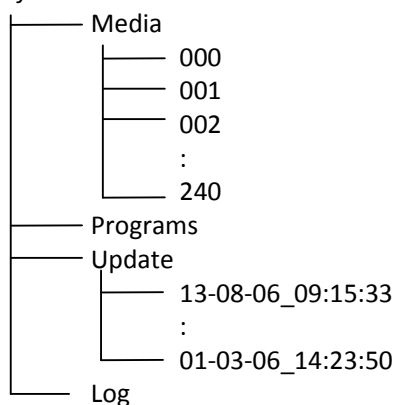

13. Control menu map

Default settings=**Bold print**

| Menu Level 1 | Menu Level 2 | Menu Level 3 | Menu Level 4 | Menu Level 5 | Menu Level 6 | Menu Level 7 | Menu Level 8 |
|----------------------------|------------------------|----------------------|---------------------------|--------------|--------------|--------------|--------------|
| Fixture Address | DMX Settings | Set DMX Address | 001-512 | | | | |
| | | Activate DMX Mode | | | | | |
| | Ethernet Settings | Set IP Address | Default IP Address | | | | |
| | | | Custom IP Address | | | | |
| | | | Gateway Address | | | | |
| | | Set ArtNet Universe | 0-15 | | | | |
| | | Set ArtNet Subnet | 0-15 | | | | |
| | | Activate Artnet Mode | | | | | |
| | | | | | | | |
| Fixture Information | DMX Values | Pan | 0-255 | | | | |
| | | : | | | | | |
| | | Synchro to L3 | 0-255 | | | | |
| | Media Disk Space Usage | Free Disk Space | | | | | |
| | | Used Disk Space | | | | | |
| | Software Version | Graphic Engine | | | | | |
| | | IC1 Motherboard | | | | | |
| | | IC2 Motherboard | | | | | |
| | | IC3 Motherboard | | | | | |
| | | IC1 HeadBoard | | | | | |
| | GPU Info: | GPU | | | | | |
| | | Video Bios | | | | | |
| | | Driver Version | | | | | |
| | | Display Device | | | | | |
| | Product IDs | Mac Addr. | | | | | |
| | | RDM UID | | | | | |
| Personality | Pan Reverse | On, Off | | | | | |
| | Tilt Reverse | On, Off | | | | | |
| | Lamp Presetting | Lamp On/Power On | On, Off | | | | |

DigitalSpot 3000 DT II

| Menu Level 1 | Menu Level 2 | Menu Level 3 | Menu Level 4 | Menu Level 5 | Menu Level 6 | Menu Level 7 | Menu Level 8 |
|--------------|------------------------|---------------------------|---------------------------|--------------|--------------|--------------|--------------|
| | | Lamp Off via DMX | On, Off | | | | |
| | | Lamp On If DMX is Present | On, Off | | | | |
| | | Lamp Off if not DMX | On, Off | | | | |
| | Display Adjusting | Display Permanent On | | | | | |
| | | | Display Off After 5 min | | | | |
| | | | Permanent On | | | | |
| | | Display Orientation | Normal Orientation | | | | |
| | | | Rotated Orientation | | | | |
| | Pan/Tilt Feedback | On, Off | | | | | |
| | Pan/Tilt Mode | | | | | | |
| | | Time Mode | | | | | |
| | | Speed Mode | | | | | |
| | Active Blackout While: | During Movement Cor. | On, Off | | | | |
| | | Pan/Tilt Moving | On, Off | | | | |
| | Projection Presetting | Ceiling Projection | On, Off | | | | |
| | | Rear Projection | On, Off | | | | |
| | | Projector Refresh Rate | 60Hz (Default) | | | | |
| | | | 50Hz | | | | |
| | Dmx Protocol | Set DMX Mode | No Server | | | | |
| | | | 2 Layers | | | | |
| | | | 3 Layers | | | | |
| | | Protocol Version | Version 1.0 | | | | |
| | | | Version 1.2 | | | | |
| | | | | | | | |
| | Gobo Selection Mode | Alphabetical Order | | | | | |
| | | Numerical Order | | | | | |
| | Microphone Sensitivity | 1..10..20 | | | | | |
| | Verbose Mode | Verbose Mode 0 | | | | | |
| | | Verbose Mode 1 | | | | | |
| | | DMX Verbose Mode | | | | | |

DigitalSpot 3000 DT II

| Menu Level 1 | Menu Level 2 | Menu Level 3 | Menu Level 4 | Menu Level 5 | Menu Level 6 | Menu Level 7 | Menu Level 8 |
|--------------------------------|--------------------------|------------------------------|--------------|--------------|--------------------------|--------------|--------------|
| | | Synchro Verbose Mode | | | | | |
| | Default Settings | Set Default Values | | | | | |
| | | Remove User Media Content | | | | | |
| | | | | | | | |
| Lamp On/Off | On, Off | | | | | | |
| | | | | | | | |
| Manual Control | Manual DMX Control | Pan | 0-255 | | | | |
| | | : | | | | | |
| | | Synchro to L3 | 0-255 | | | | |
| | Video Input Selection | Internal Input | | | | | |
| | | External Composite Input | | | | | |
| | | External SVideo Input | | | | | |
| Stand-alone Setting | Play Program | Test program In Loop | Normal | | | | |
| | | Program 1 | Static | Pan | 0-255 | | |
| | | : | | Tilt | 0-255 | | |
| | | Program 10 | | Focus | 0-255 | | |
| | | | | Run Program | | | |
| | Edit Program | Program 1 | | | | | |
| | | : | Edit Steps | Step 1 | Pan | | |
| | | Program 10 | | : | : | | |
| | | | | Step 99 | Synchronization To ID | | |
| | | | | | Step Time | 0.1-25.5 | |
| | | | | | Fade Time | 0.1-25.5 | |
| | | | | | Snap DMX | | |
| | | | | | Save | | |
| | | | Start Step | 1-99 | Save and Copy | | |
| | | | End Step | 1-99 | | | |
| | Music Trigger | On, Off | | | | | |
| | Play DMX Program | DMX Program 1 in Loop | | | | | |
| | | : | | | | | |

DigitalSpot 3000 DT II

| Menu Level 1 | Menu Level 2 | Menu Level 3 | Menu Level 4 | Menu Level 5 | Menu Level 6 | Menu Level 7 | Menu Level 8 |
|------------------------|----------------------------|------------------------|-----------------|--------------|--------------|--------------|--------------|
| | | DMX Program 10 in Loop | | | | | |
| | Record DMX Program | DMX Program 1 | | | | | |
| | | : | | | | | |
| | | DMX Program 10 | | | | | |
| | Preset Playback | Deactivated | | | | | |
| | | : | | | | | |
| | | DMX Program 10 in Loop | | | | | |
| | Fixture Off Timer | Timer Deactivated | | | | | |
| | | Timer Activated | | | | | |
| | | Set Timer Hours | | | | | |
| | | Set Timer Minutes | | | | | |
| | | | | | | | |
| Preview Mode | | | | | | | |
| | | | | | | | |
| Reset Functions | Reset Graphics Engine | | | | | | |
| | Reset Pan/Tilt System | | | | | | |
| | Reset Focus/Shutter System | | | | | | |
| | Reset All Systems | | | | | | |
| | | | | | | | |
| Service Menu | Power On Time | Total Hours | | | | | |
| | | Resetable Hours | | | | | |
| | Lamp On Time | Total Hours | | | | | |
| | | Resetable Hours | | | | | |
| | Lamp Strikes | Total Strikes | | | | | |
| | | Resetable Strikes | | | | | |
| | Fixture Temperatures | Current | Pan/Tilt Board | | | | |
| | | | LED Panel Board | | | | |
| | | Maximum Nonresetable | Pan/Tilt Board | | | | |
| | | | LED Panel Board | | | | |
| | | Maximum Resetable | Pan/Tilt Board | | | | |

DigitalSpot 3000 DT II

| Menu Level 1 | Menu Level 2 | Menu Level 3 | Menu Level 4 | Menu Level 5 | Menu Level 6 | Menu Level 7 | Menu Level 8 |
|--------------------------|-----------------------|-------------------------------|-------------------|------------------------|--------------------------|--------------|--------------------------|
| | | | LED Panel Board | | | | |
| | Air Filters | Time To Clean Up Filters | | | | | |
| | | Set clean Up Timer | 10..50..300 | | | | |
| | | | | | | | |
| Special Functions | Regenerate Thumbnails | Set Thumbnail size | 50..96...300 | | | | |
| | | Regenerate Thumbnails | | | | | |
| | FTP Server | Set Account | | | | | |
| | | Allow Anonymous | Yes/No | | | | |
| | HTTP Access | Set Account | | | | | |
| | | Allow Anonymous | Yes/No | | | | |
| | USB Data Synchronize | USB1 | Open | Media | Open | 000 | Open |
| | | USB2 | | | | : | Synchronize to Fixture |
| | | | | | | 240 | Synchronize from Fixture |
| | | | | | Synchronize to Fixture | | |
| | | | | | Synchronize from Fixture | | |
| | | | | Update | Open | | |
| | | | | | Synchronize to Fixture | | |
| | | | | | Synchronize from Fixture | | |
| | | | Init Flash Disc | | | | |
| | Software Update | Update Graphical Software | | | | | |
| | | Update HW processors Software | | | | | |
| | | Update Media Content | | | | | |
| | Calibrate Values | Analog Shutter Calib. | 0-255 | | | | |
| | | Tilt Calibration | 0-255 | | | | |
| | Generate Log File | | | | | | |
| | Remote Servis | Set Service IP Address | Remote IP Address | 077.084.000.224 | | | |
| | | | Remote Port | 08283 | | | |
| | | | Service Port | 08290 | | | |
| | | Set Default Gateway | Gateway Address | 002.001.001.001 | | | |
| | | Start Remote Service | | | | | |

| Menu Level 1 | Menu Level 2 | Menu Level 3 | Menu Level 4 | Menu Level 5 | Menu Level 6 | Menu Level 7 | Menu Level 8 |
|--------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|
| Fixture Off | | | | | | | |

14. Operating modes

Before operating the DigitalSpot 3000 DT II from a DMX 512 controller, you need to define the source of DMX data, which may be:

DMX 512 - data is transmitted over standard DMX cables. Set a valid DMX start address, which is defined as the first channel from which the DigitalSpot 3000 DT II will respond to the controller.

Please, be sure that you don't have any overlapping channels in order to control each DigitalSpot 3000 DT II correctly and independently from any other fixture on the DMX data link.

For DMX start address setting, please refer to the instructions under "Fixture Address".

ArtNet - data is transmitted over Ethernet network using Artnet protocol. Set an IP address, Artnet Universe and Artnet Subnet.

For Artnet setting, please refer to the instructions under "Fixture Address".

15. Control menu

The control panel situated on the front panel of the base offers several features. You can simply set the fixture addresses, configure the fixture, run test, make a reset and also use many functions for setting fixture behaviour.


Control elements on the control board:

[RNS] encoder wheel-moves between menu items on the same level, scrolls between values.

[ESC] button-leaves menu without saving changes

[ENTER] button-enters menu, confirms adjusted values and leaves menu

**After switching the fixture on,
the display shows the initial screen:**

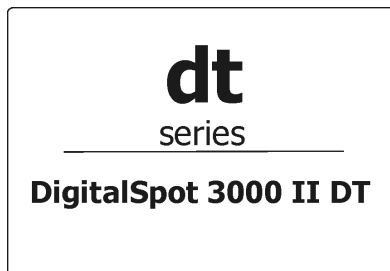

**than press [ENTER] and
the display shows address:**

| ARTNET MODE | |
|------------------|--------------------------------|
| IP Address: | Fixture ID: 2.1.1.50 |
| Artnet Universe: | 0 |
| Artnet Subnet: | 0 |
| DMX Address: | 001 |

The main menu of the control panel is accessed by pressing the [ENTER] button. To browse through the menu, rotate the [RNS] wheel. To select a function or submenu, press the [ENTER] button.

15.1 Fixture Address

Use this menu to set the DMX address.

DMX Setting --- Select this submenu to set the DMX start address.

Set DMX Address - sets DMX address. After selecting desired DMX address confirm setting by using the function "Activate DMX Mode":

Activate DMX Mode - Data is received from DMX input.

Artnet Setting --- Select this submenu to set the fixture for Ethernet operating.

Set IP Address - Select this submenu to set an IP address and NetMask.

The IP address is the Internet protocol address and uniquely identifies any node (fixture) on a network. There can't be 2 fixtures with the same IP address on the network!

Default IP Address -Preset IP address.

Custom IP Address - The option enables edit all numbers of the IP address.

To set the custom IP address:

1. Select „Custom IP Address” and press the [ENTER].
2. Use RNS wheel to set the first number of the IP address
3. Press the [ENTER] to move on the second number of the IP address
4. Repeat steps 2 and 3 for the third and fourth number of the IP address.

If you want to return back on the previously edited number, press [ESC].

The same way you can set the Netmask Address.

Gateway Address –Option allows to set gateway address.

Set ArtNet Universe - Select this submenu to set a Universe (0-15). The Universe is a single DMX 512 frame of 512 channels.

Set ArtNet Subnet - Select the option to set Ethernet subnetworks to which the fixture belongs (0-15)

After setting all Artnet parameters confirm setting by using the function "Activate Artnet Mode":

Activate Artnet Mode - Data is received from the Ethernet input.

15.2 Fixture information

DMX Values --- Select this item to read DMX values of each channel received by the fixture.

Media Disk Space Usage --- Select the item to read information about the hard disk space.

Free Disk Space --- Select the item to show a size of free hard disk space (MB).

Used Disk Space --- Select the item to show a size of used hard disk space (MB).

Software Version --- Select this function to read the software version of the fixture modules:

Graphic Engine - a graphic software of the fixture.

IC1 Motherboard - a processor IC1 on the main board in the fixture base (the IC1 controls communication, DMX, fans, temperatures).

IC2 Motherboard - a virtual EEPROM.

IC3 Motherboard - a processor IC3 on the main board in the fixture base (the IC3 controls pan, tilt, LEDs).

IC1 Headboard - a processor IC1 in the fixture head (the IC1 controls focus and shutter).

GPU Info --- Select the item to read information about graphics processing unit, drivers and type of the projector.

Product IDs --- Select the function to read the MAC address and the RDM UID code.

15.3 Personality

Use this menu to modify DigitalSpot 3000 DT II operating behaviour.

Pan Reverse --- Select this function to invert the pan movement.

Tilt Reverse --- Select this function to invert the tilt movement.

Lamp Presetting --- Select this menu to change the lamp “behaviour”.

Lamp On/Power On - Select this function to turn the projector’s lamp on automatically after switching the fixture on.

Lamp Off via DMX - Select this function to switch the lamp off via DMX.

Lamp On if DMX Present - This function allows you to strike the lamp automatically after 26 seconds if a DMX signal is present on the data link.

Lamp Off if not DMX - This function allows you to switch off the lamp automatically after 2 minutes if a DMX signal is missing on the data link.

Display Adjusting --- This function allows you to change the display settings:

Display Permanent On - This function allows you to keep the display permanent on or to turn it off after 5 minutes of inactivity of control buttons (wheel)

Display Orientation - Select this function to adjust the display orientation:

Normal orientation - A standard display orientation.

Rotated Orientation - Inverts the display by 180°.

Pan/Tilt Feedback --- This function allows to return the moving head to the required pan/tilt position after changing the position by an external force (e.g. by a stroke).

Be careful, the Pan/Tilt Feedback OFF is not the standard operation and the head of the fixture can be damaged!

Note: If the feedback was switched off, the pan/tilt position is changed by an external force and the feedback is switched on again, the moving head might not be synchronized with the DMX signal. You have to make a reset in order to synchronize the moving head with the DMX signal.

Pan/Tilt mode --- Use this menu to set the character of the pan/tilt movement.

Time mode --- Pan and tilt will move with different speeds and they will come at the same time to the end point (pan and tilt sets its optimal speed).

Speed Mode --- Pan and tilt will move with the same speed as adjusted by the channel 5 (Pan/Tilt speed). E.g. pan will come to the end point and wait for tilt, which has longer track.

Active Blackout while: --- Use this function if you wish to close the light output during the following events:

During Movement correction --- Select this function to enable the blackout during the head movement correction (if the moving head lost its right pan/tilt position for a short moment).

Pan/Tilt Moving --- This function closes the light output during pan/tilt changing.

Projection Presetting --- Use this menu depending on the installation location of the fixture:

Ceiling Projection --- When this function is "On", a picture is top (bottom and left) right reversed. This function enables to project the image from a ceiling mounting of the DigitalSpot 3000 DT II.

Rear projection --- When this function is "On", picture is left (right) reversed. This function enables to project the image to a rear projection screen.

Projector Refresh Rate --- Use this menu to change the output refresh rate of the DigitalSpot's projector from 60Hz to 50 Hz.

The function should be used in cases when output of DigitalSpot 3500DT is captured by the video cameras with a fixed 50Hz refresh rate and they are not allowed to adjust embedded 60Hz picture refresh rate of the DigitalSpot, in these cases some flickering would be visible in an image.

Note. All fixtures used in a show must have the same projector refresh rate setting.

DMX protocol --- Use this menu to set desired number of gobo/video layers and DMX channels.

Set DMX mode --- the item allow you to select a desired number of control channels

No Server --- the fixture uses first 17 control channels of DMX chart (1-17).

2 Layers --- 108 control channels (1-108).

3 Layers --- 136 control channels (1-136).

Protocol Version --- the item allow you to select a desired protocol version.

Gobo Selection Mode --- Use this menu to select desired sorting of media files in media subfolders.

Alphabetical Order --- The media files are assigned to DMX values in an alphabetical order.

Numerical projection --- The media files are assigned to DMX values in a numerical order.


Microphone Sensitivity --- Select this item to adjust the microphone sensitivity from 1 (maximum) to 20 (minimum).

Verbose Mode --- Use this menu to hide messages displayed on the screen when you are changing some setting on the **Power/Special functions** channel (e.g. Rear projection on, Rear projection off.....) .

Verbose Mode 0 --- Generated messages are hidden.

Verbose Mode 1 --- Generated messages are visible on the projection screen.

DMX Verbose Mode --- It displays information regards picture at the bottom left corner of the image (channel, name, DMX value):

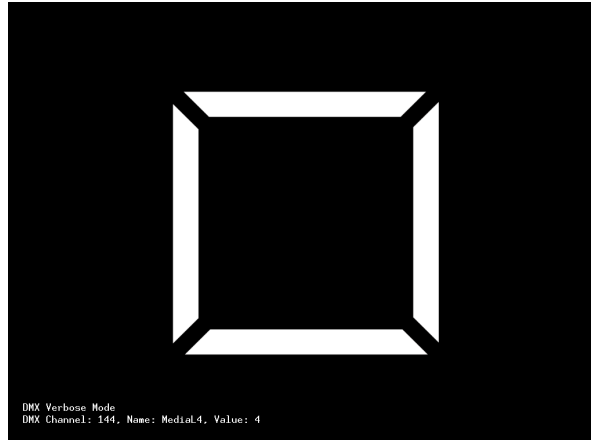

Synchro Verbose Mode --- used for debugging of video synchronization.

Default Settings --- Select this option to set default values or to remove user's content in the fixture.

Set Default Values --- Select this option to reset all fixture personalities to the default values.

Remove User Media Content --- The item deletes all user media contents except the factory media content.

15.4 Lamp On/Off

Use this option in order to switch on/off the projector's lamp. Do not use the projector continuously for 24 hours or more. If using the projector continuously for long periods, turn it off and leave it for one hour at least once during a 24 hour period.

15.5 Manual control

Manual DMX control --- Select this menu to control all channels by the control elements on the control board.

Video Input Selection --- This menu enables to select desired video input:

- Internal input
- External SVIDEO Input

15.6 Stand-alone setting

Use this menu to set options for a stand-alone mode as a selection of the playing program, programming and modifying current programs.

Play program --- Select this menu to run a built-in program or 10 freely-programmable programs in a loop.

Test Program In Loop --- The option starts built-in test program.

Program 1 In Loop

:

Program 10 In Loop

} These options start user defined programs

Every program can run in two modes:

Normal - This mode uses pan/tilt movement and therefore is good for a dynamic projection.

Static - This mode is suitable for projections on the wall, ceiling or ground without any head movement. By means of items Pan, Tilt and Focus is possible to adjust moving head to the desired position.

Running program is possible to pause by pressing the [ENTER] button.

Edit Program --- Select this menu to edit or create a program. The DigitalSpot 3000 DT II has 10 freely-programmable programs, each up to 99 steps. Each program step has a step time, during which effects last in a current step.

Procedure:

1. Select the program you want to edit ("Program 1" - "Program 10") and press the [ENTER] button.
2. Select "Edit Steps" menu and press [ENTER] button.
3. Select the desired program step ("Step 01" - "Step 99") and press [ENTER] button.
4. Select the desired item and press the [ENTER] button. Now you can edit a DMX value of selected item by the [RNS] encoder wheel
5. Press the [ENTER] to save adjusted value.
6. Select another effects (channels) and repeat steps 4 and 5.
7. Select "Save" or "Save and Copy" and press the [Enter] to confirm all adjusted values in a current step:

"Save" - saves the current prog. step

"Save and Copy" - saves and copies the current prog. step to the next prog. step.

Option "**Snap DMX**" - inserts current values from DMX to all effects (channels). It is very useful function, you do not have to adjust all effects to desired positions, all values are loaded from DMX.

8. Go to the next prog. step, press the [ENTER] and repeat this procedure (steps 4 and 7).

After creation of the program, you can simply reduce its length (by changing the start/end step) using either "**Start Step**" item or "**End Step**" item.

Music Trigger --- Select this item to enable the sound control of the running programs via the built-in microphone.

Play DMX Program --- Select this menu to run one of 10 programs which have been recorded via the menu "**Record DMX program**". By pressing the [ENTER] you can switch the running program into the 3 following modes: Pause, Playing, Playing in Loop. The current program step is shown on the fixture display:

| PLAYING DMX PROGRAM |
|------------------------------|
| Playing program: dprg_02.csv |
| Step: 27 |
| Time: 00:00:02.632 |
| Pause |

| PLAYING DMX PROGRAM |
|------------------------------|
| Playing program: dprg_02.csv |
| Step: 27 |
| Time: 00:00:02.632 |
| Playing |

| PLAYING DMX PROGRAM |
|------------------------------|
| Playing program: dprg_02.csv |
| Step: 27 |
| Time: 00:00:02.632 |
| Playing In Loop |

Record DMX Program --- The menu allows to record DMX data that receives the fixture and then replay them again via the menu "**Play DMX program**". There is a list of 10 programs for recording with unlimited steps each. Select desired program number and press the [ENTER] to enter the recording screen.

| RECORDING PROGRAM |
|--------------------------------|
| Recording program: dprg_02.csv |
| Step: 11 |
| Time: 00:00:01.234 |
| Recording |

The data record starts after changing any receiving DMX value. To stop recording, press [ENTER] or [ESC].

Recorded DMX program has the name **dprg_xx.csv** where the xx means the number of the program (e.g. dpr_01.csv, dprg_02.csv...) and is stored in the folder "Programs" accessible by means of FTP. The format of this file is a plain text that allows additional user editing. The first line of the file includes all DMX channels with their starting DMX values and the next lines display changes of DMX values of channel effect and a relevant time of the changes.

Note: If you select the program which contains previously recorded data, the data will be overwritten without warning.

Preset playback --- The menu allows to select a program (or a DMX program), which will be played automatically in a loop after switching the fixture on.

Fixture Off Timer --- The menu offers to control the time during which the fixture is on and, for example, plays the recorded program. The adjusted time period is counted from starting the fixture.

Timer Deactivated --- The item disables the "Fixture Off Timer" option.

Timer Activated --- Activate timer is signalled by the small icons at the top right corner of the screen.

Set Timer Hours --- The item enables to set hours for the "Fixture Off Timer".

Set Timer Minutes --- The item enables to set minutes for the "Fixture Off Timer".

15.7 Preview mode.

This item enables to display the image, going from the projector, on the fixture's display.

Note: If this function is called out, the video sequence from projector will not be played continuously because the fixture's processor has to display this sequence twice at the same time (on the wall and on the display)

15.8 Reset functions

The DigitalSpot 3000 DT II can be reset totally or in function modules. Select a desired function to run a reset:

Reset Graphics Engine --- This function resets a graphics engine.

Reset Pan/Tilt System --- This function resets a pan/tilt movement.

Reset Focus/Shutter system --- This function resets a focus module.

Reset All systems --- This function enables you to return all fixture's effects to their standard positions.

15.9 Service menu

Use this menu to read useful information about the fixture.

Power On Time - Select this submenu to read the number of operation hours of the fixture.

Total Hours - The function shows the total number of the operation hours since the DigitalSpot 3500 has been fabricated.

Resetable Hours - The function shows the number of the operation hours that the DigitalSpot 3500 has been powered on since the counter was last reset. In order to reset this counter to 0, press [ENTER] twice.

Lamp On Time - Select this submenu to read the number of the operation hours with the projector lamp on.

Total Hours - The function shows the total number of the operation hours with the lamp on since the DigitalSpot 3500 has been fabricated.

Resetable Hours - The function shows the number of the operation hours with the lamp on that the DigitalSpot 3500 has been powered on since the counter was last reset. In order to reset this counter to 0, press [ENTER] twice.

Lamp Strikes - Select this submenu to read the total number of the projector lamp strikes.

Total Hours - The function shows the total number of the lamp strikes since the DigitalSpot 3500 has been fabricated.

Resetable Hours - The function shows the number of the lamp strikes since the counter was last reset. In order to reset this counter to 0, press [ENTER] twice.

Fixture Temperatures --- Select this submenu to read the temperatures of the projector:

Current - Select this function to read the current temperatures of the fixture interior.

Maximum nonresetable - The function shows the max. temperatures of the fixture interior since the DigitalSpot 3000 DT II has been fabricated.

Maximum resetable - The function shows the maximum temperatures of the fixture interior

since the respective counter was last reset. In order to reset desired counter to 0, press [ENTER] twice.

Measuring points of temperatures:

Pan /Tilt Board. [°C]temperature on the PCB in the fixture base

Led Panel Board [°C].....temperature in the LED module

Air Filters --- Regular cleaning of the air filters is very important for the DigitalSpot 3000 DT II life and performance. Buildup of dust, dirt and fog fluid residues reduces the fixture's light output and cooling ability. The two items of menu help you to keep cleaning period of the air filters.

Time To Cleanup Filters - The option allows you to read the time which remains to cleaning air filters. Expired time period is signalized by a negative mark at the time value and a warning icon (triangle) on the display with the following message:

"Please , Clean Up Airs Filters."

Clean the filters and reset this menu item (by pressing the "Enter" button twice while this menu is highlighted)

Set Cleanup Timer - Cleaning schedule for the fixture depends on the operating environment. It is therefore impossible to specify accurate cleaning interval. This function allows you to change the cleaning interval of the air filters. This "reminder" value is 50 hours and it is set as default. Inspect fixture within its 50 hours of operation to see whether cleaning is necessary. If cleaning is required, clean all air filters and change the value in this menu on acceptable level. Min. level is 10 hours, max. is 300 hours.

15.10 Special functions

Use this menu for special services like remote servis or software update.

Regenerate Thumbnails --- Use the menu to manage thumbnails behaviour.

Set Thumbnail size - The menu item allows set the size of the thumbnail: 50-min.size, 300-max.size.

Regenerate Thumbnails - By pressing the "Enter" button the refreshing process of gobo/video thumbnails starts. This action should be performed if you have changed gobo/video files and the fixture was not switched off after the change , otherwise the refreshing process runs automatically at starting up of the DigitalSpot 3000 DT II.

FTP Server --- The FTP (File Transfer Protocol) server is used to transfer files between the fixture and a PC over an ethernet network by means of FTP client running on your PC. The "FTP Server" menu allows control of an access to the fixture's folders.

Set Account - The option allows you to protect the access to the fixture folders by setting the name and password. The same data must be entered in FTP terminal running on your PC.

Allow Anonymous - If this option is set "Yes" ,no password is required in FTP terminal but the user name may be "ftp" or "anonymous".

HTTP Access --- This menu enables to set access privileges which are used at entering to the Remote control program via your WWW browser.

Set Account - The option allows you to protect the access to the Remote control program by setting the name and password. The same data must be used in the Remote control program running on your PC or a light control console.

Allow Anonymous - If this option is set "Yes" ,no password is required at entering to the Remote control program.

USB Data Synchronization --- The menu allows transfer of media files (images, videos) and software files between the USB stick and fixture's hard disk and related operations.

The USB stick must contain the following folders structure:

Top level folder

Media
 000
 001
 002
 :
 240
 Programs
 Update
 Log

:

To create the folders structure mentioned above, use the option "**Init Flash Disc**". After creating folders structure on the USB stick you may load/download files into folders/subfolders. Maximum number of media files in one Media subfolder is 240. **Subfolders 000-020 are reserved for default images/videos and cannot be changed (you cannot copy media files into these subfolders).**

To upload a file/folder from the USB stick to the Media folder in the fixture:

1. Insert the USB stick to the USB port, select "**USB Data Synchronize**" from the menu and press the [ENTER], "**USB1**" or "**USB2**" (depends on used USB port) is displayed on the screen.
2. Press the [ENTER], select "**Open**", press the [ENTER].
3. Select "**Media**", press the [ENTER],
4. If you want to copy all Media folder (including subfolders 000-240), select item "**Synchronize to Fixture**". If you want to copy only one subfolder (e.g. 035), select "**Open**", press the [ENTER], select desired subfolder from a list of subfolders, press the [ENTER] and select option "**Synchronize to Fixture**". If you want to copy only one file, select "**Open**" and press the [ENTER]. Select the desired file, press the [ENTER] and confirm a question in a dialogue box.

To download folder from the Media folder to the USB stick.

1. Insert the USB stick to the USB port, select "**USB Data Synchronize**" from the menu and press the [ENTER]. "**USB1**" or "**USB2**" (depends on used USB port) is displayed on the screen.
2. Press the [ENTER], select **Open**, press the [ENTER].
3. Select "**Media**", press the [ENTER],
4. If you want to copy all Media folder from the fixture (including subfolders 000-240), select item "**Synchronize from Fixture**". If you want to copy only one subfolder (e.g. 035), select "**Open**", press the [ENTER], select desired subfolder from a list of subfolders, press the [ENTER] and select option "**Synchronize from Fixture**". If you want to copy only one file, select "**Open**" and press Enter. Select the desired file, press the [ENTER] and confirm a question in a dialogue box.

Software Update --- This menu allows to update graphical software or hardware processors software.

You have to download the latest version of the DigitalSpot 3000 DT II software from ROBE website to your hard disk and then use either Ethernet network or the USB stick to move this file to the relevant folder in the DigitalSpot 3000 DT II.

Copying software update file from the USB stick to the fixture:

1. Insert the USB stick to the USB port, select "**USB Data Synchronize**" from the menu and press Enter. There is an **USB1** or **USB2** (depends on used USB port) displayed on the screen.
2. Press Enter, select **Open**, press the [ENTER].
3. Select **Update** and press the [ENTER]. If you want to upload whole Update folder to the fixture, select option "**Synchronize to Fixture**".

If you only want to copy one or more files to the fixture, select option "**Open**" and press the [ENTER]. Select desired file, press the [ENTER] and confirm a question in a dialogue box.

After copying update file to the fixture, the desired software update will be activated by confirming the follow items:

Update Graphical Software - starts update of the graphical software.

If the message **Please Update HW Processors in Menu "Special Functions"** will appear

after updating, run update of the hardware functions.

Update HW processors Software - starts update of hardware functions like pan, tilt, focus...etc.

Update Media Content - starts update of the factory media folders 00-20 (pictures, videos)

Calibrate Values --- This menu serves for a fine calibration of effects.

Analog Shutter - allows ine calibration of a mechanical shutter (projector lamp has to be turned on).

Tilt Calibration -allows fine calibration of a tilt.

Generate Log File --- This item starts generating a log file. The file is saved in a folder "Log" on the hard disk. This file records events in a certain scope in order to provide an audit trail that can be used to diagnose problems of the fixture.

Remote servis --- This menu provides necessary items for remote servis of the DigitalSpot 3000 DT II.

15.11 Fixture Off


This function shuts down the fixture. The projector lamp is switched off as first and after cca 20 seconds is switched off the fixture.

16. Keystones

16.1 Global keystone parameters

If an image is output from the DigitalSpot 3000 DT II at an angle the image may be skewed. Eight keystone channels (*KeyStone Top Left X*, *KeyStone Top Left Y*, *KeyStone Top Right X*, *KeyStone Top Right Y*, *KeyStone Bottom Right X*, *KeyStone Bottom Right Y*, *KeyStone Bottom Left X*, *KeyStone Bottom Left Y*) adjust the image shape. It is possible to control each of the four corners of the image and reshape it.



Default DMX value is 0, it means that no keystone correction has been used.

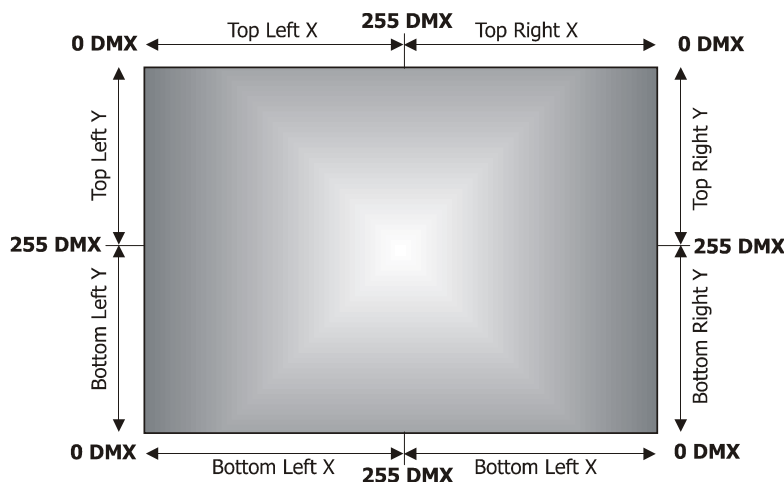

Setting all keystone values to 0 will place all four corners of the image at the four corners of the projector output. The keystone values can also be used to create interesting skewing effects.

For the picture merging are important both the **KeyStone X-ratio** and **KeyStoneY-ratio** channels for correction of the image distortion caused by placing projectors at different distances from the final image:

use channel *KeyStone X-ratio* for correction

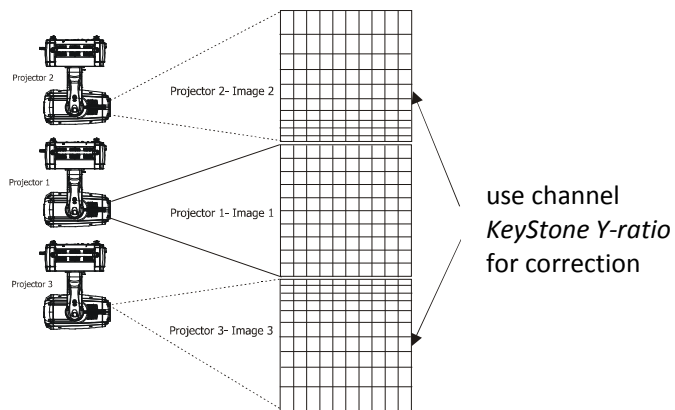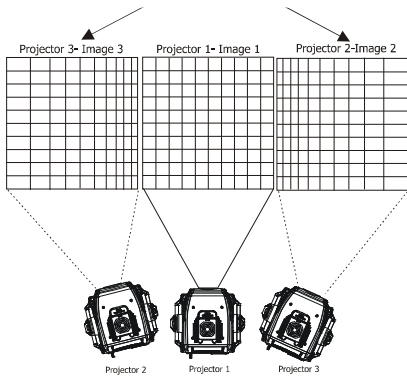

If the channel **Global effect 1 - Parameter 3** is set to the range of 171-180, the aspect ratio of an actual image is displayed in the image. The feature is activated when the Picture Merging is active only.

16.2 Layer keystone parameters

By the global keystone parameters stated above you can control each of the four corners of the graphics output individually to reshape your image to a form that is projected correctly.

By the layer keystone parameters you can control all four corners of the image at the same time. With these parameters you can create the same skewing and shape effects like with the global keystone parameters but on each gobo layer.

Major use of these effects is in a situation where the gobo mask is applied on a layer and you need to adjust a mask shape onto some object on the scene. More important is adjusting of the inner part of the image on the layer than the outer shape of the graphics output.


Characteristic case is a composition of 2 layers: the layer 1, where is applied a picture of the landscape and the layer 2, where is a gobo mask selected (see picture below).




To adjust desired image shape you can use the following (keystone) parameters on the gobo layer 2:

1. Layer zoom in X and Y direction.

The channels **Gobo zoom X coarse** and **Gobo zoom X fine** allow 8-bit/16-bit zooming in X-direction.

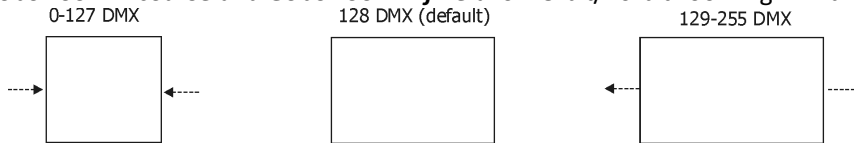


The channels **Gobo zoom Y coarse** and **Gobo zoom Y fine** allow 8-bit/16-bit zooming in Y-direction.

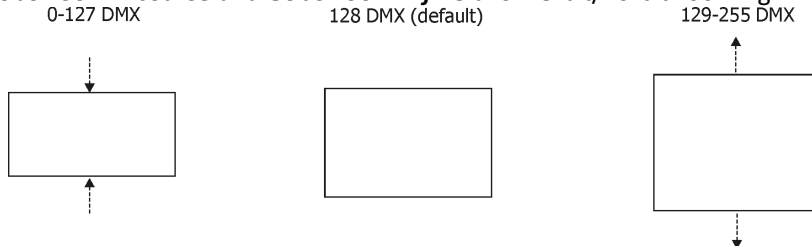




2. Gobo position in X and Y direction.

The channels **Gobo position X coarse** and **Gobo position X fine** allow 8-bit/16-bit positioning in X-direction.

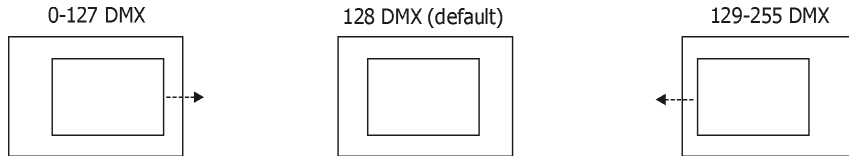


The channels **Gobo position Y coarse** and **Gobo position Y fine** allow 8-bit/16-bit positioning in Y-direction.

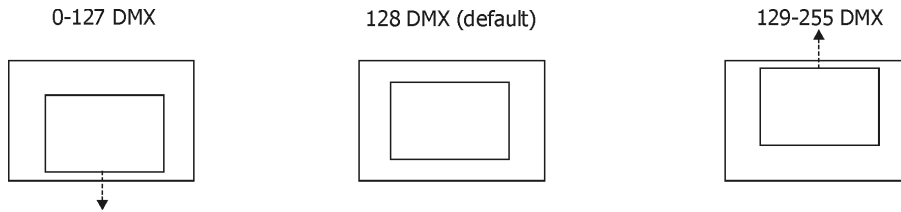


3. Layer skewing along X and Y axis.

On the channel **Gobo effect 1 selection** adjust a DMX value=150 and using the control parameters 1 an 2 you can skew the image in either X or Y axis.

The channel **Gobo effect 1 – Parameter 1** skews the image in X-axis.

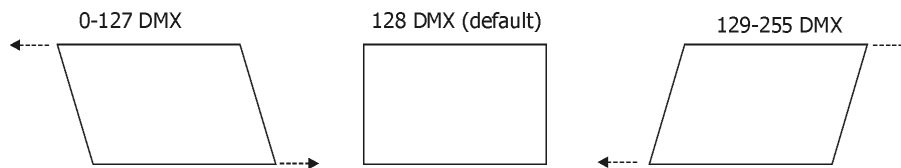


The channel **Gobo effect 1 – Parameter 2** skews the image in Y-axis.

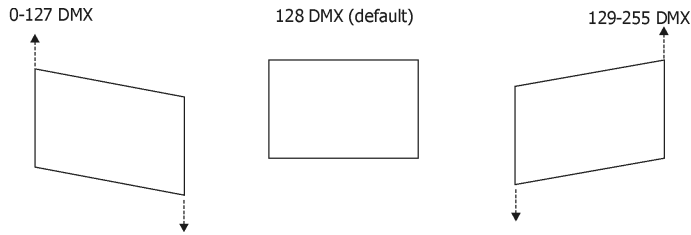

4. Layer Squeezing/Stretching along X and Y axis.


On the channel **Gobo effect 1 selection** adjust a DMX value=150 and using the Control Parameters 3 you can squeeze the image in X axis.


The channel **Gobo effect 1 – Parameter 3** squeezes/stretches the image edges in Y-axis.

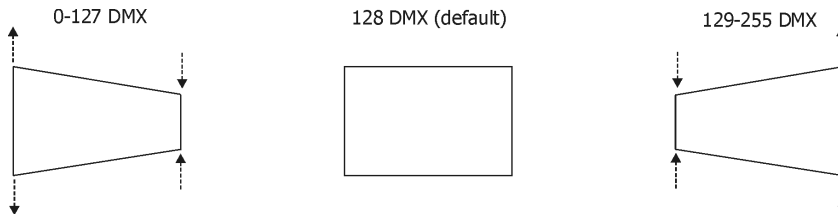

On the channel **Gobo effect 2 selection** adjust a DMX value=150 and using the control parameters 1 you can squeeze the image in Y axis. Note. To allows this effect, the channel **Gobo effect 1 selection** has to be set to DMX=150.

The channel **Gobo effect 2 – Parameter 1** squeezes/stretches the image edges in X-axis.

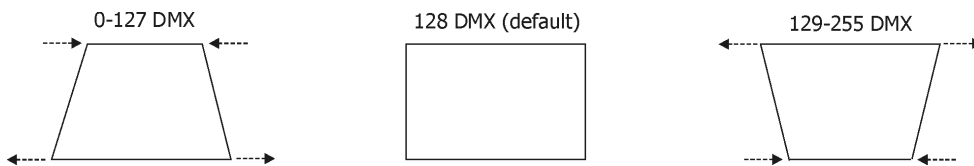

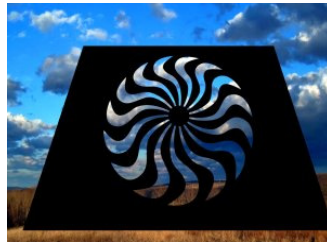


5. Image X-ratio and Y-ratio.



On the channel **Gobo effect 2 selection** adjust a DMX value=150 and the second and third parameter control image X-ratio and Y-ratio.

Note. To allows this effect, the channel **Gobo effect 1 selection** has to be set at DMX=150.


The channel **Gobo effect 2 – Parameter 2** compresses or expands the image in X- axis

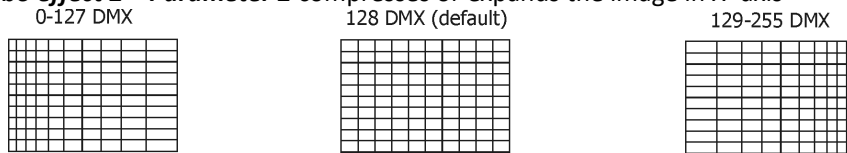

The channel **Gobo effect 2 – Parameter 3** compresses or expands the image in Y- axis.

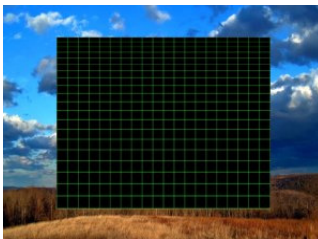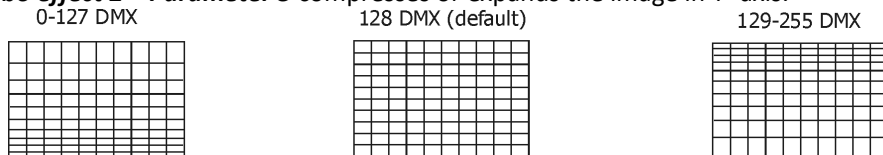

After shaping the image by means of the parameters stated above, you can apply the global banner effects on the whole graphics output and this final image should appear for instance like this:

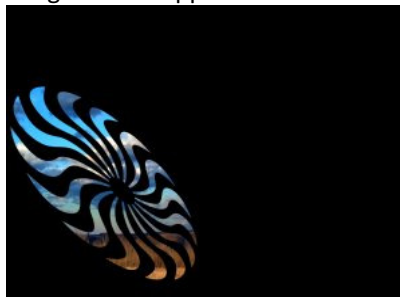


17. In Frame and Out Frame parameters


You can select any segment of a video file for playback by assigning parameters for In Frame (start point) and an Out Frame (end point) as pictured below.

The In Frame parameter corresponds to a 16-bit DMX value equal to a starting point for the playback segment of the selected video file. The Out Frame parameter corresponds to a 16-bit DMX value equal to an end point for the playback segment of the selected video file.


1. Assigning the In Frame DMX values to 0 and Out Frame DMX values to 255 you will playback the entire video file.

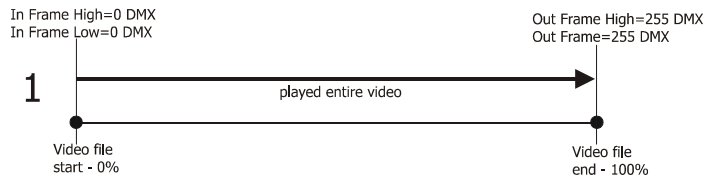

2. You can create a segment anywhere between the beginning and the end of the video file.

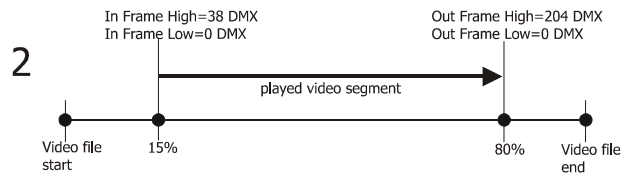

3. It is possible to skip a segment in the video file by setting the In Frame to a point following the Out Frame value.

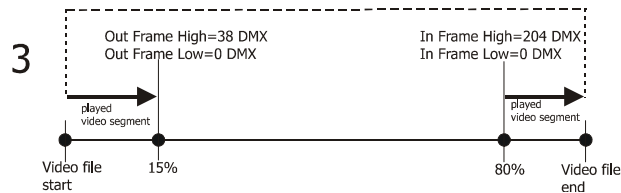

18. Video Control

The channel **Gobo control** defines how the current layer will be 'composed' with the previous layers and the playback options in each mode. The Digital Spot 3500 supports the following options:

Copy mode (0-17 DMX): In this mode, the pixels of the layer are written on top of the previous layers.

Addition mode (20-37 DMX): In this mode, the pixel values of the current layer are added to the ones of the previous layers. This means that "dark" pixels in the current layer image won't alter the pixels that are underneath while "light" pixel will saturate the image underneath.

Subtraction mode (40-47 DMX): In this mode, the pixel values of the current layer are subtracted from the pixel value in the underlying layers. Dark pixel from the current layer won't alter the pixel of the layers underneath while light pixel will darken them.

Multiplication mode (60-77 DMX): In this mode, the pixels from the current layer will be multiplied by the pixels of the underlying layers. For a pixel to appear bright in the output, the equivalent pixel of the current layer and the underlying layer needs to be bright. If any of the layers has a dark pixel, the result will be dark.

Minimum mode (80-97 DMX): This mode takes the pixel that is the darkest between the current layer and the layer underneath

Maximum mode (100-117 DMX): This mode takes the pixel that is the brightest between the current layer and the layer underneath.

The playback options:

| <u>DMX value</u> | <u>Playback options</u> | <u>Meaning</u> |
|------------------|--|--|
| 0. | Play forward continuously if dimmer >0 | Plays the video segment from In Frame point to Out Frame point, continuous looping. The dimmer value has to be greater than 0. |
| 1 | Play forward once if dimmer >0 | Plays the video segment from In Frame point to Out Frame point and holds on the last frame. The dimmer value has to be greater than 0. |
| 2 | Pause | Stops playback of video file at the current playing |
| 3 | Play forward in continuous loop | Plays the video segment from In frame point to Out Frame point, looping continuously frame |
| 4 | Play forward once | Plays the video segment from In Frame point to Out Frame point and holds on the last frame |
| 6 | Scrub (display) the selected In Frame | Displays the frame which has been defined by the In Frame value. |
| 7 | Scrub (display) the selected Out Frame | Displays the frame which has been defined by the Out Frame value. |

19. Playback speed

The **Playback speed** channel controls the speed of video playback at selected playback options.





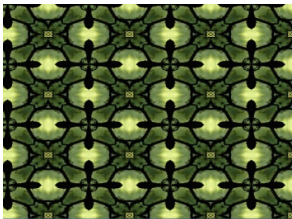

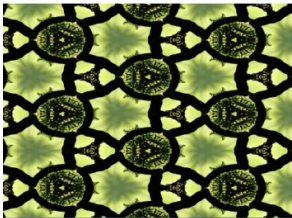




| <u>DMX value</u> | <u>Playback speed</u> | <u>Meaning</u> |
|------------------|------------------------------------|--|
| 0 or 128 | Normal speed | Plays back video files at the original record. speed |
| 1-127 | Slow speeds from slowest to normal | Plays back video files at an increasing speed, from the slowest to the original recorded speed |
| 129-255 | Faster than normal to fastest | Plays back video files at an increasing speed, from faster than normal to the fastest |



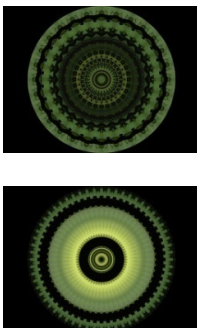
20. Graphic effects

There are two gobo effect channels on each gobo layer (**Gobo effect 1 selection**, **Gobo effect 2 selection**), which offer amount of effects that can be applied to the current running picture/video. Each effect channels have three control channels - **Parameter 1**, **Parameter 2**, **Parameter 3** – which allow to change the behaviour of selected effect (e.g. speed, amount...)

20.1 Kaleidoscopic effect

The kaleidoscopic effect section on the channel **Gobo effect 1 selection** allows selection of the static or dynamic mode of the kaleidoscopic effect according to the desired mosaic segment.

| DMX value | | Segment of mosaic | Example | Source picture |
|-------------|--------------|---|--|---|
| Static mode | Dynamic mode | | | |
| 100 | 101 | Square  |  |  |
| 102 | 103 | Right triangular  |  | |
| 104 | 105 | Isosceles triangular  |  | |
| 106 | 107 | Triangular 1  |  | |
| 108 | 109 | Triangular 2  |  | |
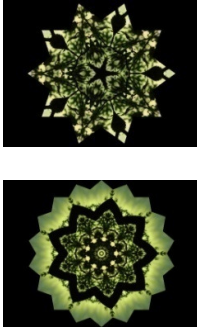
| DMX value | | Mosaic effect | Examples | Source picture |
|-------------|--------------|---|--|---|
| Static mode | Dynamic mode | | | |
| 110 | 111 | <p>Centered Kaleidoscope (rough)</p> <p><i>Note: As the effect does not cover all projection are, the image from the lower layer can be displayed at the sides of the effect.</i></p> <p><i>E.g. Centered Kaleidoscope effect has been selected on the layer 4 and the picture on the layer 3 is visible at the sides of the effect.</i></p> |  |  |
| 112 | 113 | <p>Centered Kaleidoscope (fine)</p> <p><i>Note: As the effect does not cover all projection are, the image from the lower layer can be displayed at the sides of the effect.</i></p> <p><i>E.g. Centered Kaleidoscope effect has been selected on the layer 4 and the picture on the layer 3 is visible at the sides of the effect.</i></p> |  | |

Meaning of the control channels depends on the kaleidoscope mode which has been selected:

Static mode.

Gobo effect 1- Parameter 1: Density of mosaic segments

| DMX value | Function |
|-----------|--|
| 0 - 255 | Density of mosaic segments from large (0 DMX) to small (255 DMX) |

If the effect “Centered Kaleidoscope (rough)” is selected, meaning of the **Parameter 1** is the following:

| DMX value | Function |
|-----------|---|
| 0 - 255 | Shape (diamond (0 DMX) → circle (255 DMX)) and a number of mirroring planes |

Gobo effect 1- Parameter 2: Content of segments-coarse

| DMX value | Function |
|-----------|---|
| 0 - 255 | Coarse adjustment of the segments content |

Gobo effect 1- Parameter 3 : Content of segments-fine

| DMX value | Function |
|-----------|---|
| 0 - 255 | Fine adjustment of the segments content |

Dynamic mode.

Gobo effect 1- Parameter 1: Density of mosaic segments

| DMX value | Function |
|-----------|--|
| 0 - 255 | Adjusting density of mosaic segments from large (0 DMX) to small (255 DMX) |

If the effect “Centered Kaleidoscope (fine)” is selected, meaning of the **Parameter 1** is the following:

| DMX value | Function |
|-----------|--|
| 0 - 255 | Shape and a number of mirroring planes |

Gobo effect 1- Parameter 2: Size and pulsation of the segments content

| DMX value | Function |
|-----------|--|
| 0 - 128 | Size of segments content from small (0 DMX) to large (128 DMX) |
| 129 - 255 | Speed of segment pulsation from slow (129 DMX) to fast (255 DMX) |

Gobo effect 1- Parameter 3: Movement of the segments content

| DMX value | Function |
|-----------|--|
| 0 - 127 | Backward movement of segments content from fast (0 DMX) to slow (127 DMX) |
| 128 | No movement |
| 129-255 | Forward movement of segments content from slow (129 DMX) to fast (255 DMX) |


20.2 Circular effect (Fish eye)

The effect allows to convert a picture from an oblong format to a circle format and adjust the character of the circular effect.

The circular effect can be activated on each gobo layer if you set the **Gobo Effect 1 Selection** channel to a DMX Value of 90. The **Parameter 1** of this effect changes the character of the circular effect from concave to convex. The **Parameter 2** and **Parameter 3** serve for adjusting X ratio and Y ratio of the source image. A default value for all three parameters is 128.

Control parameters:

| Control parameter | Controlled item | DMX value | Function |
|-------------------|----------------------------------|-----------|--|
| Parameter 1 | Character of the circular effect | 0-255 | concave (0) → no adjustment (128) → convex (255) |
| Parameter 2 | X-ratio of the image | 0-255 | continual adjustment |
| Parameter 3 | Y-ratio of the image | 0-255 | continual adjustment |



20.3 RGB (CMY) effects

The RGB effects section on the channel **Gobo effect 2 selection** allows to apply a variety of RGB colour swapping effects to graphic objects.

RGB subtract All Pixels (DMX value=50) – the effect reduces colour values across all pixels.

Associated control parameters:

| Control parameter | Controlled item | DMX value | Function |
|-------------------|----------------------|-----------|------------------------------------|
| Parameter 1 | Red colour element | 0-255 | no adjustment → minimum saturation |
| Parameter 2 | Green colour element | 0-255 | no adjustment → minimum saturation |
| Parameter 3 | Blue colour element | 0-255 | no adjustment → minimum saturation |

RGB add All Pixels (DMX value=51) – the effect increases colour values across all pixels.

Associated control parameters:

| Control parameter | Controlled item | DMX value | Function |
|-------------------|----------------------|-----------|------------------------------------|
| Parameter 1 | Red colour element | 0-255 | no adjustment → maximum saturation |
| Parameter 2 | Green colour element | 0-255 | no adjustment → maximum saturation |
| Parameter 3 | Blue colour element | 0-255 | no adjustment → maximum saturation |

RGB add non-black Pixels (DMX value=52) – the effect increases colour values across all pixels except black pixels.

Associated control parameters:

| Control parameter | Controlled item | DMX value | Function |
|-------------------|----------------------|-----------|------------------------------------|
| Parameter 1 | Red colour element | 0-255 | no adjustment → maximum saturation |
| Parameter 2 | Green colour element | 0-255 | no adjustment → maximum saturation |
| Parameter 3 | Blue colour element | 0-255 | no adjustment → maximum saturation |



RGB subtract/add All Pixels (DMX value=53) – the effect reduces/ increases colour values across all pixels.

Associated control parameters:

| Control parameter | Controlled item | DMX value | Function |
|-------------------|----------------------|-----------|--|
| Parameter 1 | Red colour element | 0-255 | Min. saturat. (0) → no adjustment (128) → max. saturation(255) |
| Parameter 2 | Green colour element | 0-255 | Min. saturat. (0) → no adjustment (128) → max. saturation(255) |
| Parameter 3 | Blue colour element | 0-255 | Min. saturat. (0) → no adjustment (128) → max. saturation(255) |



Swap RGB to RBG (DMX value=54) – the effect swaps green and blue colour in all pixels. Red colour remains without change.

Associated control parameters:

| Control parameter | Controlled item | DMX value | Function |
|-------------------|----------------------|-----------|---|
| Parameter 1 | Red colour element | 0-255 | No change. |
| Parameter 2 | Green colour element | 0-255 | no adjustment (0) → blue (255)  |
| Parameter 3 | Blue colour element | 0-255 | no adjustment (0) → green (255)  |




Swap RGB to GRB (DMX value=55) – the effect swaps red and green colour in all pixels. Blue colour remains without change.

Associated control parameters:

| Control parameter | Controlled item | DMX value | Function |
|-------------------|----------------------|-----------|---|
| Parameter 1 | Red colour element | 0-255 | no adjustment (0) → green (255)  |
| Parameter 2 | Green colour element | 0-255 | no adjustment (0) → red (255)  |
| Parameter 3 | Blue colour element | 0-255 | No change. |




Swap RGB to GBR (DMX value=56) – the effect swaps red to green, green to blue and blue to red colour in all pixels.

Associated control parameters:

| Control parameter | Controlled item | DMX value | Function |
|-------------------|----------------------|-----------|---|
| Parameter 1 | Red colour element | 0-255 | no adjustment (0) → green (255)  |
| Parameter 2 | Green colour element | 0-255 | no adjustment (0) → blue (255)  |
| Parameter 3 | Blue colour element | 0-255 | no adjustment (0) → red (255)  |



Swap RGB to BRG (DMX value=57) – the effect swaps red to blue, green to red and blue to green colour in all pixels.

Associated control parameters:

| Control parameter | Controlled item | DMX value | Function |
|-------------------|----------------------|-----------|--|
| Parameter 1 | Red colour element | 0-255 | no adjustment (0) → blue (255)  |
| Parameter 2 | Green colour element | 0-255 | no adjustment (0) → red (255)  |
| Parameter 3 | Blue colour element | 0-255 | no adjustment (0) → green (255)  |




Swap RGB to BGR (DMX value=58) – the effect swaps red and blue colour in all pixels. Green colour remains without change.

Associated control parameters:

| Control parameter | Controlled item | DMX value | Function |
|-------------------|----------------------|-----------|--|
| Parameter 1 | Red colour element | 0-255 | no adjustment (0) → blue (255)  |
| Parameter 2 | Green colour element | 0-255 | No change. |
| Parameter 3 | Blue colour element | 0-255 | no adjustment (0) → red (255)  |




RGB invert (DMX value=59) – the effect inverts red, green and blue colour in all pixels.

Associated control parameters:

| Control parameter | Controlled item | DMX value | Function |
|-------------------|----------------------|-----------|--|
| Parameter 1 | Red colour element | 0-255 | no adjustment (0) → full inversion (255)  |
| Parameter 2 | Green colour element | 0-255 | no adjustment (0) → full inversion (255)  |
| Parameter 3 | Blue colour element | 0-255 | no adjustment (0) → full inversion (255)  |




Invert and swap RGB to BRG (DMX value=60) – the effect swaps red, green and blue colour to inverted BRG in all pixels.

Associated control parameters:

| Control parameter | Controlled item | DMX value | Function |
|-------------------|----------------------|-----------|--|
| Parameter 1 | Red colour element | 0-255 | no adjustment (0) → full inverted blue (255)  |
| Parameter 2 | Green colour element | 0-255 | no adjustment (0) → full inverted red (255)  |
| Parameter 3 | Blue colour element | 0-255 | no adjustment (0) → full inverted green (255)  |

Invert and swap RGB to GBR (DMX value=61) – the effect swaps red, green and blue colour to inverted GBR in all pixels.

Associated control parameters:

| Control parameter | Controlled item | DMX value | Function |
|-------------------|----------------------|-----------|--|
| Parameter 1 | Red colour element | 0-255 | no adjustment (0) → full inverted green (255)  |
| Parameter 2 | Green colour element | 0-255 | no adjustment (0) → full inverted blue (255)  |
| Parameter 3 | Blue colour element | 0-255 | no adjustment (0) → full inverted red (255)  |

Colour to Alpha (DMX value=62) – the effect changes the transparency level of an image's element colour values. You can adjust the transparency of individual colours from completely transparent to full opacity using the control parameters 1, 2 and 3:




| Control parameter | Controlled item | DMX value | Function |
|-------------------|----------------------|-----------|---|
| Parameter 1 | Red colour element | 0-255 | Changes the red colour element transparency |
| Parameter 2 | Green colour element | 0-255 | Changes the green colour element transparency |
| Parameter 3 | Blue colour element | 0-255 | Changes the blue colour element transparency |

Colour to Alpha Inverted (DMX value=63) – the effect changes the transparency level of the inverse of an image's element colour values.


Associated control parameters:

| Control parameter | Controlled item | DMX value | Function |
|-------------------|----------------------|-----------|--|
| Parameter 1 | Red colour element | 0-255 | Changes the inverted red colour element transparency |
| Parameter 2 | Green colour element | 0-255 | Changes the inverted green colour element transparency |
| Parameter 3 | Blue colour element | 0-255 | Changes the inverted blue colour element transparency |

RGB scale (DMX value=68) – the effect changes the output intensity of red, green and blue colour in all pixels.
Associated control parameters:
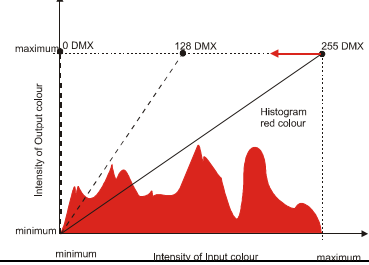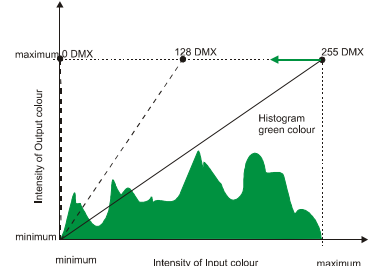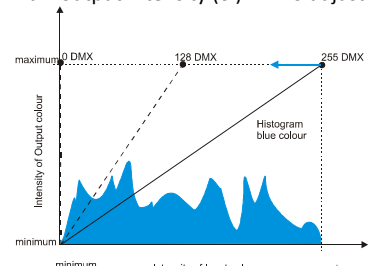
| Control parameter | Controlled item | DMX value | Function |
|-------------------|-----------------|-----------|--|
| Parameter 1 | Red colour | 0-255 | Changes the inclination of conversion line for red colour from max. output intensity (0) → no adjustment (255)  |
| Parameter 2 | Green colour | 0-255 | Changes the inclination of conversion line for green colour from max. output intensity (0) → no adjustment (255)  |
| Parameter 3 | Blue colour | 0-255 | Changes the inclination of conversion line for blue colour from max. output intensity (0) → no adjustment (255)  |

Brightness scale (DMX value=69) – the effect changes the output intensity of brightness of the picture.
Associated control parameters:
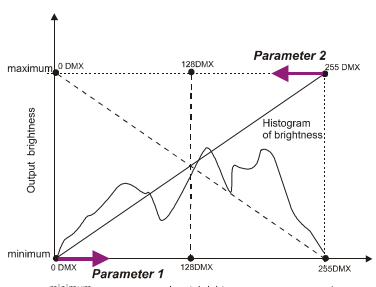
| Control parameter | Controlled item | DMX value | Function |
|---|---|-----------|---|
| Parameter 1 | Inclination of the conversion line – bottom point | 0-255 | Changes the inclination of conversion line for output brightness from no adjustment (0) → min. brightness (255) |
| Parameter 2 | Inclination of the conversion line – top point | 0-255 | Changes the inclination of conversion line for output brightness from max. brightness (0) → no adjustment (255) |
| Example:  | | | |

20.4 Iris effect on layer

The effect allows to simplify transition effects between layers and it can be activated on each gobo layer. On the effect can be applied layer's X/Y zoom, X/Y position and rotation parameters. Another possible application of the iris effect is to use it as the mask function to mask unwanted parts of the image. On the iris effect on the layer can be also applied global effects as the iris, picture merging etc.

The iris effect on layer can be activated on each gobo layer if you set the **Gobo Effect 1 Selection** channel to a DMX value of 91. The **Parameter 1** of this effect changes the size of the iris. The **Parameter 2** selects type of the iris and the last **Parameter 3** serves for selecting of several texture modes applied on the iris surface.

To see various texture modes, the channels of the X/Y zoom have to comply with a condition:

Gobo zoom X coarse > 128 and the Gobo zoom Y coarse > 128.

After that you can use the channels **Gobo position X coarse(Gobo position X fine)** and **Gobo position Y coarse(Gobo position Y fine)** to move the iris to the desired position on the layer.

Example:

Selected image on the layer 2:



Selected image on the layer 3:



+

Gobo effect selection on the layer 3:

Gobo effect 1 selection = 91 (the effected has been activated)

Gobo effect 1- Parameter 1 = 158 (iris size)

Gobo effect 1- Parameter 2 = 2 (iris type)



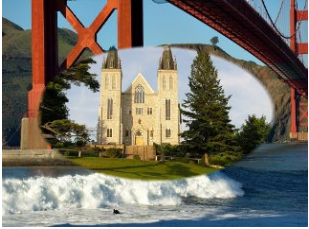

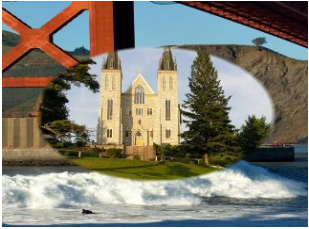
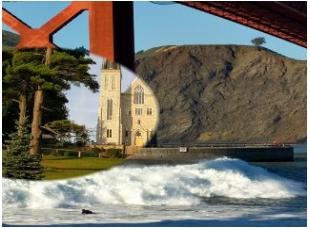
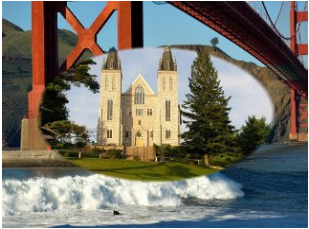
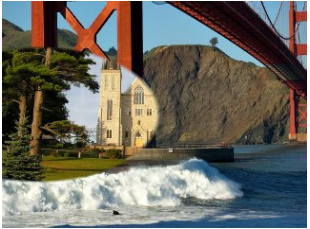

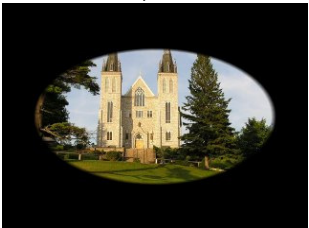


Gobo effect 1- Parameter 3 = 5 (texture mode)







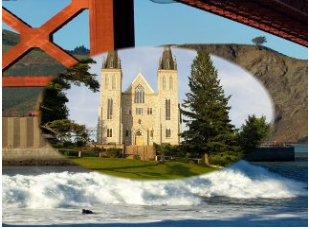





Visual effect on the projection screen when the Iris Effect On Layer is activated:



Below, there is a description of the **Parameter 3** for each group of texture modes (examples in the table are stated for X-axis only, but the Y-axis behaves in the same). The original pictures on both gobo layers are figured above.

Gobo Effect 1-Parameter 3: Texture modes applied on the iris surface

| Parameter 3 DMX value (Mode) | Zoom X | Zoom X + Position X |
|--|---|---|
| 0-9 (Mode 1) |  |  |
| 10-19 (Mode 2) |  |  |
| 20-29 (Mode 3) |  |  |
| 30-39 (Mode 4) |  |  |
| The following modes (5-8) include black mask | | |
| 40-49 (Mode 5) |  <p>Dimmer on the layer 3= 255 DMX</p>  <p>Dimmer on the layer 3= 1 DMX</p> |  <p>Dimmer on the layer 3= 255 DMX</p>  <p>Dimmer on the layer 3= 1 DMX</p> |

| Parameter 3 DMX value (Mode) | Zoom X | Position X |
|------------------------------------|---|---|
| 50-59 (Mode 6) |  <p>Dimmer on the layer 3= 255 DMX</p>  <p>Dimmer on the layer 3= 1 DMX</p> |  <p>Dimmer on the layer 3= 255 DMX</p>  <p>Dimmer on the layer 3= 1 DMX</p> |
| 60-69 (Mode 7) |  <p>Dimmer on the layer 3= 255 DMX</p>  <p>Dimmer on the layer 3= 1 DMX</p> |  <p>Dimmer on the layer 3= 255 DMX</p>  <p>Dimmer on the layer 3= 1 DMX</p> |
| 70-79 (Mode 8) |  <p>Dimmer on the layer 3= 255 DMX</p>  <p>Dimmer on the layer 3= 1 DMX</p> |  <p>Dimmer on the layer 3= 255 DMX</p>  <p>Dimmer on the layer 3= 1 DMX</p> |

The iris effect can be combined together, e.g. between layers 3-2 and 2-1.

20.5 Auto iris effect on layer

The effect behaves similar as Iris effect on layer, but it is auto- triggered by gobo changes.

The iris effect on layer can be activated on each gobo layer if you set the **Gobo Effect 1 Selection** channel to a DMX value of 92.

The **Parameter 1** of this effect changes the speed of the iris movement.

The **Parameter 2** changes the iris mask type. The value of 254 and 255 activates random iris with the following functions:

| DMX value | Function |
|-----------|---|
| 254 | Every iris opening and closing is performed with different type of iris |
| 255 | Type of iris is changed after completing the open/close cycle |

The **Parameter 3** allows to choose iris opening/closing command:

| DMX value | Function |
|-----------|---|
| 0 | Close iris |
| 1 | Open iris |
| 2 | Open and close iris at gobo change |
| 3 | Open iris at gobo change, close iris at gobo change |

A default value for all three parameters is 0.

20.6 Zoom effects on layer

Two zoom effects on each gobo layer can be applied on images if the **Gobo Effect 1 Selection** (or **Gobo Effect 2 Selection**) channel is set to a DMX value of 95 and 96. Both zoom effects can be activated by the **Gobo Effect 1 Selection** or **Gobo Effect 2 Selection** channel.

1. **Zoom In/Move XY** (DMX=95) – control of the effect is as follows:

Parameter 1 – zoom factor

Parameter 2 – movement in X-axis

Parameter 3 – movement in Y-axis

Example:

original picture



after applying the effect



2. **Zoom In/Auto Move XY** (DMX=96) – control of the effect is following:



Parameter 1 – zoom factor

Parameter 2 – speed in X-axis


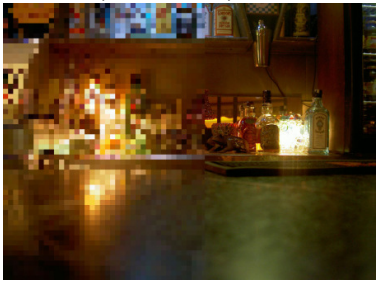
Parameter 3 – speed in Y-axis

20.7 Another graphic effects on layers


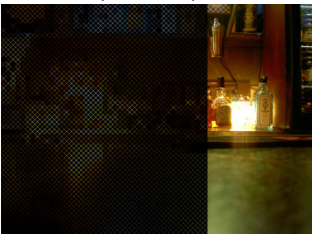
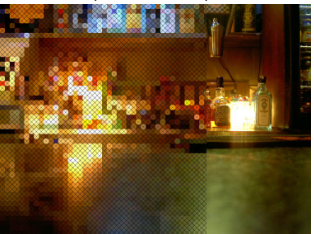
1. Swirl effect

| Activation channel | <i>Gobo Effect 2 Selection</i> (on each layer) | Default value |
|----------------------|--|---------------|
| Activation DMX value | 70 | |
| Control: Parameter 1 | Radius: 0-255DMX - min. → max | 0 |
| Parameter 2 | Angle: 0-127DMX - turning by 360° to the right 128 DMX - no change 129-255 DMX -turning by 360° to the left | 128 |
| Parameter 3 | Diagonal position: 0-255DMX – top left corner →bottom right corner 128 DMX - center of image | 128 |
| Example | Original  P1=111DMX, P2=84DMX, P3=138DMX  | |



2. Pixelation effect

| Activation channel | <i>Gobo Effect 2 Selection</i> (on each layer) | Default value |
|----------------------|---|---------------|
| Activation DMX value | 71 | |
| Control: Parameter 1 | Amount of pixel in X-axis: 0-255DMX - max. → min. | 0 |
| Parameter 2 | Amount of pixel in Y-axis: 0-255DMX - max. → min. | 0 |
| Parameter 3 | Effect boundary position in X-axis: 0-255 DMX – movement of effect boundary from left to right | 0 |
| Example | Original  P1=27DMX, P2=27DMX, P3=138DMX  | |

3. Cross-stitching effect

| Activation channel | <i>Gobo Effect 2 Selection</i> (on each layer) | Default value |
|----------------------|--|---------------|
| Activation DMX value | 72 | |
| Control: Parameter 1 | <i>Pattern density:</i> 0-255 DMX - max. → min. | 0 |
| Parameter 2 | <i>Colour of stitch:</i> 0-127 DMX - coloured 128-255 DMX - black | 0 |
| Parameter 3 | <i>Effect boundary position in X-axis:</i> 0-255 DMX – movement of effect boundary from left to right | 0 |
| Example | <p>Original</p>  <p>P1=81DMX, P2=0DMX, P3=85DMX</p>  <p>P1=81DMX, P2=128DMX, P3=85DMX</p>  | |

4. Posterization effect

| Activation channel | <i>Gobo Effect 2 Selection</i> (on each layer) | Default value |
|----------------------|--|---------------|
| Activation DMX value | 73 | |
| Control: Parameter 1 | <i>Number of colours:</i> 0 DMX - all colours 1-255DMX - reducing of colours | 0 |
| Parameter 2 | <i>Gamma correction:</i> 0-255DMX - min. → max. | 0 |
| Example | <p>Original</p>  <p>P1=228DMX, P2=0DMX</p>  | |

21. Media content management

As you seen earlier in chapter "12. Folder organization", the DigitalSpot 3000 DT II uses the root folder named "Media". This folder contains subfolders (000,001...240) and inside each subfolder is the collection of media that the subfolder holds. The files in subfolders are sorted in an alphabetic or numerical order and assigned to DMX. The first part of the file name should be a 3-digit number followed by an underscore and a name e.g.:

001_sun..... 1 DMX

002_snow_castle.....2 DMX

:

255_apple.....255 DMX

Subfolders 000-020 are reserved for default (factory) gobos/videos and cannot be changed.

User subfolders 21-240 and their contents can be mowed between fixtures and your local drive (PC) as well as between fixtures. Which method you use depends on:

- how much content you want to move
- whether the fixture is currently connected to the Ethernet fixture link


There is several methods for moving user content files and folders between fixtures and a local drive and between fixtures each other. You can use:

- FTP client in Windows explorer window (fixtures have to be connected to Ethernet link)
 - FTP client in Mozilla Firefox (fixtures have to be connected to Ethernet link)
 - USB stick
 - option "Contents Synchronization" in a Remote control program (fixtures have to be connected to Ethernet link).
- For detail description see articles below.

21.1 Moving files between the fixture and a PC


1. FTP client in explorer window

All fixtures have to be linked to the Ethernet link. The proper network configuration and IP address setting of your PC is very important. The following is an example of an IP setting for Windows XP :

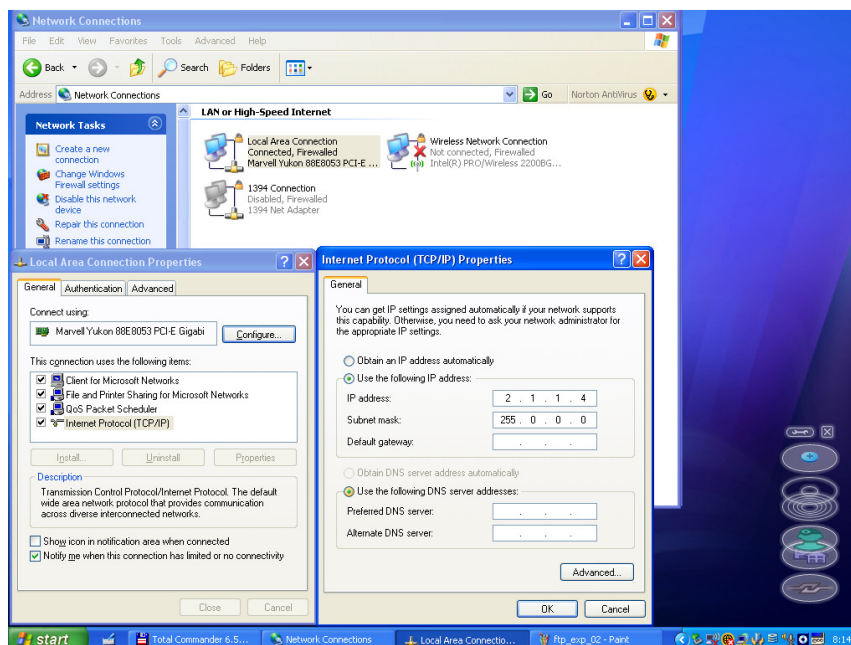


DigitalSpot 3000 DT II

After network configuration, type the IP address of the DigitalSpot 3000 DT II in address line in your Windows explorer window. Use this format **ftp:// 2.X.X.X /** (e.g. ftp://2.236.2.88/- see picture below).

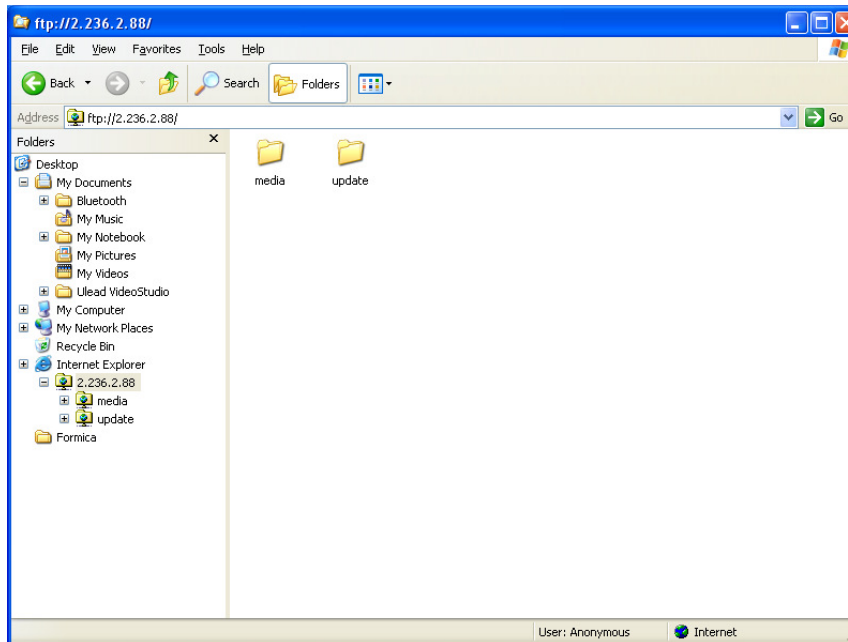

If all settings are proper, you will see "Media" and "Update" folders in the Windows explorer window and now you can work with them as local folders and files.

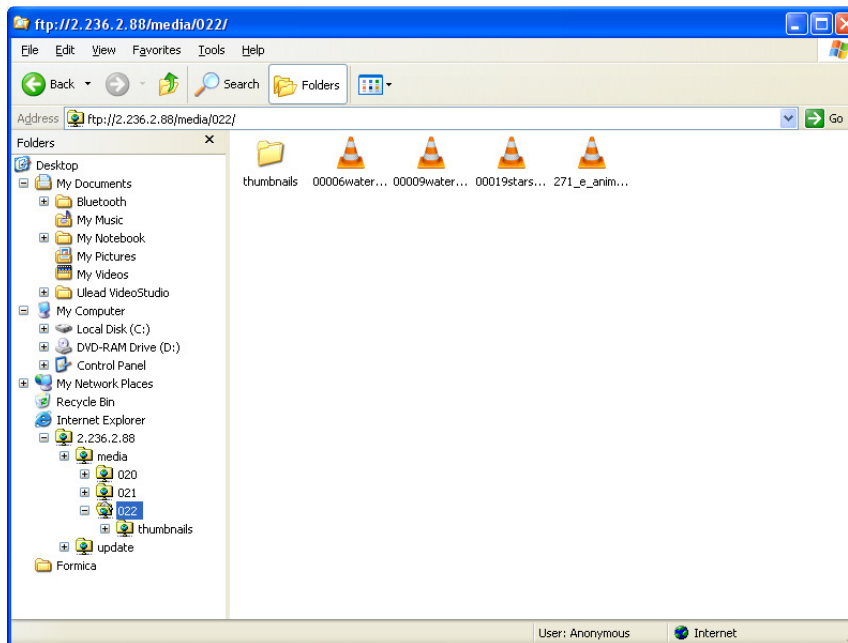

See also "Special functions"--> "FTP Server".


2. FTP client in Mozilla Firefox

If you use Mozilla Firefox as your web browser, you can install FTP client into the browser.

To install FTP client for Mozilla Firefox on your computer.


1. Run Mozilla Firefox.

2. Select option "Tools" from the Menu bar, select "Add-ons" item.

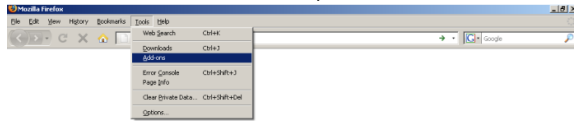


3. Select option "Get Add-ons" from the standard toolbar, type **fireftp** into the top left field and press Enter key.

4. Click on the Add to Firefox.. button and follow the installation instructions.

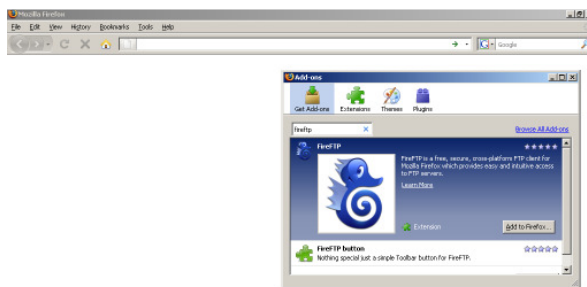


5. Follow the installation instructions until the installation has finished.

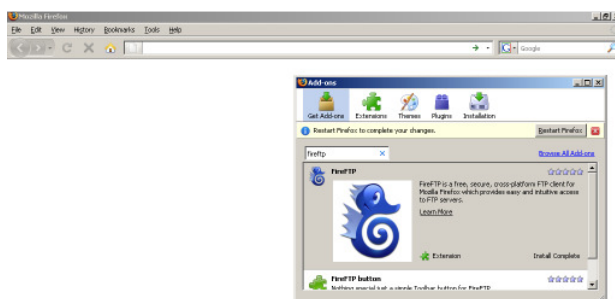


5. After installation, go to the "Tools", select "Add-ons" item, select "Extensions" in the toolbar and click on the Options button. Select "Interface" menu and check option "Configure FTP links in Firefox to automatically use FireFTP".

DigitalSpot 3000 DT II

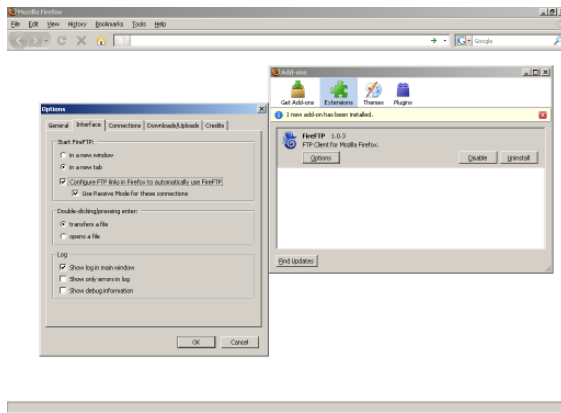


After installing FTP client, run Mozilla Firefox and type the IP address of desired fixture in ftp format e. g. **ftp://2.97.181.89** and a Fire FTP window will appear.

If you do not want to keep in mind IP addresses of all connected fixtures, you can use the Remote configuration program (by typing the IP address of one fixture to the web browser in http format e. g. **http://2.97.181.89**) and go to the Contents Synchronization window where a list of available fixtures is offered.

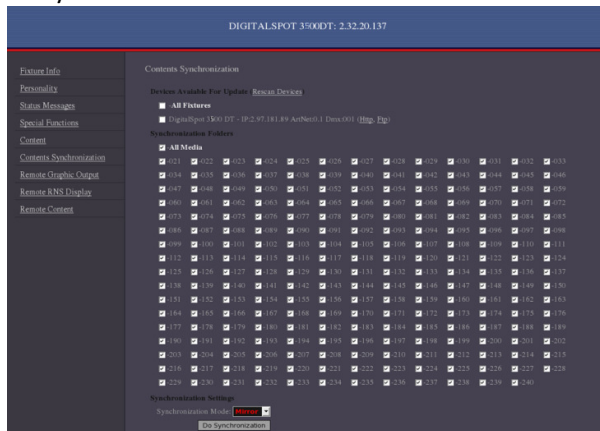

You need to know only IP address of one fixture as the rest of connected fixtures with their IP addresses is displayed in this window. By clicking on the Ftp option (in parenthesis) at desired fixture the FireFTP window will appear:

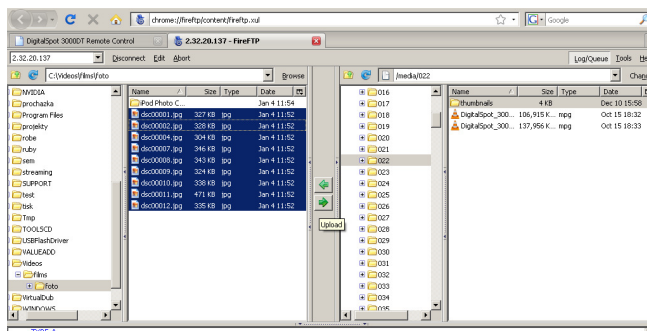

Now you can move files between PC and desired fixture.


3. Via USB stick

Next way, how to add or remove files from the media folders is by means of the USB stick - see "USB Data Synchronization" in chapter "Special functions".

21.2 Moving files between networked fixtures

The option "Contents Synchronization" in a "Remote control program" running on your PC offers easy control of file transfer between networked fixtures via WWW browser. (For detail description of the Remote configuration program see chapter "Remote control of the fixture via WWW browser" below).

A window of **Contents Synchronization**:

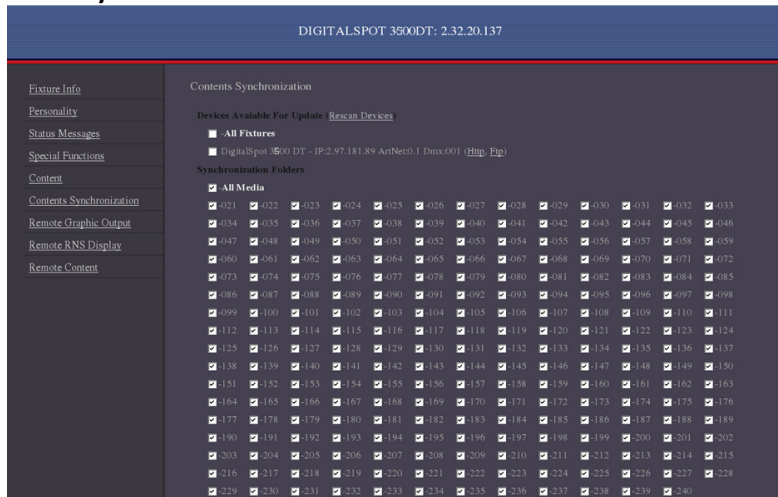

There is a list of available fixtures under **Device Available for Update**. If you connect another fixture to a network, use option "**Rescan Devices**" to refresh the list of fixtures.

A list of available folders with their check boxes is placed under **Synchronization Folders**.

Option "**Synchronization Mode**" gives you possibility to select how the files will be moved to target folder:

"Mirror"- a content of the target folder will be fully overwritten by a content of the source folder.

"Add"- files from the source folder are added to existing files in the target folder.

The last folder "**Update**" next to the gobo folder no. 240 serves for a synchronization of the "update" folders between the fixtures.

The last folder "**Update**" next to the gobo folder no. 240 serves for a synchronization of the "update" folders between the fixtures

To move files.

1. Select desired folders check boxes. If you want to select all folders, check All Media check box.
2. Select a target fixture (fixtures) in a list of available fixtures.
3. Select desired Synchronization Mode and click the "Do Synchronization" button to start the file transfer.

22. Remote control of the fixture via WWW browser

The DigitalSpot 3000 DT II offers a remote control of the fixture and displaying useful information about the fixture including the gobo folders contents via WWW browser.

The fixtures has to be connected via an ethernet (with Art-Net communication protocol) to a network. The PC or light console has to be connected to the same network as the fixtures. Use only the IP addresses which have first number 2 like 2.X.X.X, e.g. 2.236.2.88.


To run a Remote control program type the IP address of the desired fixture to your WWW browser (e.g. http://2.236.2.88) and the input window of the Remote Control will appear.

Note: if you wish to have access to this utility under password, use the menu "HTTP Access" in "Special functions" to set a password.


The Remote Control screen offers these options:

Fixture Info - the window with information about current fixture address, disk space, software versions etc.


DigitalSpot 3000 DT II

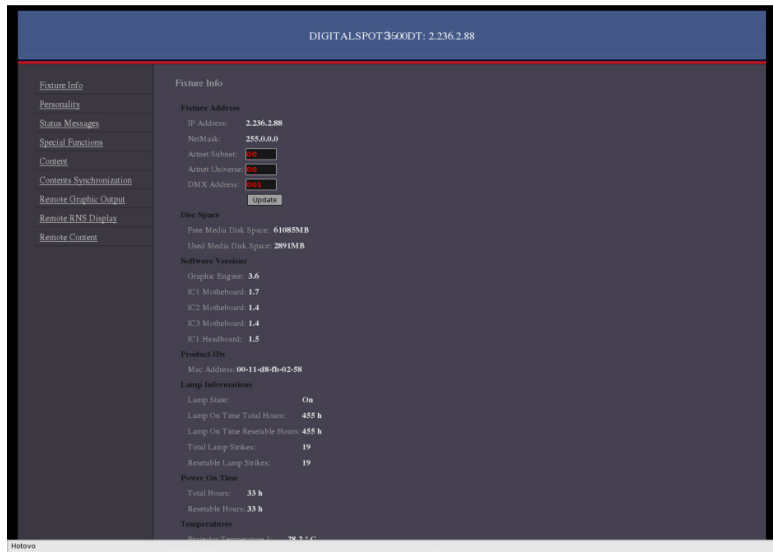

Personality - the window allows you to change the fixture settings like a pan/tilt reverse, feedback, speed, lamp status, DMX protocol selection etc.

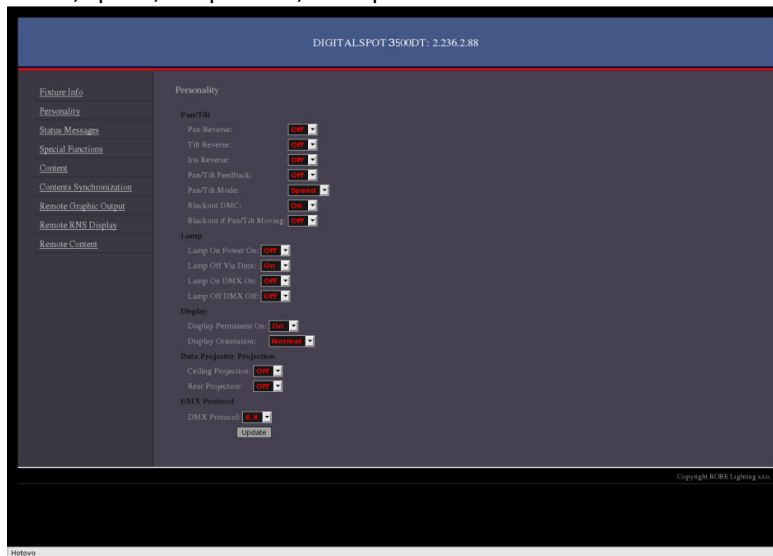

Status Messages -the window under this option displays error and status messages.

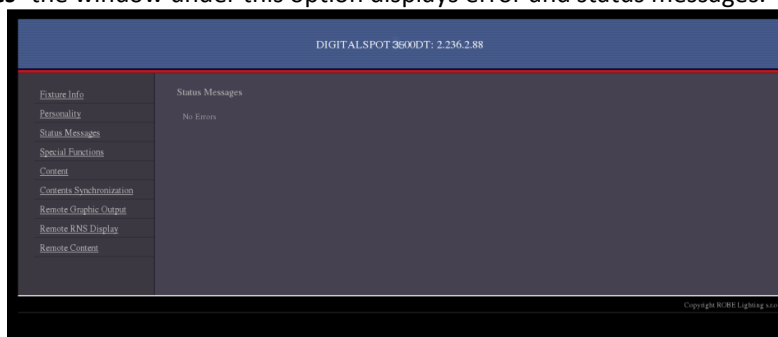

Special Functions - the window offers several items:

"Thumbnails size" - changing the size of the thumbnails. The change takes effect in the item "Content". If you change the thumbnail size, use the button **"Update"** below the size box.

DigitalSpot 3000 DT II


"Log File" - enables to generate log file for service purposes.

"System Reboot"- starts reboot of the fixture


"Regenerate Video Headers"- allows to regenerate headers of video media files.



Content - by entering this window a complete overview of all gobo folders is offered, from which the folder to be view can be selected. Click a desired folder to display its content. Click a desired picture to zoom it in.

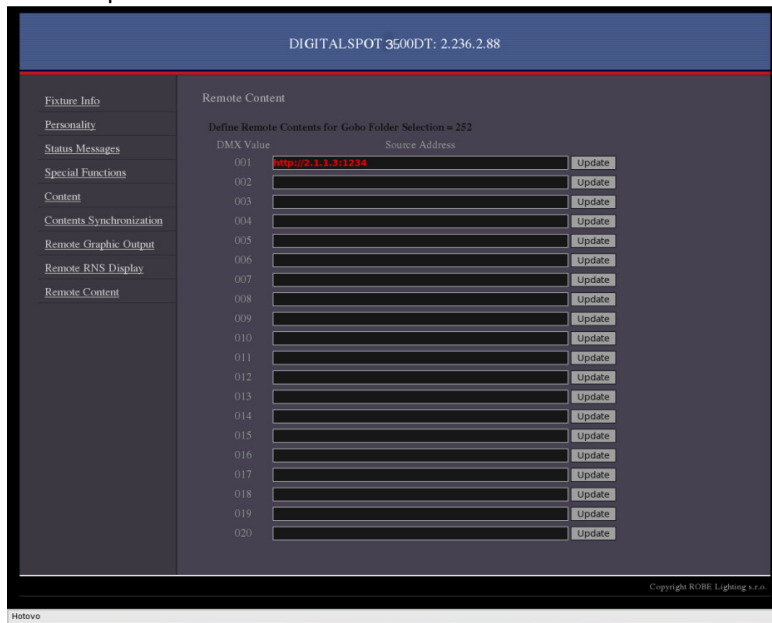

Contents Synchronization - the window allows you copy (addition) media content from a current fixture to another fixtures on an ethernet network.

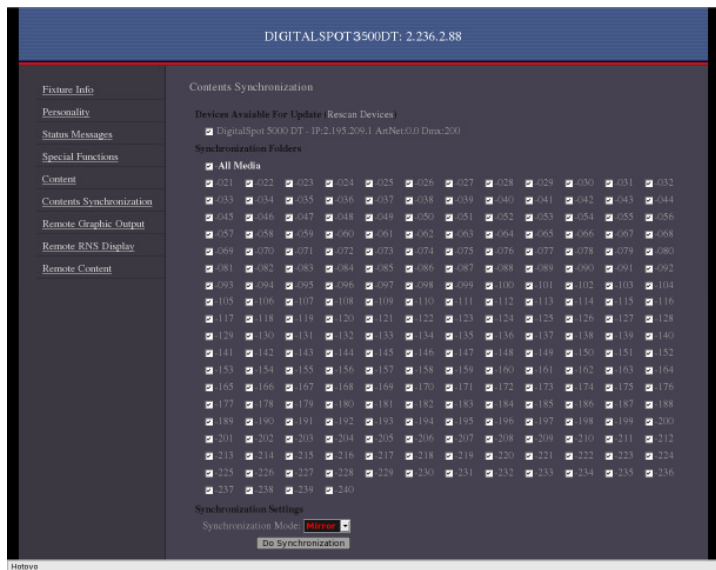

There is a list of available fixtures under **Device Available for Update**. If you connect another fixture to a network, use option **"Rescan Devices"** to refresh the list of fixtures.

A list of available folders with their check boxes is placed under **Synchronization Folders**.

Option **"Synchronization Mode"** gives you possibility to select the way how the files will be moved to target folder:

"Mirror"- a content of the target folder will be fully overwritten by a content of the source folder.


"Add"- files from the source folder are added to existing files in the target folder.

The last folder **"Update"** next to the gobo folder no. 240 serves for a synchronization of the "update" folders between the fixtures


To move files.

1. Select desired folders check boxes. If you want to select all folders, check "All Media" check box.
2. Select a target fixture (fixtures) in a list of available fixtures.
3. Select desired Synchronization mode and click the "Do Synchronization" button to start file transfer.

Remote Graphics Output - preview of the current projecting output.

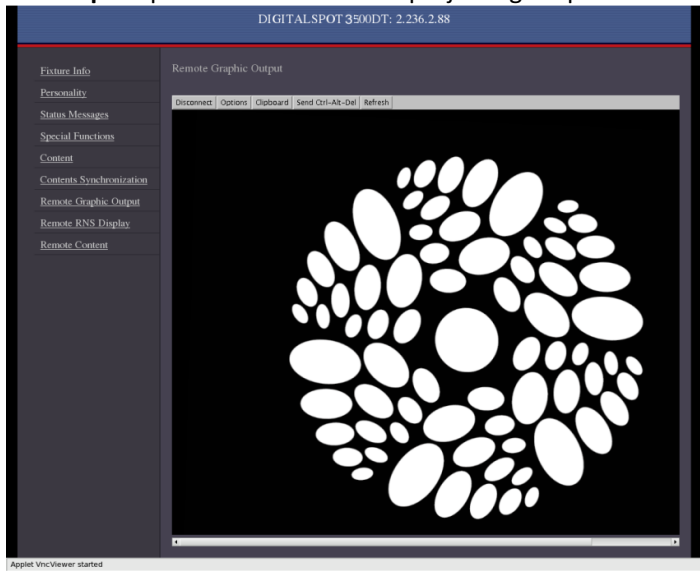

Remote RNS Display - the window "takes" the fixture's control panel. You can browse and adjust all items in this fixture menu by means of your keyboard. Use the Up/Down and Enter/Escape keys.

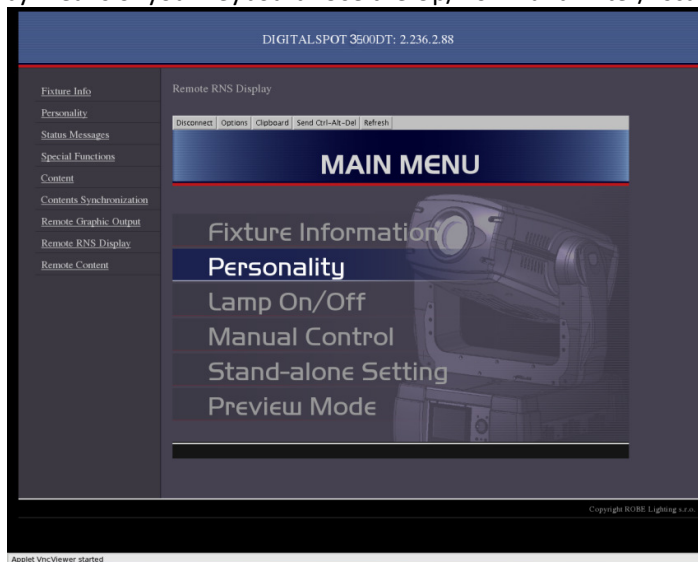


Remote Content - the window offers a table for definition of streaming sources. Type a streaming protocol, an IP address and a port number for the desired streaming source (e.g. laptop) to the first line in the following format:

http://2.x.x.x:port number (for example **http://2.1.1.3:1234**)

and click the "Update" button on the right side of the line to save the streaming source address. This source is assigned to the DMX value of 1 on channel **Gobo selection**. Up to 20 streaming sources is possible to define in this way. All defined streaming sources are assigned to DMX values of the **Gobo selection** channel and can be used on each gobo layer.

Previous channel **Gobo folder selection** has to be set at DMX value of 252 in order to allow the use of streaming sources assigned to the **Gobo selection** channel. See the chapter "Streaming video".

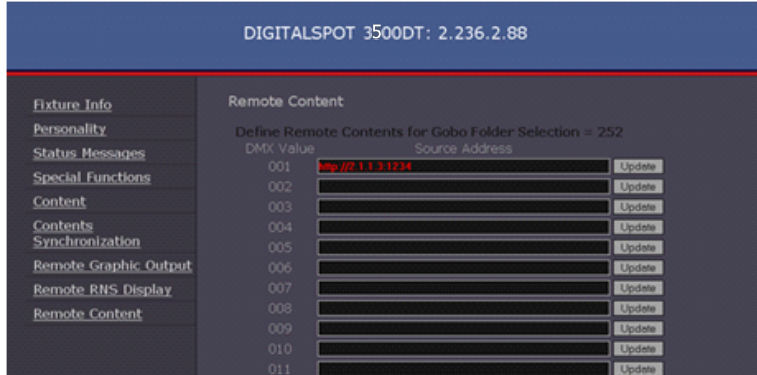

To end the Remote control program, close WWW browser (or use option "Logout" if you entered the program using the user name and password).

23. Picture merging


The picture merging system allows to create a panoramic projection controlled from a light DMX console. The resulting seamless image consists of the images of the individual projectors. It is possible to create an image field up to 64 segments (non-mirrored configuration).

You can display the original DigitalSpot 3000 DT II gobos/videos or custom gobos/videos from user folders.

23.1 Picture merging control channels

Global effect 1

DMX values in a range of 1-7 enable the picture merging procedure. You can select from several predefined widths of the picture overlapping edges (from 0 to 35%). In many cases the projection screen is smaller than the total merged image of the projectors. This total image can be scaled either using Keystoning parameters or (better) adjusting the width of blending areas.

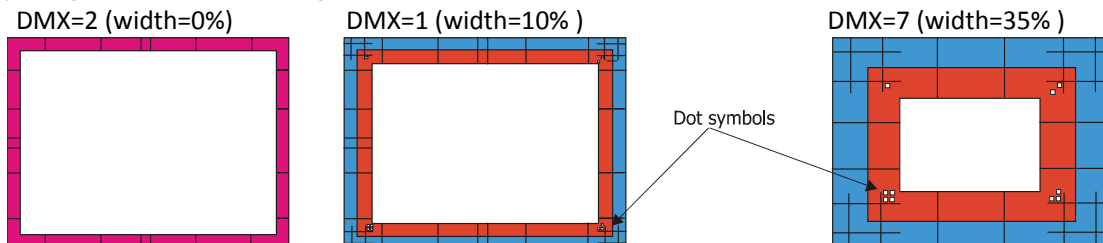

There are dot symbols in each corner of test pattern. The dot symbols correspond to the global keystone parameters in the following way:


- - KeyStone Top Left X/ KeyStone Top Left Y
- □ - KeyStone Top Right X/ KeyStone Top Right Y
- □ □ - KeyStone Bottom Right X/ KeyStone Bottom Right Y
- □ □ □ - KeyStone Bottom Left X/ KeyStone Bottom Left Y

These symbols should make easy identification of appropriate keystones in case there is several parts of merged picture.

Global effect 1- Parameter 1

The DMX value from the range of 1- 235 allows selection of desired image field configuration according to the tables on the following pages.

Image field configuration

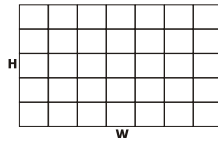

Non-mirrored configuration

| DMX value | Image field Configuration W x H | Total number of fixtures | DMX value | Image field Configuration W x H | Total number of fixtures |
|-----------|---------------------------------|--------------------------|-----------|---------------------------------|--------------------------|
| 1 | 2 x 1 | 2 | 56 | 4 x 8 | 32 |
| 2 | 1 x 2 | 2 | 57 | 8 x 5 | 40 |
| 2 | 2 x 2 | 4 | 58 | 5 x 8 | 40 |
| 4 | 3 x 1 | 3 | 59 | 8 x 6 | 48 |
| 5 | 1 x 3 | 3 | 60 | 6 x 8 | 48 |
| 6 | 3 x 2 | 6 | 61 | 8 x 7 | 56 |
| 7 | 2 x 3 | 6 | 62 | 7 x 8 | 56 |
| 8 | 3 x 3 | 9 | 63 | 8 x 8 | 64 |
| 9 | 4 x 1 | 4 | 64 | 9 x 1 | 9 |
| 10 | 1 x 4 | 4 | 65 | 1 x 9 | 9 |
| 11 | 4 x 2 | 8 | 66 | 9 x 2 | 18 |
| 12 | 2 x 4 | 8 | 67 | 2 x 9 | 18 |
| 13 | 4 x 3 | 12 | 68 | 9 x 3 | 27 |
| 14 | 3 x 4 | 12 | 69 | 3 x 9 | 27 |
| 15 | 4 x 4 | 16 | 70 | 9 x 4 | 36 |
| 16 | 5 x 1 | 5 | 71 | 4 x 9 | 36 |
| 17 | 1 x 5 | 5 | 72 | 9 x 5 | 45 |
| 18 | 5 x 2 | 10 | 73 | 5 x 9 | 45 |
| 19 | 2 x 5 | 10 | 74 | 9 x 6 | 54 |
| 20 | 5 x 3 | 15 | 75 | 6 x 9 | 54 |
| 21 | 3 x 5 | 15 | 76 | 9 x 7 | 63 |
| 22 | 5 x 4 | 20 | 77 | 7 x 9 | 63 |
| 23 | 4 x 5 | 20 | 78 | 10 x 1 | 10 |
| 24 | 5 x 5 | 25 | 79 | 1 x 10 | 10 |
| 25 | 6 x 1 | 6 | 80 | 10 x 2 | 20 |
| 26 | 1 x 6 | 6 | 81 | 2 x 10 | 20 |
| 27 | 6 x 2 | 12 | 82 | 10 x 3 | 30 |
| 28 | 2 x 6 | 12 | 83 | 3 x 10 | 30 |
| 29 | 6 x 3 | 18 | 84 | 10 x 4 | 40 |
| 30 | 3 x 6 | 18 | 85 | 4 x 10 | 40 |
| 31 | 6 x 4 | 24 | 86 | 10 x 5 | 50 |
| 32 | 4 x 6 | 24 | 87 | 5 x 10 | 50 |
| 33 | 6 x 5 | 30 | 88 | 10 x 6 | 60 |
| 34 | 5 x 6 | 30 | 89 | 6 x 10 | 60 |
| 35 | 6 x 6 | 36 | 90 | 11 x 1 | 11 |
| 36 | 7 x 1 | 7 | 91 | 1 x 11 | 11 |



| DMX value | Image field Configuration W x H | Total number of fixtures | DMX value | Image field Configuration W x H | Total number of fixtures |
|-----------|------------------------------------|--------------------------|-----------|------------------------------------|--------------------------|
| 37 | 1 x 7 | 7 | 92 | 11 x 2 | 22 |
| 38 | 7 x 2 | 14 | 93 | 2 x 11 | 22 |
| 39 | 2 x 7 | 14 | 94 | 11 x 3 | 33 |
| 40 | 7 x 3 | 21 | 95 | 3 x 11 | 33 |
| 41 | 3 x 7 | 21 | 96 | 11 x 4 | 44 |
| 42 | 7 x 4 | 28 | 97 | 4 x 11 | 44 |
| 43 | 4 x 7 | 28 | 98 | 11 x 5 | 55 |
| 44 | 7 x 5 | 35 | 99 | 5 x 11 | 55 |
| 45 | 5 x 7 | 35 | 100 | 12 x 1 | 12 |
| 46 | 7 x 6 | 42 | 101 | 1 x 12 | 12 |
| 47 | 6 x 7 | 42 | 102 | 12 x 2 | 24 |
| 48 | 7 x 7 | 49 | 103 | 2 x 12 | 24 |
| 49 | 8 x 1 | 8 | 104 | 12 x 3 | 36 |
| 50 | 1 x 8 | 8 | 105 | 3 x 12 | 36 |
| 51 | 8 x 2 | 16 | 106 | 12 x 4 | 48 |
| 52 | 2 x 8 | 16 | 107 | 4 x 12 | 48 |
| 53 | 8 x 3 | 24 | 108 | 12 x 5 | 60 |
| 54 | 3 x 8 | 24 | 109 | 5 x 12 | 60 |
| 55 | 8 x 4 | 32 | - | - | - |

Example

Image field configuration:



W x H = 2 x 2 = 4 projectors

DMX= 3

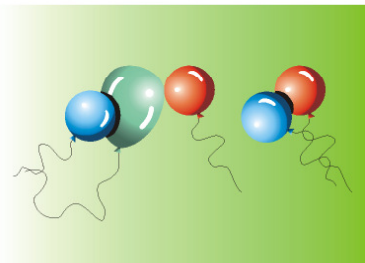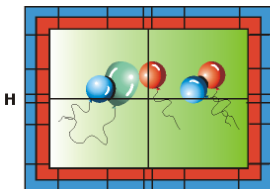

W x H = 4 x 4 = 16 projectors

DMX=15

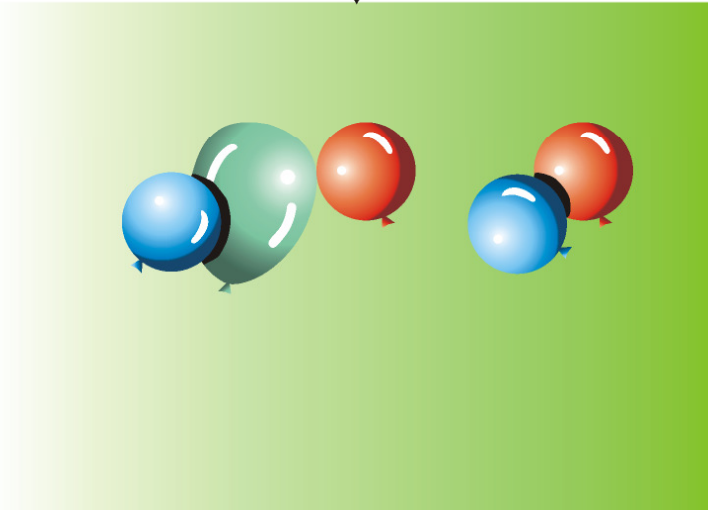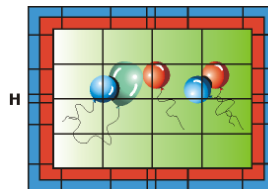

Horizontally mirrored configuration



| DMX value | Image field configuration of base matrix W x H | Total number of fixtures in base matrix | DMX value | Image field configuration of base matrix W x H | Total number of fixtures in base matrix |
|-----------|--|---|-----------|--|---|
| 128 | 2 x 1 | 2 | 146 | 10 x 2 | 20 |
| 129 | 4 x 1 | 4 | 147 | 4 x 5 | 20 |
| 130 | 2 x 2 | 4 | 148 | 10 x 3 | 30 |
| 131 | 4 x 2 | 8 | 149 | 6 x 5 | 30 |
| 132 | 6 x 1 | 6 | 150 | 10 x 4 | 40 |
| 133 | 2 x 3 | 6 | 151 | 8 x 5 | 40 |
| 134 | 6 x 2 | 12 | 152 | 10 x 5 | 50 |
| 135 | 4 x 3 | 12 | 153 | 12 x 1 | 12 |
| 136 | 6 x 3 | 18 | 154 | 2 x 6 | 12 |
| 137 | 8 x 1 | 8 | 155 | 12 x 2 | 24 |
| 138 | 2 x 4 | 8 | 156 | 4 x 6 | 24 |
| 139 | 8 x 2 | 16 | 157 | 12 x 3 | 36 |
| 140 | 4 x 4 | 16 | 158 | 6 x 6 | 36 |
| 141 | 8 x 3 | 24 | 159 | 12 x 4 | 48 |
| 142 | 6 x 4 | 24 | 160 | 8 x 6 | 48 |
| 143 | 8 x 4 | 32 | 161 | 12 x 5 | 60 |
| 144 | 10 x 1 | 10 | 162 | 10 x 6 | 60 |
| 145 | 2 x 5 | 10 | 163 | 12 x 6 | 72 |

Example

Image field configuration:



W x H = 2 x 2 = 4 projectors

DMX= 130

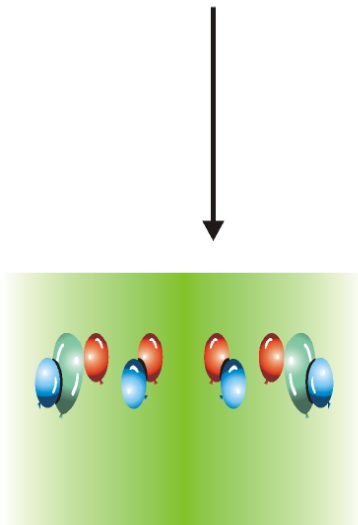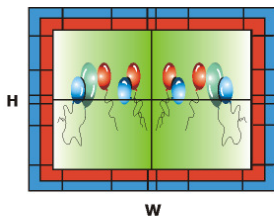

W x H = 4 x 4 = 16 projectors

DMX=140

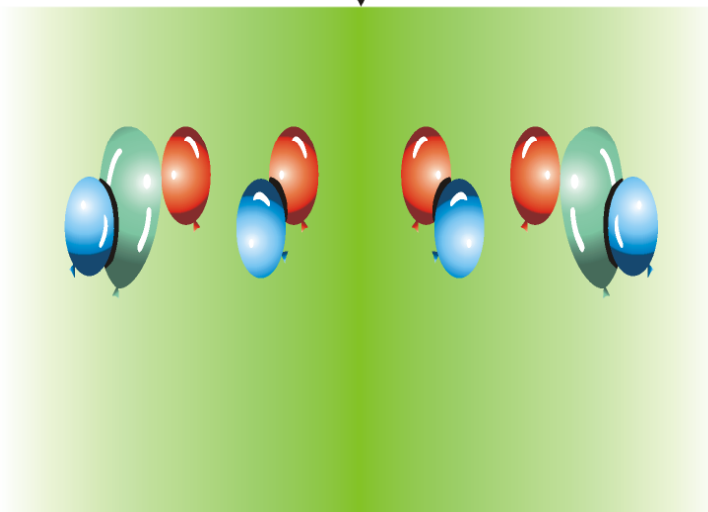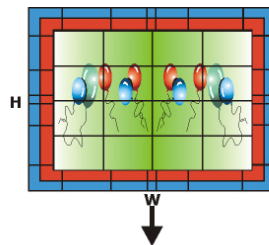

Vertically mirrored configuration


| DMX value | Image field configuration of base matrix W x H | Total number of fixtures in base matrix | DMX value | Image field configuration of base matrix W x H | Total number of fixtures in base matrix |
|-----------|--|---|-----------|--|---|
| 164 | 1 x 2 | 2 | 182 | 5 x 4 | 20 |
| 165 | 2 x 2 | 4 | 183 | 2 x 10 | 20 |
| 166 | 1 x 4 | 4 | 184 | 5 x 6 | 30 |
| 167 | 2 x 4 | 8 | 185 | 3 x 10 | 30 |
| 168 | 3 x 2 | 6 | 186 | 5 x 8 | 40 |
| 169 | 1 x 6 | 6 | 187 | 4 x 10 | 40 |
| 170 | 3 x 4 | 12 | 188 | 5 x 10 | 50 |
| 171 | 2 x 6 | 12 | 189 | 6 x 2 | 12 |
| 172 | 3 x 6 | 18 | 190 | 1 x 12 | 12 |
| 173 | 4 x 2 | 8 | 191 | 6 x 4 | 24 |
| 174 | 1 x 8 | 8 | 192 | 2 x 12 | 24 |
| 175 | 4 x 4 | 16 | 193 | 6 x 6 | 36 |
| 176 | 2 x 8 | 16 | 194 | 3 x 12 | 36 |
| 177 | 4 x 6 | 24 | 195 | 6 x 8 | 48 |
| 178 | 3 x 8 | 24 | 196 | 4 x 12 | 48 |
| 179 | 4 x 8 | 32 | 197 | 6 x 10 | 60 |
| 180 | 5 x 2 | 10 | 198 | 5 x 12 | 60 |
| 181 | 1 x 10 | 10 | 199 | 6 x 12 | 72 |

Example


Image field configuration:

W x H = 2 x 2 = 4 projectors

DMX = 165

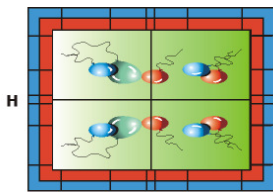


W

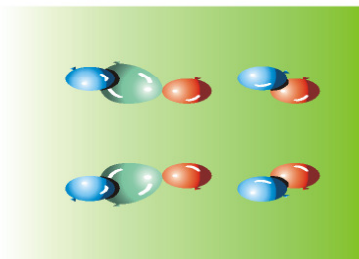


W x H = 4 x 4 = 16 projectors

DMX = 175

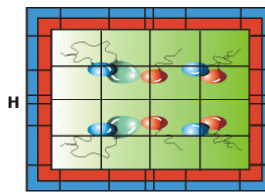

W

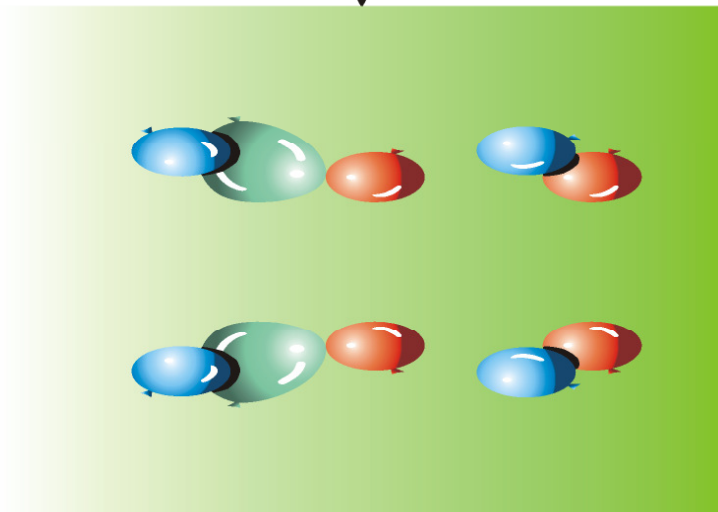

Vertically and horizontally mirrored configuration



| DMX value | Image field configuration of base matrix W x H | Total number of fixtures in base matrix | DMX value | Image field configuration of base matrix W x H | Total number of fixtures in base matrix |
|-----------|--|---|-----------|--|---|
| 200 | 2 x 2 | 4 | 218 | 10 x 4 | 40 |
| 201 | 4 x 2 | 8 | 219 | 4 x 10 | 40 |
| 202 | 2 x 4 | 8 | 220 | 10 x 6 | 60 |
| 203 | 4 x 4 | 16 | 221 | 6 x 10 | 60 |
| 204 | 6 x 2 | 12 | 222 | 10 x 8 | 80 |
| 205 | 2 x 6 | 12 | 223 | 8 x 10 | 80 |
| 206 | 6 x 4 | 24 | 224 | 10 x 10 | 100 |
| 207 | 4 x 6 | 24 | 225 | 12 x 2 | 24 |
| 208 | 6 x 6 | 36 | 226 | 2 x 12 | 24 |
| 209 | 8 x 2 | 16 | 227 | 12 x 4 | 48 |
| 210 | 2 x 8 | 16 | 228 | 4 x 12 | 48 |
| 211 | 8 x 4 | 32 | 229 | 12 x 6 | 72 |
| 212 | 4 x 8 | 32 | 230 | 6 x 12 | 72 |
| 213 | 8 x 6 | 48 | 231 | 12 x 8 | 96 |
| 214 | 6 x 8 | 48 | 232 | 8 x 12 | 96 |
| 215 | 8 x 8 | 64 | 233 | 12 x 10 | 120 |
| 216 | 10 x 2 | 20 | 234 | 10 x 12 | 120 |
| 217 | 2 x 10 | 20 | 235 | 12 x 12 | 144 |

Example

Image field configuration:



W x H = 2 x 2 = 4 projectors

DMX= 200

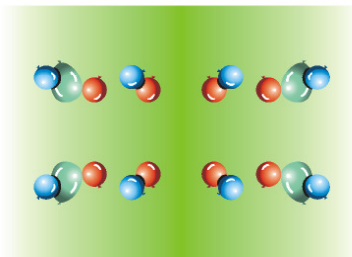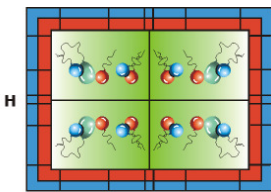

W x H = 4 x 4 = 16 projectors

DMX=203

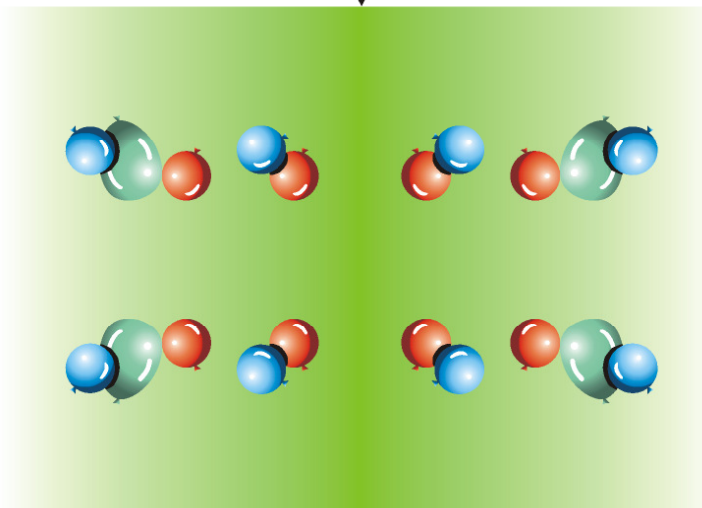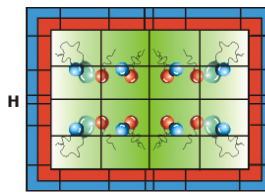

The mirrored image configurations bring 2 advantages:


1. Resolution of the source image and merged images on the wall is the same in comparison with non-mirrored configuration (if you use suitable mirrored configuration – see example 3 below).
2. By using the picture merging with mirrored configuration you can cover any size of projection area. The base matrix of fixtures can be repeated. The total number of used projectors is unlimited.

Examples: 4 DigitalSpots 7000DT are used in the picture merging.

Source picture


Aspect ratio: 4:3

Resolution: 1024 x 768




Images on the wall:

Example 1. Horizontally mirrored configuration 4 x 1 (DMX=129) set on all fixtures

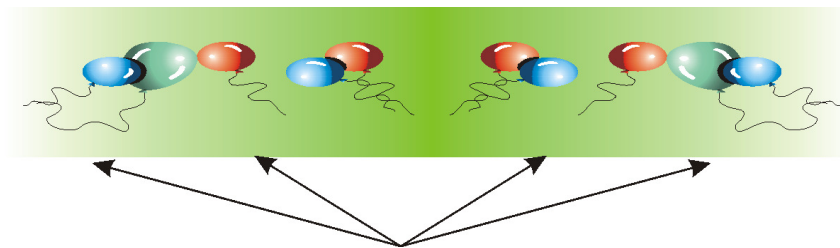


All projected images have a resolution of 1024 x 768, but the resolution of 1024 pixels is “made” from 512 pixels as each fixture projects 1/2 of the source picture (this half has a source resolution 512 x 768).

Example 2. Horizontally mirrored configuration 2 x 1 (DMX=128) set on two pairs of fixtures

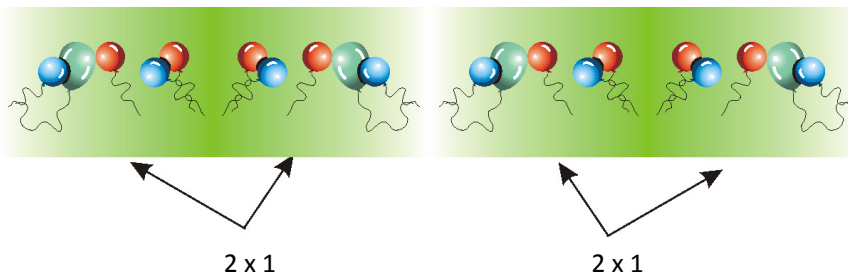

All projected images have a resolution of 1024 x 768 pixels and the total image does not have any distortion (horizontally or vertically). The base matrix 2 x 1 is twice repeated.

Example 3. Non-mirrored configuration 4 x 1 (DMX=9) set on all fixtures

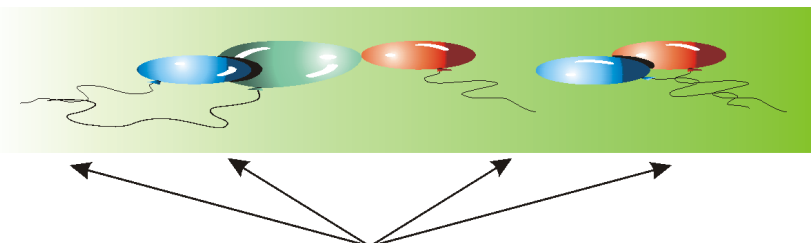

All projected images have resolution 1024 x 768, but the resolution of 1024 pixels is “made” from 256 pixels as each fixture projects 1/4 of the source picture (this quarter has a source resolution 256 x 768).

Global effect 1- Parameter 2

The DMX values from the range of 0-255 are used to step segment by segment throw the image grid. The DMX value of 0 corresponds to the upper left segment of the image grid. The stepping runs from the left to the right and down from top (see example for field 8x3 segments below).

| | | | | | | | |
|-----------------------------|------------|------------|------------|------------|------------|------------|------------|
| DMX=0 Segment 1 | Segment 2 | Segment 3 | Segment 4 | Segment 5 | Segment 6 | Segment 7 | Segment 8 |
| DMX=8 Segment 9 | Segment 10 | Segment 11 | Segment 12 | Segment 13 | Segment 14 | Segment 15 | Segment 16 |
| DMX=16 Segment 17 | Segment 18 | Segment 19 | Segment 20 | Segment 21 | Segment 22 | Segment 23 | Segment 24 |


Global effect 1- Parameter 3

This channel enables to transform displaying of the segment edges-sharp or blended edges. You can also display the blue and red auxiliary frame with the alignment marks for easier alignment of the adjacent segments:


| Channel | Value | Function | Type of control |
|---------|---------|---|-----------------|
| 48 | 0-130 | Global effect 1 - Parameter 3 Displays segment with blended edges (active keystone) | step |
| | 131-140 | Displays segment with sharp edges (active keystone) | step |
| | 141-150 | Displays segment with sharp edges | step |
| | 151-160 | Displays auxiliary pattern frame with sharp edges (active keystone) | step |
| | 161-170 | Displays auxiliary pattern frame, sharp edges | step |
| | 171-180 | Showing aspect ratio of image projected on the wall | step |
| | 181-255 | Reserved | |

To align segments use pan/tilt, zoom and keystone channels.

Segments before alignment:

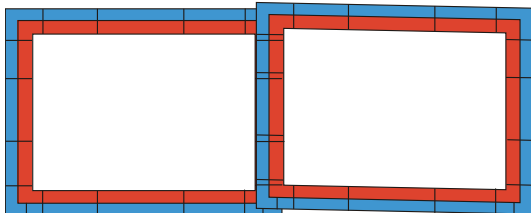

Segments after alignment:

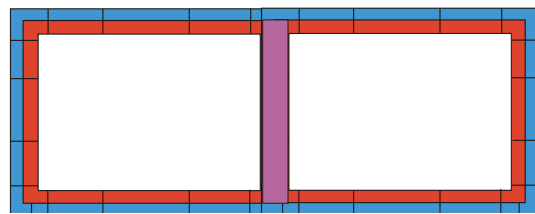


At adjacent edges there is the blue edge that overlaps the red one and respectively :


Note. DMX values of both channels **Global effect 1** and **Global effect 1- Parameter 1** have to be set at the same values on all fixtures used in the picture merging.

If the channel **Global effect 1 - Parameter 3** is set to the range of 171-180, the aspect ratio of an actual image is displayed in the image. The feature is activated when the Picture Merging is active only. The value of the aspect ration changes during setting of Keystone/zoom channels. The function is useful when the image is projected on the skewed surface, at Picture Margin and at video projection (usually 16: 9 aspect ratio).

Aspect ratio 4:3

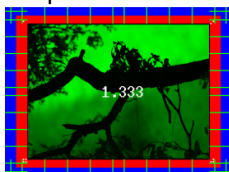

Aspect ratio 16:9

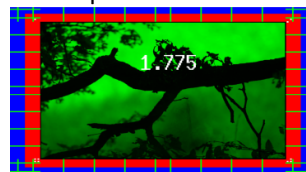

Global effect 2

A DMX value of 20 enables fine adjusting of the red, green and blue gamma curve at overlapping edges to achieve consistent colour(brightness) of these parts of image.

Note. After selecting desired image segment for the gamma correction (by means of the **Global effect 1 - Parameter 2**), set the channel **Global effect 1 - Parameter 3** to 0 in order to display blended edges of the picture segment.

Global effect 2- Parameter 1

The parameter adjust the red gamma value at respective image adge.

Global effect 2- Parameter 2

The parameter adjust the green gamma value at respective image adge.

Global effect 2- Parameter 3

The parameter adjust the blue gamma value at respective image adge.

The second way how to adjust the red, green and blue gamma curve at overlapping edges is by means of the channel **Gobo effect 2 Selection** on a gobo layer. The option works on the global layer and it doesn't matter on which layer the channel **Gobo effect 2 Selection** was activated. This option can be a suitable solution in a case that the channel **Global effect 2** is used for another effect.

To activate the fine adjustment of blending curves.

1. Set the channel **Gobo effect 2 selection** to 200 on any gobo layer .
2. Now parameters 1-3 of this effect changing the red, green and blue gamma curves.

23.2 Picture merging example

Here is an example of the image field 3x2.

1. All fixtures that are a part of the picture merging have to have a different fixture ID (**The fixture ID= the last number of its IP address**). The fixture's IP address consists of four numbers separated by the dot e.g. 002.168.002.010.

2. Select the same gobo/video on the six DigitalSpots 3000 DT II.

3. On all fixtures you are configuring set a DMX value=1 at the channel **Global Effect 1**.

On all fixtures you are configuring set a DMX value=6 at the channel **Global Effect 1-Parameter 1**.

4. Set a DMX value at the channel **Global Effect 1- Parameter 3** between 151-160 to define a sharp edges of segments for a fine alignment.

5. On each individual fixture set a DMX value between 0-5 at **Global Effect 1 - Parameter 2** to select the segment that the fixture will project.

6. Use pan/tilt/zoom and keystone channels to align the projections of individual fixtures in such a way that there is some overlap between the separate portions of the image. This overlap is necessary for the picture merging adjustment.

7. Set a DMX value at **Global Effect 1- Parameter 3** between 131-141 to display the segment with sharp edges for fine adjustment by means the fine pan/tilt and keystones channels.


To execute the picture merging ,run the same gobo/video on all six fixtures and set the channels **Global Effect 1-Parameter 3** to a DMX value of 0-130.

Note: In order to assure a correct playback of videos sequences , all fixtures in the picture merging system should be synchronized to the one (master) fixture - see the chapter bellow.

24. Pre-cut content mode for Picture Merging

The mode is useful when you want to cover large projection area with full resolution for each projector or you don't want to be restricted with limits of matrix configuration.

The basic idea is that before projection you have to prepare the pre-cut content (e.g. picture) and upload the single parts of the splitted source picture into individual fixtures.

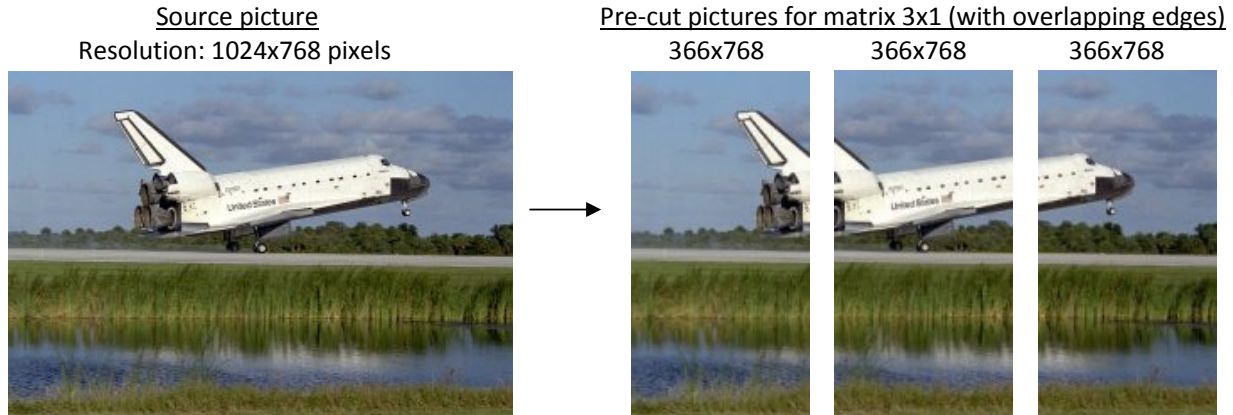

Single segments of the source picture must have the same size (pixels) which is given by:

$$L_{partX} = L_{totalX} / [x - (b/100) * (x-1)] \quad \dots\dots\dots \text{Size of the single segment in X-axis}$$

$$L_{partY} = L_{totalY} / [y - (b/100) * (y-1)] \quad \dots\dots\dots \text{Size of the single segment in Y-axis}$$

where

L_{partX} = size (pixels) of picture segment in X-axis

L_{partY} = size (pixels) of picture segment in Y-axis

L_{totalX} = total size (pixels) of the source picture in X-axis

L_{totalY} = total size (pixels) of the source picture in Y-axis

x = number of picture segments in X-axis

y = number of picture segments in Y-axis

b = size of overlapping edges in %

Positions at which single picture segments start in the source picture are given by:

$$L_{posX} = (N_x - 1) * L_{partX} * [1.0 - (b/100)] \quad \dots\dots\dots \text{Position in X-axis}$$

$$L_{posY} = (N_y - 1) * L_{partY} * [1.0 - (b/100)] \quad \dots\dots\dots \text{Position in Y-axis}$$

where

L_{posX} = position (pixels) at which segment starts in X-axis

L_{posY} = position (pixels) at which segment starts in Y-axis

N_x = order of the fixture image in X-axis (figured from the left side of the source picture)

N_y = order of the fixture image in Y-axis (figured from the bottom side of the source picture)

b = size of overlapping edges in %


The pre-cut content mode has several advantages compared to the standard picture merging:

- unlimited size of the image field configuration matrix
- allows full resolution of every matrix element
- less loading of fixtures 'graphics engines

But the time for preparing pictures and calculation of the overlapping edges has to be taken into account.

There is an example of calculation of needed points in the source fixture for the image stated above.

DigitalSpot 3000 DT II

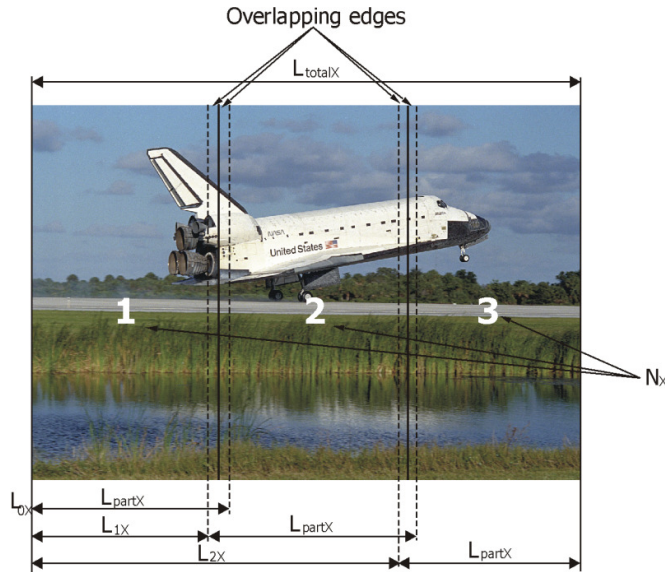

Size of segments in X-axis: $L_{partX} = L_{totalX} / [x - (b/100) * (x-1)]$

$L_{partX} = 1024 / [3 - (10/100) * (3-1)]$ the size of overlapping edges was selected 10% (b=10)

$L_{partX} = 366$ pixels

Since the size of the segments in Y-axis is the same as at the source picture, each of the 3 fixtures will project picture with resolution of 366x768 pixels.

Note. On the other way round, if you need to calculate the resolution of the source picture to ensure that every fixture will use the resolution of 1024x768 pixels, use the formula:

$$L_{totalX} = L_{partX} * [x - (b/100) * (x-1)]$$

for this case: $L_{totalX} = 1024 * [3 - (10/100) * (3-1)]$ $L_{partX} = 1024$ pixels

$L_{totalX} = 2867$ pixels

The source picture should have min. resolution of 2867x768 pixels.

Positions in X-axis at which single picture segments start:

$$L_{posX} = (N_x - 1) * L_{partX} * [1.0 - (b/100)]$$

For the segment 1: $L_{0X} = (1-1) * 366 * [1.0 - (10/100)] = 0$ pixels $N_x = 1$

For the segment 2: $L_{1X} = (2-1) * 366 * [1.0 - (10/100)] = 329$ pixels $N_x = 2$

For the segment 3: $L_{2X} = (3-1) * 366 * [1.0 - (10/100)] = 659$ pixels $N_x = 3$

Result: The first picture segment starts at point 0 pixels and has resolution of 366x768 pixels.

The second picture segment starts at point 329 pixels and has resolution of 366x768 pixels.

The third picture segment starts at point 659 pixels and has resolution of 366x768 pixels.

Using a suitable software you have to prepare these three pictures and copy them to the individual fixtures in order to use them in the picture merging procedure. On the channel **Global Effect 1** select a DMX value from the range of 11-17 DMX according as large overlapping edges you have calculated.

All other settings are the same as for standard picture merging operation.

Note. For correct video files synchronization you have to ensure that all cutted video segments must have the same times of video lasting.

25. Effect video synchronization

The synchronization option can be set separately for each gobo layer (channels **Synchronization to ID**). The fixture synchronization acts with the fixture ID which is defined as the last number of fixture's IP address. This fixture ID is shown on the fixture's display. The fixtures are synchronized to the one fixture - named a master fixture.

The fixtures may be controlled by the DMX but the fixture synchronization runs over ethernet network - it means that all fixtures that are to be synchronized have to be connected to the ethernet.

Each DMX value of the synchronizing channel responds to the fixture ID of a certain fixture.

You have to set the DMX value (ID) of the master fixture on all fixtures that are to be synchronized. If the DMX value= fixture ID, in this case the fixture is set as a master.

Example: 4 DigitalSpots 3000 DT II which are synchronized through the gobo layer 1 to the fixture 3 :

| | IP address | Fixture ID | Synchronization to ID (Channel 80) | |
|-----------|-------------------------|------------|---|-----------------------|
| Fixture 1 | 002.168.002.010 | 10 | DMX=20 | |
| Fixture 2 | 002.168.002.015 | 15 | DMX=20 | |
| Fixture 3 | 002.168.002. 020 | 20 | DMX= 20 | Master fixture |
| Fixture 4 | 002.168.002.021 | 21 | DMX=20 | |

Note: For a synchronous video projection on the layer 1, the channels **InFrame High, In Frame Low, Out Frame High, Out frame Low, Gobo control, Playback Speed** have to be set at the same values on all fixtures. The same rule proceeds for the gobo layer 2 and 3.

26. Projection onto angular, cylindric or spheric surfaces

If a projection on curved surface is required a correction of the shape distortions is necessary. The DigitalSpot 3000 DT II supports projection onto angular screens, cylinders and spheres.

26.1 Curved surface support channels

Global effect 2

This channel enables you to select desired shape of the surface:


| DMX Value | Surface | DMX Value | Surface | DMX Value | Surface |
|-----------|--|-----------|--|-----------|--|
| 1 | Vertical inside corner (opening towards fixture) | 5 | Vertical convex cylinder (opening towards fixture) | 9 | Orthographic sphere mapping <small>Note: parameter 1 range:0-127 - convex surface adjustment 128 - no adjustment (default) 129-255 - concave surface adjustment</small> |
| 2 | Vertical outside corner (opening away from fixture) | 6 | Vertical concave cylinder (opening away from fixture) | 10 | Rectangle to circle (sphere) <small>Note: Keystone parametres have a different meaning</small> |
| 3 | Horizontal inside corner (opening towards fixture) | 7 | Horizontal convex cylinder (opening towards fixture) | 11 | Square to circle (sphere) <small>Note: Keystone parametres have a different meaning</small> |
| 4 | Horizontal outside corner (opening away from fixture) | 8 | Horizontal concave cylinder (opening away from fixture) | | |

To simplify a correction process, there is a gobo with a net pattern (DMX value = 2) in a factory folder No. 20 (DMX value= 20) on a Gobo folder selection channel each gobo layer.

Global effect 2- parameter 1


This parameter enables to adjust the total length of the image edge. A value of 0 means no adjustment, a value of 255 means maximum correction.

Note. If a corner projection is selected on a **Global effect 1** (values of 1-4), the red guiding line will appear in the image (the gobo with the net pattern has to be projected).

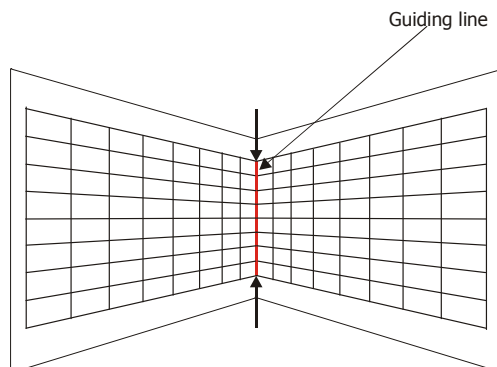


Global effect 2- parameter 2

This parameter enables to adjust the horizontal length of the edge. A DMX Value of 128 = no adjustment, values below 128 move the edge to the left, values above 128 move the edge to the right.

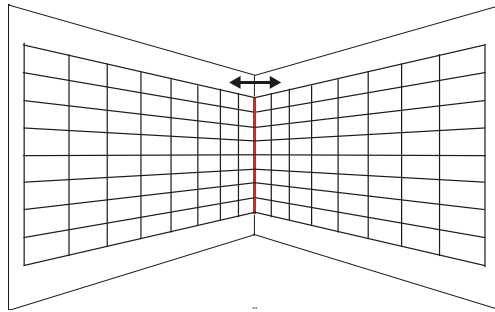

Global effect 2- parameter 3

This parameter enables to adjust the vertical length of the edge. A DMX Value of 128 = no adjustment, values below 128 move the edge downwards, values above 128 move the edge upwards.

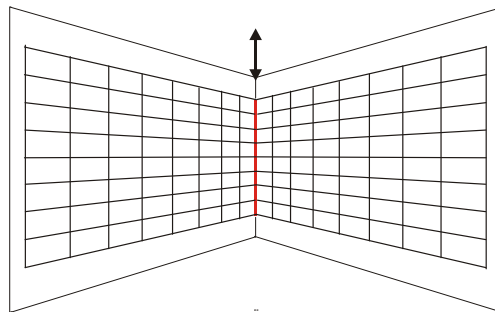


These global effect 2 parameters 1-3 have to be used in combination with the KeyStone and KeyStone X-ratio (Y-ratio) parameters to adjust desired shape of image.

Corner projection

Example:

1. Project the gobo with a net pattern on the wall (the channel **Gobo Folder selection** ,is set at a value of 20 ,the channel **Gobo selection** at a value of 2).
2. Set the channel **Global Effect 2** to a Horizontal inside corner mapping (DMX value=3)
3. Use the channel **Global Effect 2-Parameter 1** to adjust the length of the image edge.
4. Use the channels **Global Effect 2 -Parameter 2**, and **Global Effect 2 -Parameter 3** and Keystone channels to correct image on the wall.
5. Use the **KeyStone Y-ratio** channel for the final correction of the image.

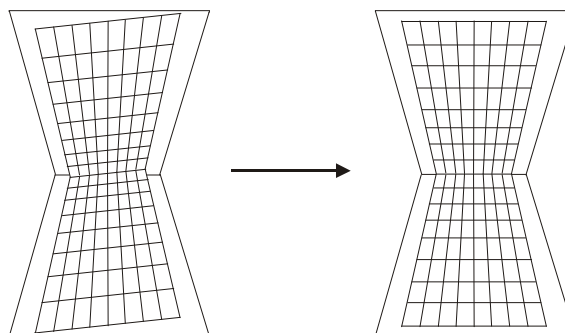

Note:

If a projection of rectangle (square) on a circle (sphere) is selected on the channel **Global Effect 2** (DMX value of 10 or 11), the meaning of the Keystone parameters in a DMX chart will be changed as follows:


| Channel | DMX value | Function | Type of control |
|---------|--------------------------|--|--------------------------------------|
| 18 | 0 -127 128 129-255 | Image moving in an X-direction Moving the image from left to center Center Moving the image from center to right | proportional step proportional |
| 19 | 0 -127 128 129-255 | Image moving in a Y-direction Moving the image from bottom to center Center Moving the image from center to top | proportional step proportional |
| 20 | 0 - 255 | Squeezing in an X-direction Continual squeezing | proportional |
| 21 | 0 - 255 | Squeezing in a Y-direction Continual squeezing | proportional |
| 22 | 0 - 255 | Squeezing in a diagonal direction (top right-bottom left) Continual squeezing | proportional |
| 23 | 0 - 255 | Squeezing in a diagonal direction (bottom left-top right) Continual squeezing | proportional |
| 24 | 0-255 | Zoom Continual zooming | proportional |
| 25 | 0-255 | Indexing Anticlockwise indexing | proportional |

26.2 Rectangle onto circle (sphere) mapping with picture merging

This effect in contrast to the effects stated above allows not only a projection onto a circle (sphere) but in addition enables a picture merging onto a circle (sphere) surface.

This effect can be activated on the the **Global Effect 2 Selection** channel at a DMX Value of 12. The **Parameter 1** of the effect changes the sphere diameter. The **Parameter 2** and **Parameter 3** correct distortion in X-axis and Y-axis due to the different projection angles of the fixtures.

There are examples for the image field configuration 2x2:

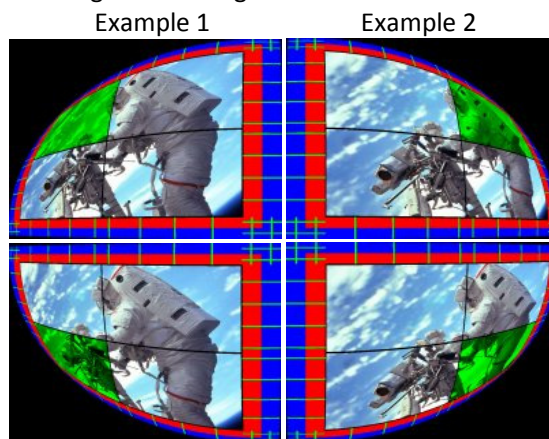

Example 3

Example 4

27. Video processing on gobo layers from a streaming video server


A streaming video is a video that is continuously sent by one device (e.g. PC) and received by another device (DigitalSpot 3000 DT II) over an ethernet network.

1. TightVNC client


The TightVNC is a free remote control software package available at <http://www.tightvnc.com/download.php> . With TightVNC, you can see the image output of the DigitalSpot 3500 DT and edit it with your local PC which has TightVNC server installed.

To install TightVNC server (here is an example for PC running Windows XP)


1. Download the Tight VNC to the PC (Tight VNC 2.0.4 for Windows supports all client and server versions of Microsoft Windows starting at Windows 2000, up to Windows 7)
2. Click on a Tight VNC installation file located on your hard disk and follow the on-screen instructions. When Service Configuration window will appear, do not set any password, check the option " Skip this step, set passwords after the installation".

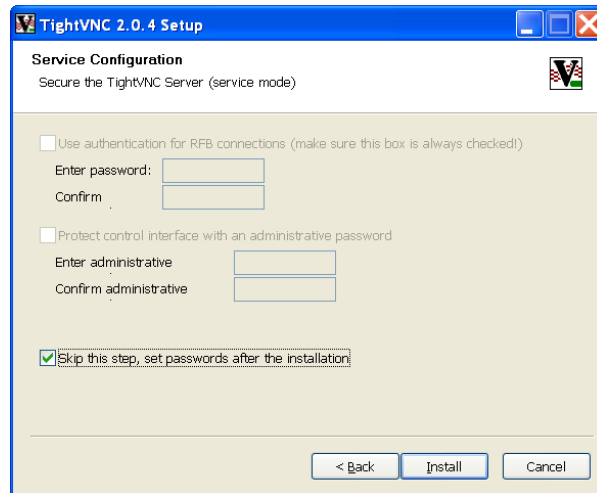

3. After installing it, run the TightVNC server.




Select tab " Server " and check setting as stated below.

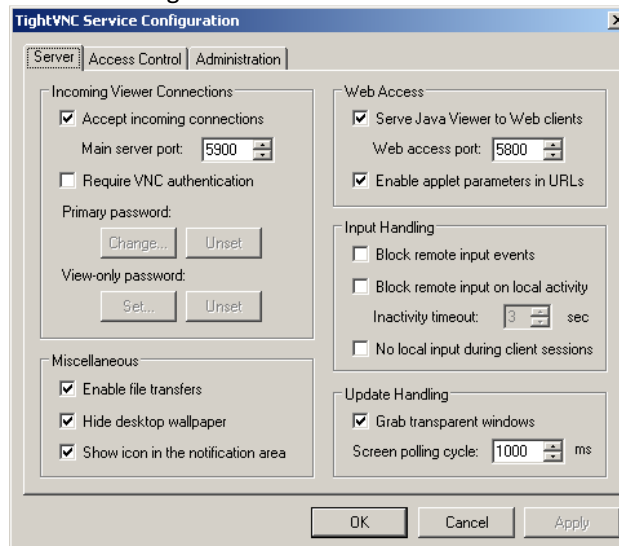


4. Switch off the Firewall on the PC, where the TightVNC server is installed.

Hire is an example for Windows XP:

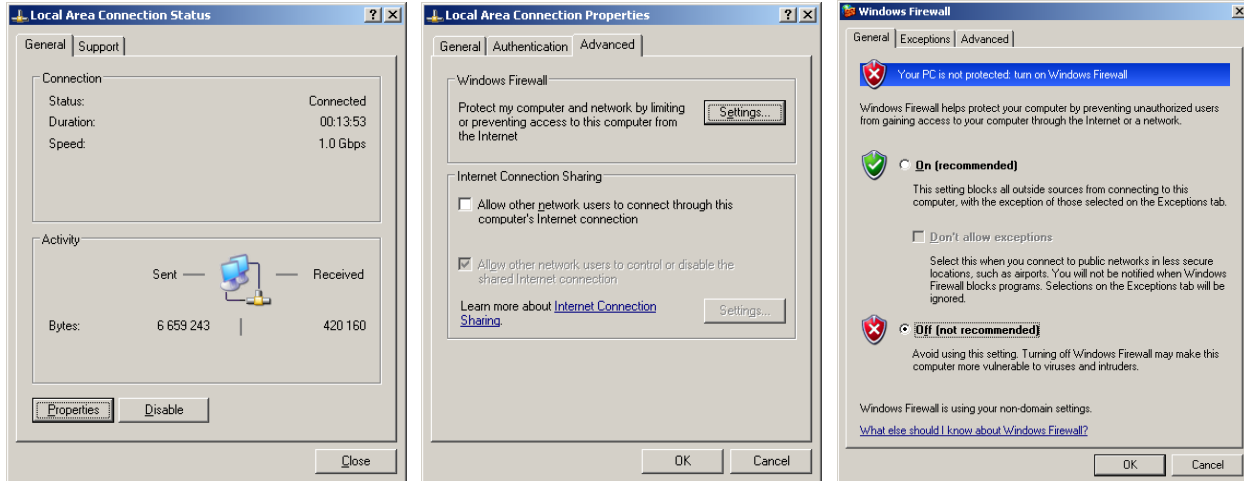

5. Run a Remote control by means of WWW browser at your PC, select option "Remote content" and write IP address of TightVNC server to the Source Address line in the following format : `vnc:// xxx.xxx.xxx` (e.g. `vnc://2.1.1.12`).

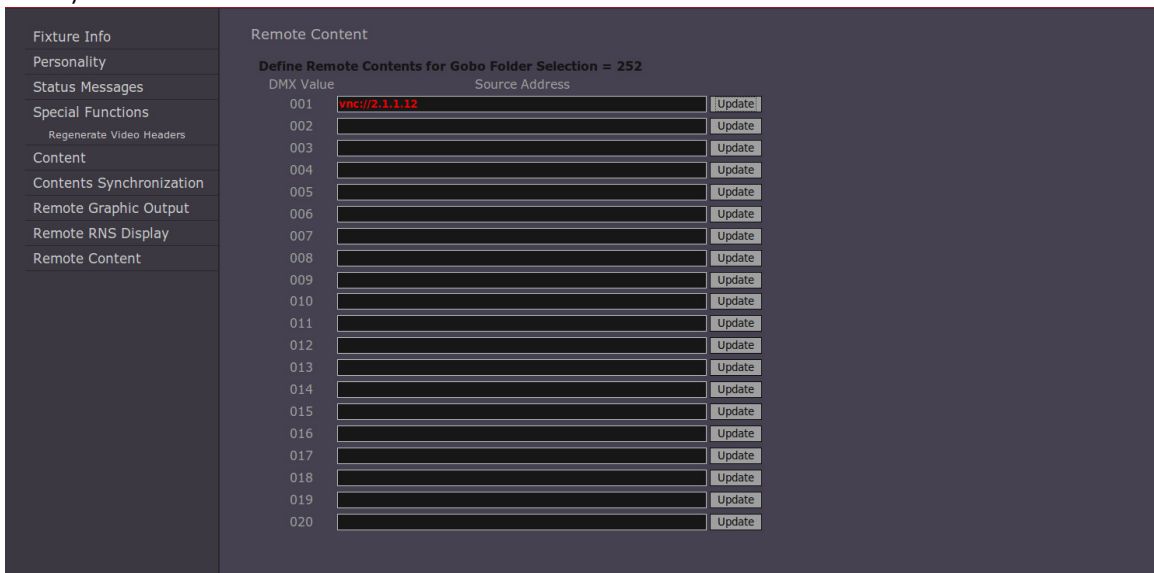


2. Streaming video server

The Streaming video software stated on the pictures below is available at <http://www.videolan.org/vlc/>. Download VLC media player from this web page and install it on your streaming source (PC, notebook..). Here are important installation points how to prepare a video processing on gobo layers from a remote streaming video source in the fixture.


Streaming source (here is an example for PC running Windows XP)

1. Download the VLC media player to the PC (Windows self-extracting package 0.8.6f),
2. Set PC network card for Art-Net network:
 - Menu path: "Start" --> "Control Panel" --> "Network Connection" --> "Connection"


DigitalSpot 3000 DT II

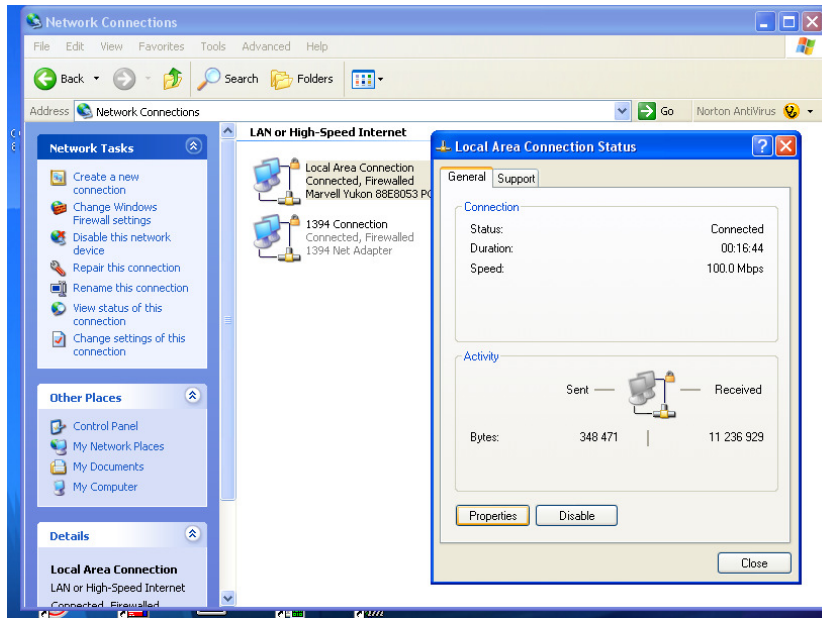

- Click on the "Properties" button and the following window will open.

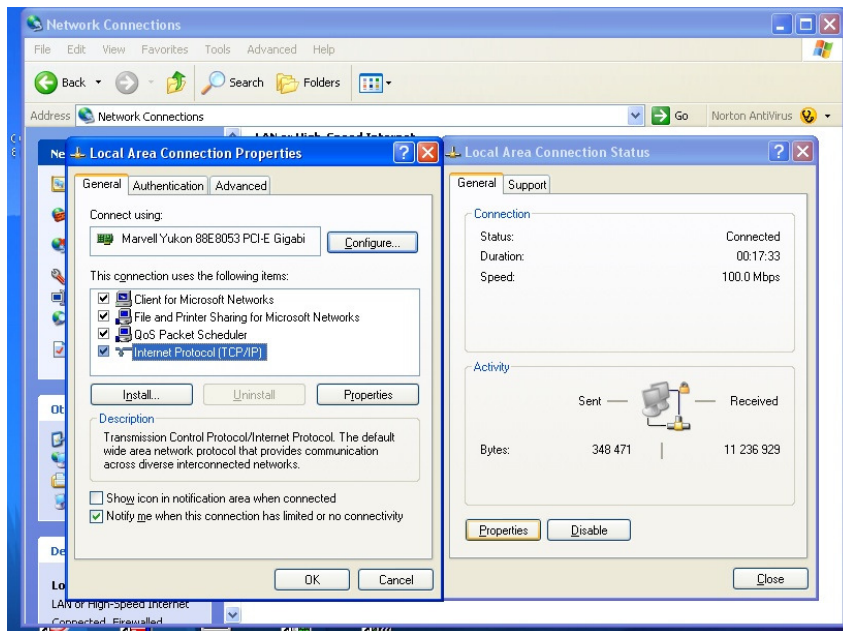


- Click on the item "Internet Protocol (TCP/IP)" and the Internet Protocol Properties window will open. Set IP address to something like 2.X.X.X with an IP mask of 255.0.0.0

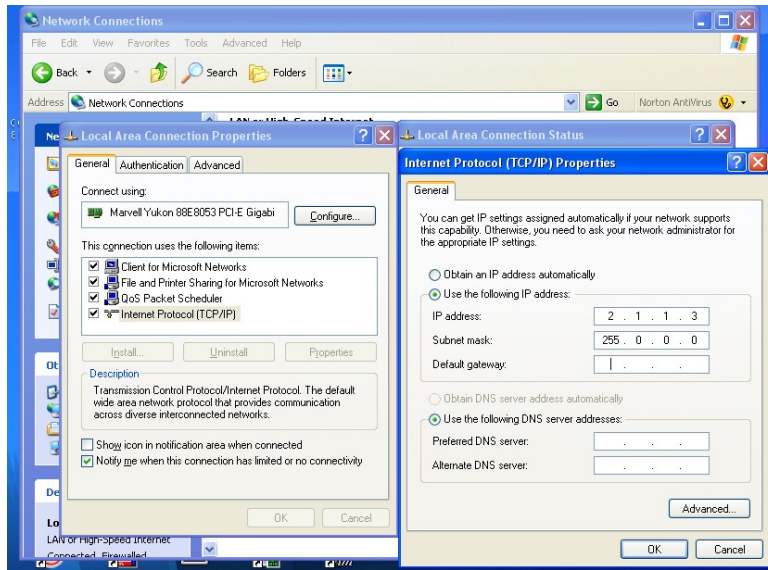


3. Install a VLC media player-

- click on a VLC media player self-extracting package located on the hard disk and follow the on-screen instructions. After installing it, run this VLC media player. In a horizontal menu "File" click on "Open" and the following window will open.

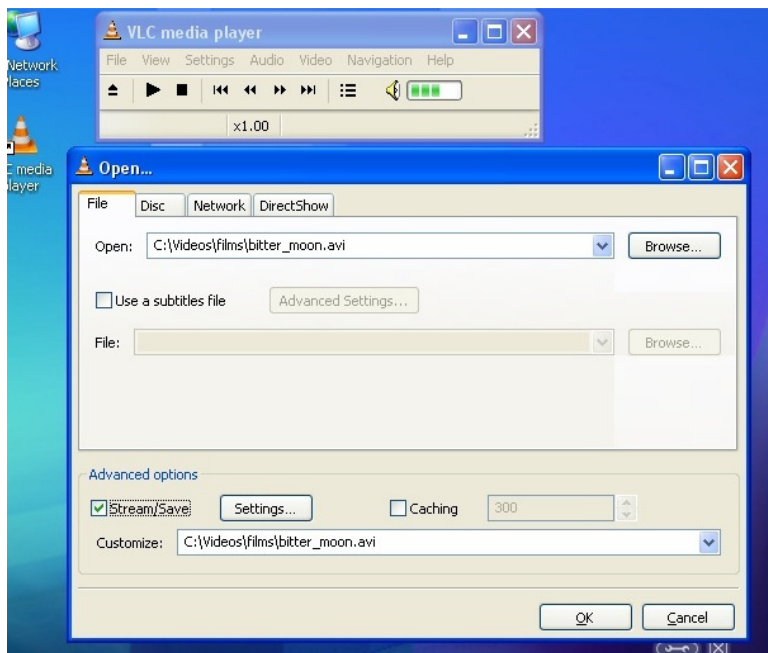

Type the name of video file in the "Open" field, check the "Stream/Save" option and click the "Settings" button. The "Stream output" window will open:

DigitalSpot 3000 DT II

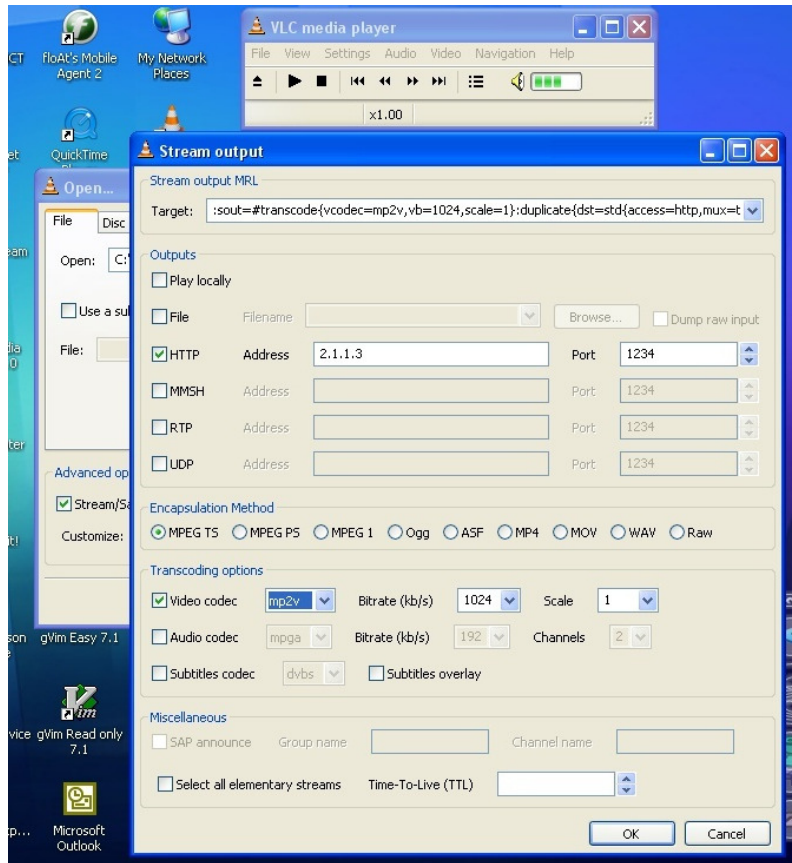

Check the "HTTP" option in a Outputs column, type an IP address of the PC in the "Address" field and a figure port in the "port" field.

Note: If you want to run more videos on this PC, you have to run the VLC media player for each video and every media player has to have a different figure of the port but the IP address will be the same.

Select the MPGTS or MPEGPS option in the "Encapsulation method" row. Check the "Video codec" option and select mp2v. In the field "Bitrate kb/s" set value of 1024 or higher.

The Bitrate is the number of kbits that are conveyed or processed per second. The higher is the number, the higher is the quality of the projected image. For streaming of desktop we recommend the bitrate of 8192.

Click the "OK" button and confirm the "Open" window.

The VLC media player is now ready for playing up the video sequences.




PC Desktop streaming

The desktop streaming enables you to sent your presentation directly to the DigitalSpot 3000 DT II via an ethernet network. You do not need extra cables for connecting video inputs of the DigitalSpot 3000 DT II with your PC.


A different setting of VLC media player for streaming of the PC desktop is required. Type the following line in the "Customize" field of the Open window:

screen:// screen-fps=10 :screen-caching=100

Space

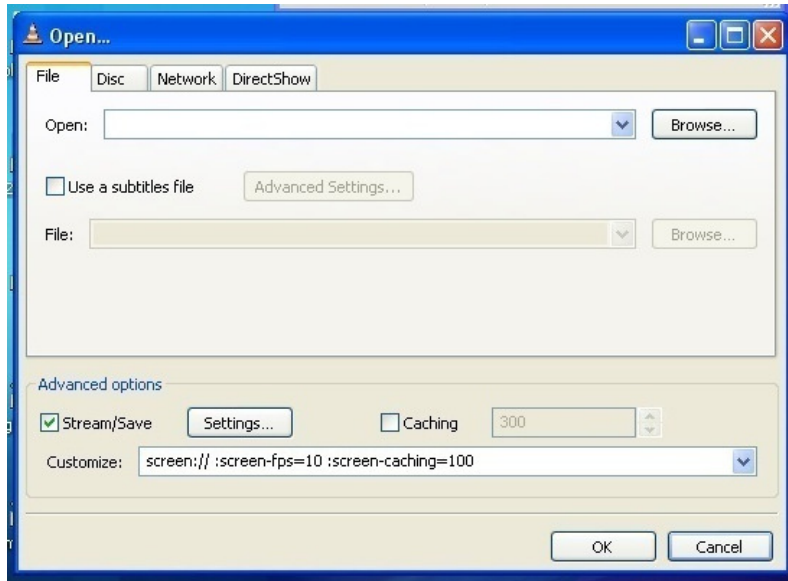


The Stream output window has the same setting like for video streaming except the field "Bitrate (kb/s)" which should be set at the value of 8192.

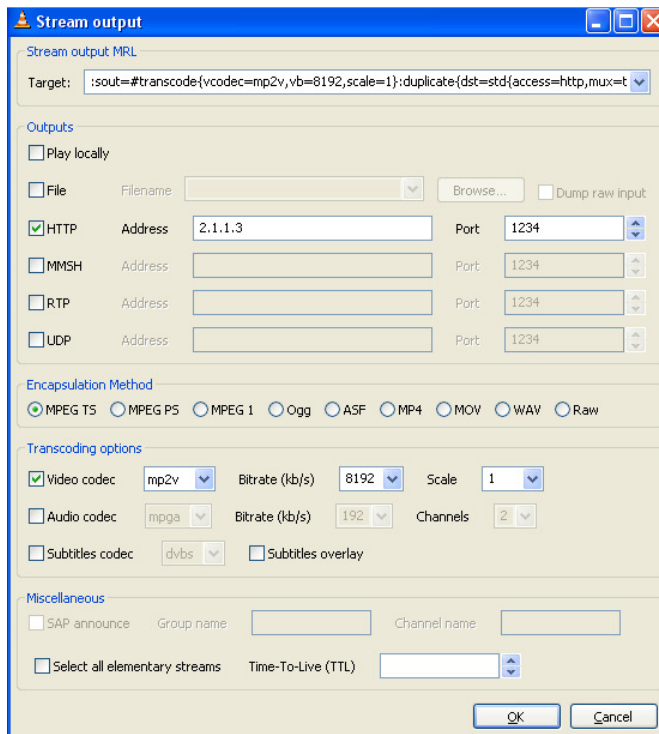

Important: The *Playback speed* channel at corresponding gobo layer should be set at a DMX value of 150-200.

Control PC (light console)

Type the IP address of the DigitalSpot 3000 DT II which is to project data from a remote streaming video source in your WWW browser to run the Remote Control program.
 Select the option "Remote Content" and the following window will open:

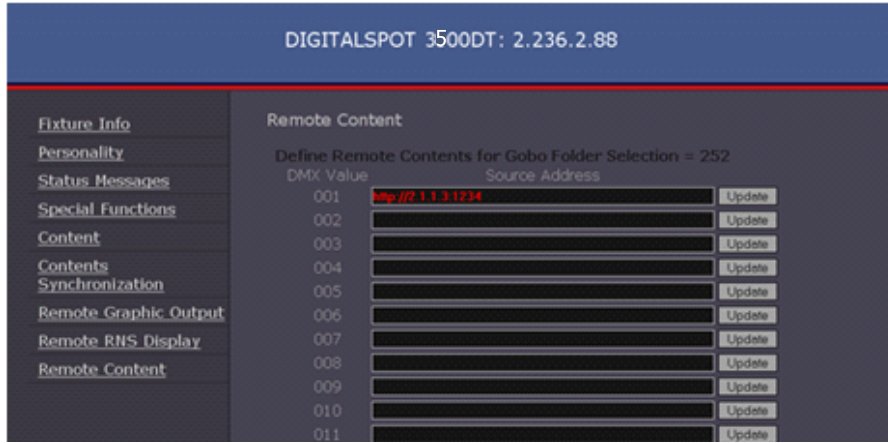

Type in the "source Address" field the IP address and the port number of the streaming source (in our case it is a PC) in this format: http://2.x.x.x:port number e.g. http://2.1.1.3:1234 and save it by clicking the "Update" button. This way defined streaming source is assigned to a DMX value of 1 at the channel **Gobo selection**. You can define another videos from the same streaming source - the IP addresses will be the same for all videos only the port numbers have to be different. After specifying all streaming sources close the "Remote Content" window.

To run a video processing on the fixture


On The DigitalSpot 3000 DT II which is to project video data from a streaming video source, set the channel **Gobo folder selection** at value of 252 and on the following channel "Gobo selection" set a DMX value which responds to the streaming video source defined in the "Remote Content" window. The streaming video processing starts running with a delay of cca 10 seconds.

Example for gobo/video layer 1:

| Channel | DMX Value | Function | Type of control |
|---------|----------------------------------|---|-----------------|
| 54 | 0-20 | <u>Gobo Folder selection</u> | |
| | 21-240 | Factory folders | step |
| | 241-250 | User folders | step |
| | 251 | Reserved | |
| | 252 | Live input (grab. card)-see channel 55 | step |
| | 253-255 | Streaming from remote source Reserved | step |
| 55 | 0 | <u>Gobo selection</u> | step |
| | 1 - 255 | White | step |
| | | 255 Gobos/videos (one by one) | |
| | | <i>If Live input (251 DMX) is selected on channel 54:</i> | |
| | 0 | White screen | step |
| 1-20 | Video composite input-PAL system | step | |
| : | : | : | : |

DigitalSpot 3000 DT II

Fixture linkage:

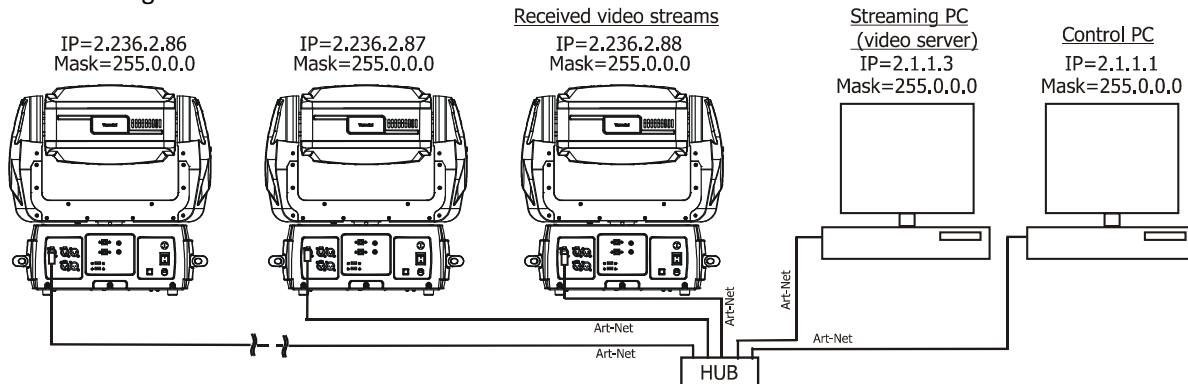

28. RDM

This fixture is ready for RDM operation. RDM (Remote Device Management) is a bi-directional communications protocol for use in DMX512 control systems, it is the new open standard for DMX512 device configuration and status monitoring.

The RDM protocol allows data packets to be inserted into a DMX512 data stream without adversely affecting existing non-RDM equipment. By using a special „Start Code,“ and by complying with the timing specifications for DMX512, the RDM protocol allows a console or dedicated RDM controller to send commands to and receive messages from specific moving lights.

RDM allows explicit commands to be sent to a device and responses to be received from it.

The ROBE DreamBox allows to utilize all DigitalSpot 3000 DT II RDM functionality. Please read the Robe Universal Interface user manual for detail description of RDM possibilities.

28.1 CITP/MSEX protocol

The fixture also supports CITP/MSEX protocol. It is an open protocol for integration of lighting controllers, media servers and visualizers on a higher-than-control level. It makes it possible to browse a media server with thumbnail previews of content as well as effects, to use the correct effect-specific parameter names while programming and to preview output from a controller or visualizer. It also allows bidirectional DMX, device selection and patch transfer to and from visualizers.

For more information see at <http://www.citp-protocol.org/>

This screenshot comes from Chamsys console MagicQ working together with the Robe DigitalSpot 7000DT.



DigitalSpot 3000 DT II

The CIP protocol allows to report folders for live input and streaming. These icons serves for thumbnails preview on the control console:



29. Technical specifications

Electrical specifications:

Auto-switching power supply

Input voltage range: 100-120V/ 200-240V AC, 50/ 60 Hz

Max. Power Consumption @ 230V: 400W/430VA (I=1.9A, power factor=0.93)

Projector Specifications:

Model MP670

Light output: 3200 ANSI lumens

Lamp: 230W

Rated lamp life: 3000/4000 hours (normal/eco mode)

Aspect ratio: 4:3

Resolution: XGA (1,024x768)

Image size 23" to 300"

Throw ratio: 1.93 - 2.16 : 1

Contrast ratio: 3000:1 (full on/full off)

Display technology: DLP by Texas Instruments

Display colours: Full 16.7 million colour palette

Hardware

Motherboard: Gigabyte G41M-ES2L

Processor: Intel Core 2 Duo E8400 3GHz, 1333 MHz FSB

Memory: 1GB RAM

Graphics card: Asus ENGT 240 DDR5

Video capture card AverMedia: DVD EZMaker

Hard disk: Western Digital Scorpio 320G

Gigabit Ethernet

Operation system

Linux OS

Graphic engine

3 Digital Gobo Layers for Image and Video Control

Layer Media Control Modes (Copy, Add, Subtract, Multi, Minimum and Maximum)

Banner Effects creating action scripts for Images or Videos

Graphic engine supports a combined total of more than 60,000 original and user-created videos/gobos usable on all gobo layers

Digital Iris effect + 160 Masking effects

Full Key-Stone correction

Digital strobe effect

CMY Image and Video Colour Mixing and CTC (Colour Temperature Correction)

2 Gobo (Image) Effect Engines per Layer

2 independent effect channels on each gobo layer with more than one hundred of effects

Huge amount of Default Images/Videos

Import of User Images or Videos

Supported Image Formats: BMP, JPG, TGA, PNG, GIF, PCX, PNM, XPM and LBM

Max. image resolution is limited to 4096x4096 pixel (since data projector works in 1024x768 pixel, therefore is recommended to convert the image to 1024x768 pixel if the picture merging is not used)

Supported Video Formats: MPEG1, MPEG2

Effect video synchronization

Preview of projecting output through interface

Picture Merging effect in the field up to 64 segments (non-mirrored configuration)

Projection on to cylindrical/spherical surfaces and angular screens

Video processing on all gobo layers from remote streaming video server

Control

5" TFT LCD display & Robe navigation system
Web access for total control of fixture (user library management)
Media Content Synchronization in web interface
Protocol USITT DMX 512
Support of CIP/MSEX protocol
136 control channels max.
RDM support

Pan/Tilt

Pan movement range: 530°
Tilt movement range: 280°
16 bit movement resolution
Controllable speed of Pan/Tilt movement
Automatic Pan/Tilt position correction
Built-in Pan/Tilt macro effects

Focus

Motorized

Shutter

Motorized

LedWash module

Light source: 48 Luxeon Rebel LEDs (12 red, 12 green, 12 blue, 12 white)
Optical system: 25° beam angle
RGB colour mixing
Shutter and adjustable strobe sequences
Full range dimming

Connections

video inputs: Data projector: 1 x S-Video (Mini Din 4 pin)
1 x Composite video (RCA)
Graphic Engine (standard): 1xS-Video (Mini Din 4 pin)
1x Composite video (RCA)
Graphic Engine (optional): DVI/ VGA or SDI/ASI
DMX data in/out: Locking 3-pin and 5-pin XLR
ArtNet: RJ 45 (Neutrik Ethercon)
AC power input: 1.3 m power cord without plug
2 x USB 2.0 (series A)

Environmental Specifications


Operating temperature range: 0° - 40°C
Maximum housing temperature: 60°C

Rigging

Mounting points: 2 pairs of ¼-turn locks
2 x Omega bracket with ¼-turn quick locks
Safety chain/cord attachment point

DigitalSpot 3000 DT II

Dimensions (mm)

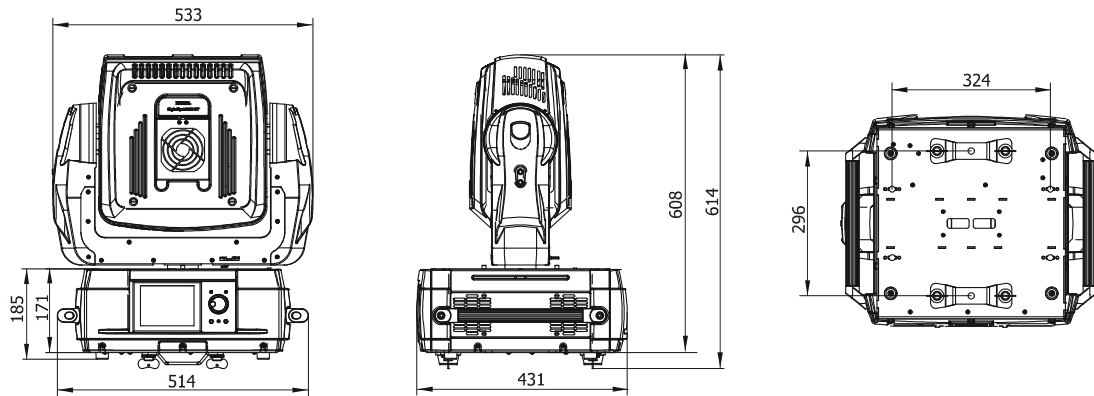

Weight

28 kg

Accessories

2x Omega holder (No.99010420)

1x USB 2.0 flash drive with a System recovery utility.

2x Adapter BNC/CINCH (No. 13051401)

Optional accessories

DVI/VGA capture card set (No. 99013073) – includes capture card DVI/VGA Unigraph and mounting accessories

SDI/ASI capture card set (No. 99013074) – includes capture card SDI/ASI DTA-145-SDP and mounting accessories

DVI-VGA DS 3500/3000 II/7100 capture card set (P.N.9901 3073) – includes capture card Ncast and mounting accessories

30. Error and information messages

The warning icon (triangle) on the bottom-right side of the fixture's screen indicates some error or information message which appears on the screen by pressing the [ESC] button.

Pan Error

The message will appear after the reset of the fixture if the yoke's magnetic-indexing circuit malfunctions (sensor failed or magnet is missing) or the stepping motor is defective or its driving IC3 on the PCB in the fixture base. The yoke is not located in the default position after the reset of the fixture.

Tilt Error

The message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet is missing) or the stepping motor is defective or its driving IC3 on the PCB in the fixture base. The head is not located in the default position after the reset of the fixture.

Focus Error

The message will appear after the reset of the fixture if the focus module's magnetic-indexing circuit malfunctions (sensor failed or magnet is missing) or the stepping motor is defective or its driving IC1 on the PCB in the fixture head. The focus is not located in the default position after the reset of the fixture.

Shutter Error

The message will appear after the reset of the fixture if the shutter's magnetic-indexing circuit malfunctions (sensor failed or magnet is missing) or the stepping motor is defective or its driving IC1 on the PCB in the fixture head. The shutter lamella is not located in the default position after the reset of the fixture.

Power Down Mode

The fixture is in "power down mode"- this mode omits fixture reset after switching it on, and reduces the power of motors. "Power down mode" is useful in special cases e. g. if the fixture is in a flight case and you want to set its DMX address without taking it out from the case. To enter „Power down mode“, press and hold [ENTER] button and at the same time switch on the power switch.

Now you can set DMX address and behaviour of the fixture by using menu "Personality". If you want to go to a "normal operation mode", run a total fixture reset.

Please Clean Air Filters

The message warns you that the time interval adjusted in the menu item Time To Cleanup Filters in the Service menu has expired and you should clean fixture's air filters.

Please Update HW Processors in Menu "Special Functions"

Run update of the hardware functions - see chapter "Special functions".

LED Temperature Sensor Open

The message informs you that there is not communication between the sensor measuring the temperature of the LED module and the control PCB. This connection is broken.

LED Temperature Sensor Short

The message informs you that there is not communication between the sensor measuring the temperature of the LED module and the control PCB. This connection is in short circuit.

Dataprojector Temp. Read Error

System message from dataprojector.

Dataprojector Power Failure

System message from dataprojector.

Dataprojector Abnormal Temperature

System message from dataprojector.

Dataprojector Lamp Failure

System message from dataprojector.

DMX Address Is Over Limit

The DMX start address is set to value that does not make possible receiving all DMX channels.

USB Communication Failure

The message signalizes problem with communication between PC motherboard and the motor driver board.

Network Communication Failure

The message signalizes problem with Ethernet interface on PC motherboard.

DP Filter Scroll Counter Warning


The message signalizes that Dataprojector Filter Scroll Counter comes at 0.

31. Maintenance


31.1 Replacing the lamp

Turn the power off and disconnect the fixture from the mains. **If the lamp is hot, avoid burns by waiting for approximately 45 minutes until the lamp has cooled.**


1. Remove the bottom cover/cover with air vents/ (1) of the fixture head by loosening the four quarter-turn fasteners (2).

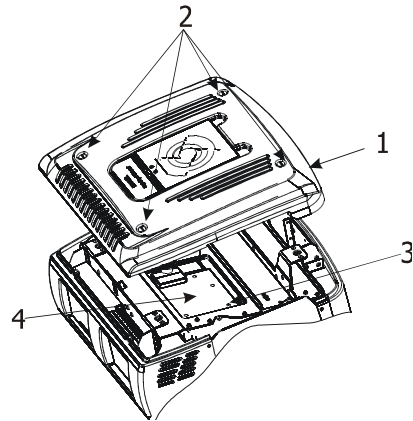


2. Loosen the two captive screws (3) on the lamp compartment cover. Remove the lamp compartment cover (4).

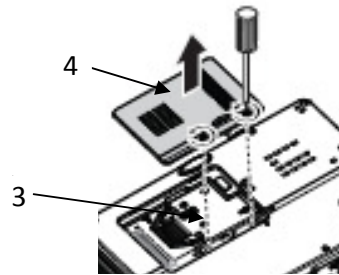

3. Loosen the two captive screws (5) that secure the lamp.
Notice: Do not turn the power on with the lamp cover removed. Do not insert your fingers between the lamp and the projector. The sharp edges inside the projector may cause injuries.

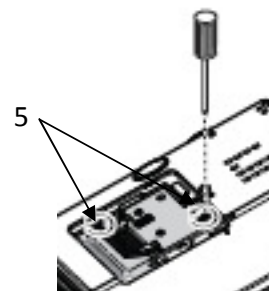


4. Lift the handle (6) so that it stands up. Use the handle to slowly pull the lamp out of the projector.
Pulling it too quickly may cause the lamp to break and scatter broken glass in the projector.
Do not place the lamp in locations where water might splash on it, or near flammable materials.
Do not insert your hands into the projector after the lamp is removed. If you touch the optical components inside, it could cause color unevenness and distortion of the projected images.

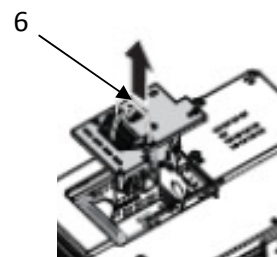

5. Insert the new lamp (7) into the lamp compartment and make sure it fits in the projector.

Ensure the connectors are aligned.


If you experience resistance, lift the lamp and start again.

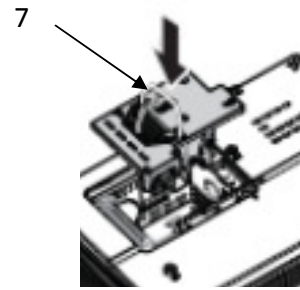

6. Tighten the screws (5) that secure the lamp.

Ensure the handle is fully laid flat and locked in place.

Loose screw may cause a bad connection, which could result in malfunction. Do not over tighten the screws.

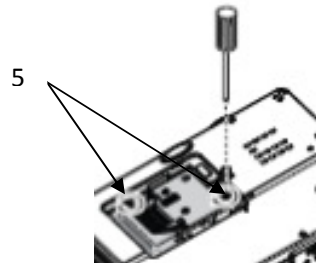


7. Replace the lamp cover on the projector and tighten the captive screws (3).

8. Switch on the fixture.

Note: Do not turn the power on with the lamp cover removed.


9. Reset the counter "Resetable Hours" in the "Lamp on Time" menu.
(Item "Service Menu" in the main menu)

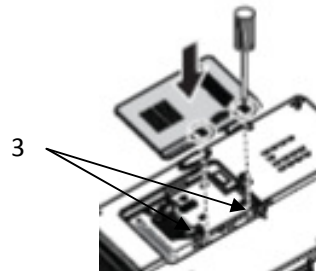


31.2 Replacing the projector

If you need to remove the data projector, turn the power off and disconnect the DigitalSpot 3000 DT II from the mains. If the projector lamp is on, wait 20 minutes until the projector has cooled.

1. Remove both covers (1) of the fixture head (2) by loosening the four quarter-turn fasteners (3) on each cover.

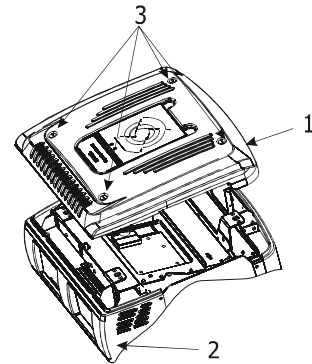


2. Remove the rear cover (4) by loosening the four screws (5) on the plastic cover and the four screws (6) on the rear cover chassis. Disconnect all power and data cables (7) from the rear panel of the projector.

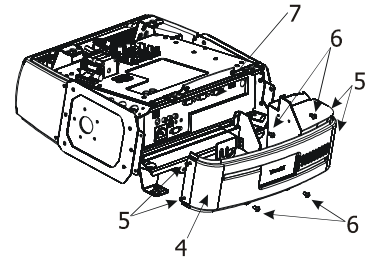


3. Tilt the head and unscrew the four screws (9) on the bottom side of the head that fastening the projector chassis (10) to the fixture head.

Warning:

The projector can fall out from the head if fastening screws (9) are missing from chassis.

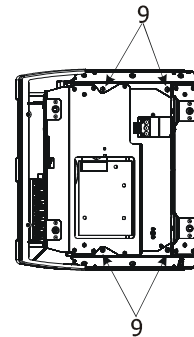

4. Disconnect cable from the focus driving motor and unscrew two fastening screws (8) which securing the motor and lift off the one. Carefully take out the projector (11) with chassis (10) from the head.

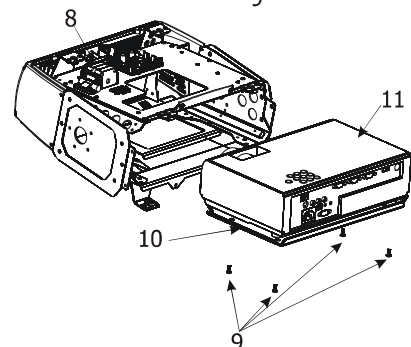


31.3 Replacing the air filters

Important! Check the air filters periodically and clean before they become clogged!

Clean the air filters with a vacuum cleaner or you can wash them and put back dry.


Replacing air filters in the fixture head.

- 1) Disconnect the fixture from power.
- 2) Raise up a filter cover (1) (fixed by two magnets) on the head cover
- 3) Pull the air filter (2) out.
- 4) Clean or replace the air filter.
- 5) Snap the filter cover back to the head cover.
- 6) Reset item "Time To Cleanup Filters" in the "Service menu".

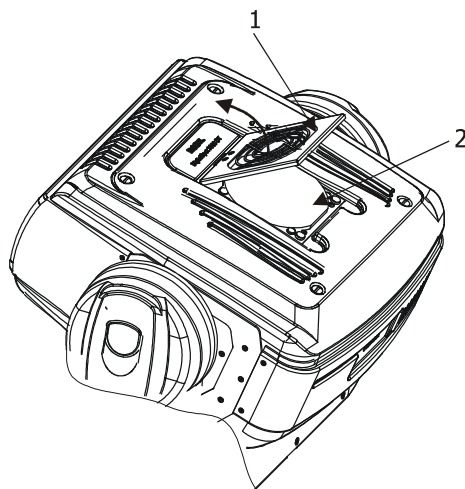

Replacing the air filter in the fixture base.

- 1) Disconnect the fixture from power.
- 2) Remove a side cover (2) by loosening the 4 quarter-turn fasteners (1).
- 3) Pull the air filter (3) out.
- 4) Clean or replace the air filter .
- 5) Put the side cover back.
- 6) Reset item "Time To Cleanup Filters" in the "Service menu".

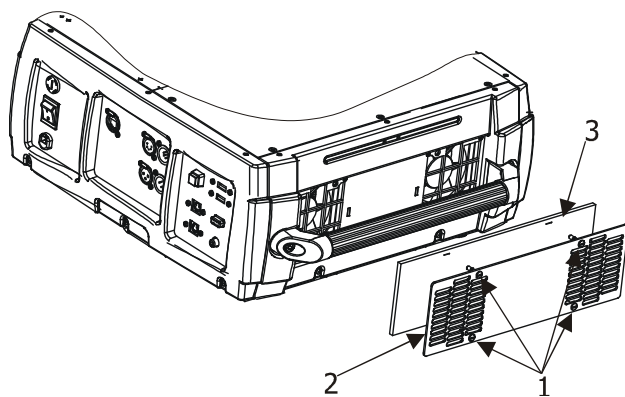

31.4 Replacing the fuse

Only replace the fuse by a fuse of same type and rating.

Before replacing the fuse, turn the power off and unplug the mains lead.

Procedure:

- 1) Unscrew the fuse holder on the rear panel of the base with a fitting screwdriver from the housing (anti - clockwise).
- 2) Remove the old fuse from the fuse holder.
- 3) Install the new fuse in the fuse holder.
- 4) Replace the fuse holder in the housing and fix it.

31.5 System restore

You can perform a system restore on the DigitalSpot 3000 DT II with your System Restore USB flash drive.

Warning.
The system restore replaces all fixture settings and the Media folder content.
This action return the device to a factory state.

For a system restore, you will need:

- the USB flash drive with a System restore utility (part of Digital 3000 DT II delivery)
- the USB keyboard

Use the following steps to perform a system restore:

1. Plug the USB flash drive with System restore utility and the USB keyboard into two external USB ports on the DigitalSpot 3000 DT II.
2. Power on the DigitalSpot 3000 DT II. When the fixture boots, press Delete key on the keyboard to enter the fixture's computer SETUP and set the boot from USB drive (Path: "Advanced Bios Features" --- >"1st boot device"---> "[USB]).
3. Save this setting and exit SETUP. The fixture continues booting, wait until you see a full-screen menu titled:

Image Manager for ROBE Digital Products
Options:
Write "rescue" for enter to Main Menu

4. Type the word **rescue** on the keyboard and the following screen will appear:


Options:
Restore From Backup
Restart

5. Select option "Restore From Backup" to start recovery process This process will take cca 5 minutes.
6. Select option "Restart" to restart the fixture. After a few minutes you may remove all your external USB devices. Now the fixture is in a factory state and you should perform update (if required) of graphical software, HW processors and media content to the current state.

31.6 Installing the DVI/VGA capture card

To install the DVI/VGA capture card:

1. Disconnect the fixture from power.
2. Remove both top covers of the fixture base by unscrewing 14 fastening screws.
3. Remove the shield cover (1) by loosening three screws (2).

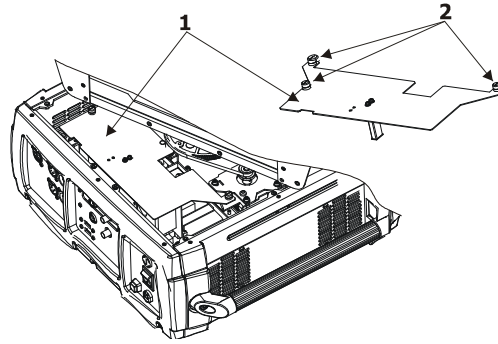


4. Disconnect data cables from the video capture card, take the card out of PCI slot and remove the S-video/Composite connectors holder (3) by unscrewing the two screws M3x10 (4).

Note: in the case that this connectors holder will be installed back on the rear panel, it is very important to keep the following order of the insulating and metal washers:

1. Insulating plastic washers (5)
2. S-video/Composite connectors holder (3)
3. Insulating plastic washers (6)
4. Metal washers (7)
5. M3 nuts (8)


Warning: The S-video/Composite connectors holder has to be electrically insulated from the rear panel otherwise the capture card can be damaged.

Check proper placing of the insulating washers.

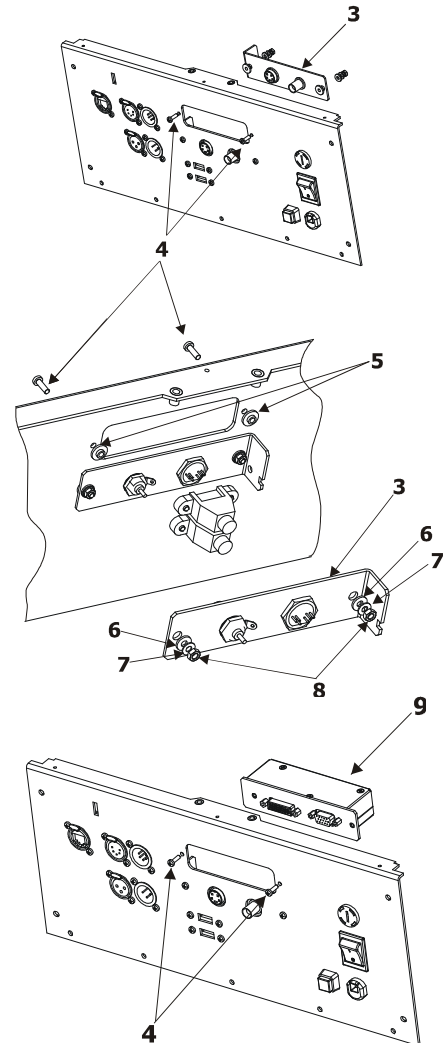


5. Screw the DVI/VGA connectors holder (9) on the rear panel with two screws M3x10 (4).
6. Remove the capture card from its packaging and gently press it down into the PCI slot. Secure the bracket of the card to the chassis by means of the M3 screw.

7. Connect a VGA and DVI cable to the capture card.
8. Remove the original supporting spacer holder (10) from the shield cover (1) by unscrewing two M3x8 screws and screw the new one (11).

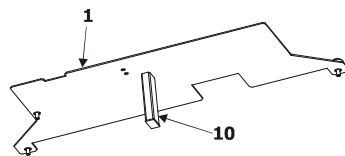


9. Place back and fasten the shield cover and top covers .
10. After switching the fixture on, the new capture card should be ready for operation.

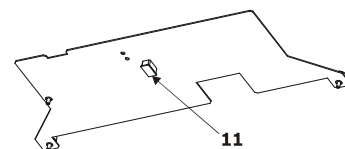

31.7 Installing the SDI/ASI capture card

To install the SDI/ASI capture card:

1. Disconnect the fixture from power.
2. Remove both top covers of the fixture base by unscrewing 14 fastening screws.
3. Remove the shield cover (1) by loosening the 3 screws (2).

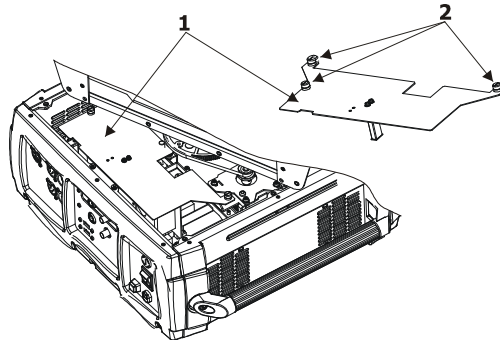


4. Disconnect data cables from the video capture card, take card out of the PCI slot and remove the S-video/Composite connectors holder (3) by unscrewing the two screws M3x10 (4).


Note: in the case that this connectors holder will be installed back on the rear panel, it is very important to keep the following order of the insulating and metal washers:

1. Insulating plastic washers (5)
2. S-video/Composite connectors holder (3)
3. Insulating plastic washers (6)
4. Metal washers (7)
5. M3 nuts (8)

Warning: The S-video/Composite connectors holder has to be electrically insulated from the rear panel otherwise the capture card can be damaged. Check proper placing of the insulating washers.

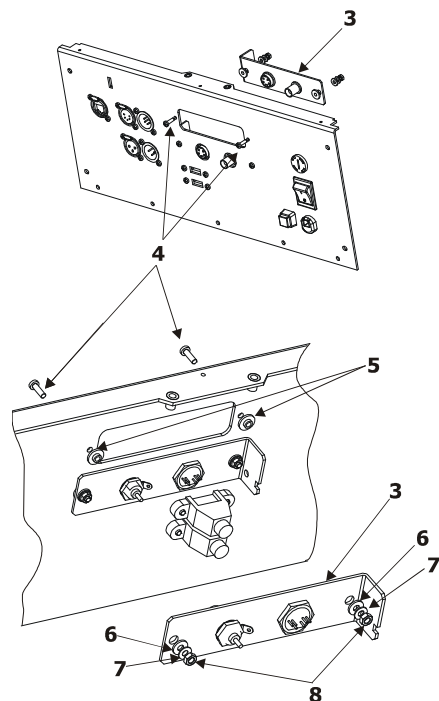

5. Screw the SDI/ASI connectors holder (9) on the rear panel with two screws M3x10 (4).
6. Remove the capture card from its packaging and gently press it down into the PCI slot. Secure the bracket of the card to the chassis by means of the M3 screw.

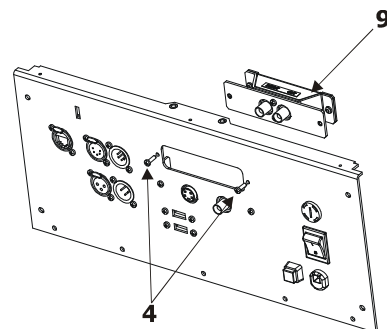

7. Connect the SDI/ASI cables to the capture card. The IN/OUT cable has a blue sleeve at BNC connector and the OUT cable has a red one. BNC sockets on the capture card are marked $\text{---}(\bullet)\text{---}\rightarrow$ (OUT) and $\text{---}\leftarrow(\bullet)\text{---}$ (IN/OUT).
8. Place back and fasten the shield cover and top covers .
9. After switching the fixture on, the new capture card should be ready for operation.

31.8 Cleaning

Turn the power off and disconnect the fixture from the mains. before starting cleaning procedure.

It is absolutely essential that the fixture is kept clean and that dust, dirt and smoke-fluid residues must not build up on or within the fixture. Otherwise, the fixture's light-output will be significantly reduced. Regular cleaning will not only ensure the maximum light-output, but will also allow the fixture to function reliably throughout its life.

A soft lint-free cloth moistened with any good glass cleaning fluid is recommended, under no circumstances should alcohol or solvents be used!

DANGER !
***Disconnect from the mains before starting any
cleaning and maintenance work***

The front covering glasses will require weekly cleaning as smoke-fluid tends to building up residues, reducing the light output very quickly.

The cooling fans should be cleaned monthly.

The interior of the fixture should be cleaned at least annually using a vacuum-cleaner or an air-jet.

More complicated maintenance and service operations are only to be carried out by authorized dealers.

Cleaning a projection lens of the projector.

Apply a non-abrasive camera lens cleaner to a soft, dry cleaning cloth. Avoid using an excessive amount of cleaner. Abrasive cleaners, solvents or other harsh chemicals might scratch a surface. Lightly wipe a cleaning cloth over projection lens.

| DigitalSpot 3000 DT II - DMX protocol v. 1.2; April, 2012 | | | |
|--|---|---|------------------------|
| DMX Channel | DMX Value | Function | Type of control |
| 1 | | Pan | |
| | 0-255 | Pan movement by 530° | proportional |
| 2 | | Pan Fine | |
| | 0-255 | Fine control of pan movement | proportional |
| 3 | | Tilt | |
| | 0-255 | Tilt movement by 280° | proportional |
| 4 | | Tilt Fine | |
| | 0-255 | Fine control of tilt movement | proportional |
| 5 | | Pan/Tilt speed,Pan/Tilt time | |
| | 0 | Max.speed (tracking mode) | step |
| | 1-255 | <i>P./T. speed-set Speed Mode in menu: Pan/Tilt Mode</i> Speed from max. to min.(vector mode) | step |
| | 1-255 | <i>P./T. time-set Time Mode in menu: Pan/Tilt Mode</i> Time from 0.1s to 25.5s | step |
| 6 | | Pan/Tilt macro selection | |
| | 0-9 | Disabled pan/tilt macro | step |
| | 10-31 | Reserved | |
| | 32-63 | Figure of circle (from small to large) | proportional |
| | 64-95 | Figure of horizontal eight (from small to large) | proportional |
| | 96-127 | Figure of vertical eight (from small to large) | proportional |
| | 128-159 | Figure of reactangle (from small to large) | proportional |
| | 160-191 | Figure of triangle (from small to large) | proportional |
| | 192-223 | Figure of star (from small to large) | proportional |
| 224-255 | Figure of cross (from small to large) | proportional | |
| 7 | | Pan/Tilt macro speed | |
| | 0 | No macro | step |
| | 1-127 | Macro generation from fast to slow (forwards) | proportional |
| | 128-129 | No macro | step |
| 130-255 | Macro generation from slow to fast (backwards) | proportional | |
| 8 | | Power/Special functions | |
| | 0-39 | Reserved | |
| | | To activate following function, the LED Shutter (channel 16) must be at range 240-250 DMX. | |
| | 40-44 | Internal Hardware (PC) reset | step |
| | 45-49 | Wake On DMX | step |
| | | To activate following functions,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 33 must be at 255 DMX).Corresponding menu items are temporarily overridden | |
| | 50-59 | Pan/Tilt speed mode | step |
| | 60-69 | Pan/Tilt time mode | step |
| | 70-79 | Blackout while pan/tilt moving | step |
| | 80-89 | Disabled blackout while pan/tilt moving | step |
| | | Only if signal goes throughthe graphics engine: | |
| | 90-94 | Ceiling projection On** | step |
| | 95-99 | Ceiling projection Off** | step |
| | 100-104 | Rear projection On** | step |
| | 105-109 | Rear projection Off** | step |
| | ** Option is valid if signal goes throught graphics engine only | | |
| 110-114 | DMX In | step | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control |
|-------------|-----------|--|-----------------|
| | 115-119 | Artnet In | step |
| | 120-129 | Reserved | |
| 8 | | To activate following function,hold DMX value 3 seconds | |
| | 130-139 | Lamp On | step |
| | 140-149 | Pan/Tilt reset | step |
| | 150-179 | Reserved | |
| | 180-189 | Focus reset | step |
| | 190-199 | Reserved | step |
| | 200-209 | Total reset | step |
| | 210-215 | Graphic engine reset/software update executing | step |
| | 216-229 | Reserved | |
| | 230-239 | Lamp Off | step |
| | 240-249 | Lamp Off,Fixture Off (<i>hold DMX value 5 seconds</i>) | step |
| | 250-255 | Reserved | |
| 9 | | Video input selection | |
| | 0-63 | Internal graphic engine | step |
| | 64-127 | External Composite to projector | step |
| | 128-191 | External S-video to projector | step |
| | 192-255 | Reserved | |
| 10 | | Focus | |
| | 0-255 | Continuous adjustment from far to near (128-default) | proportional |
| 11 | | Fine Focus | |
| | 0-255 | Fine adjustment (128-default) | proportional |
| 12 | | Red LEDs | |
| | 0-255 | Red LEDs saturation control 0 --> 100 % | proportional |
| 13 | | Green LEDs | |
| | 0-255 | Green LEDs saturation control 0 --> 100 % | proportional |
| 14 | | Blue LEDs | |
| | 0-255 | Blue LEDs saturation control 0 --> 100 % | proportional |
| 15 | | White LEDs | |
| | 0-255 | White LEDs saturation control 0 --> 100 % | proportional |
| 16 | | LED shutter and strobe | |
| | 0-31 | Shutter closed | step |
| | 32-63 | Shutter open | step |
| | 64-95 | Strobe effect, slow --> fast | proportional |
| | 96-127 | Shutter open | step |
| | 128-143 | Opening pulses in sequences, slow --> fast | proportional |
| | 144-159 | Closing pulses in sequences, fast --> slow | proportional |
| | 160-191 | Shutter open | step |
| | 192-223 | Random strobe-effects, slow --> fast | proportional |
| | 224-255 | Shutter open | step |
| 17 | | LED Dimmer | |
| | 0-255 | Led module dimmer intensity 0 --> 100 % | proportional |
| 18 | | KeyStone Top Left X | |
| | 0-255 | Move top left corner X value to center (0-default) | proportional |
| 19 | | KeyStone Top Left Y | |
| | 0-255 | Move top left corner Y value to center (0-default) | proportional |
| 20 | | KeyStone Top Right X | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control |
|---|-----------|--|-----------------|
| | 0-255 | Move top right corner X value to center (0-default) | proportional |
| 21 | | KeyStone Top Right Y | |
| | 0-255 | Move top right corner Y value to center (0-default) | proportional |
| 22 | | KeyStoneBottom Right X | |
| | 0-255 | Move bottom right corner X value to center (0-default) | proportional |
| 23 | | KeyStone Bottom Right Y | |
| | 0-255 | Move bottom right corner Y value to center (0-default) | proportional |
| 24 | | KeyStone Bottom Left X | |
| | 0-255 | Move bottom left corner X value to center (0-default) | proportional |
| 25 | | KeyStone Bottom Left Y | |
| | 0-255 | Move bottom left corner Y value to center (0-default) | proportional |
| 26 | | KeyStone X-ratio | |
| | 0-127 | Ratio control from left to center | proportional |
| | 128 | Center (default) | step |
| | 129-255 | Ratio control from center to right | proportional |
| 27 | | KeyStone Y-ratio | |
| | 0-127 | Ratio control from bottom to center | proportional |
| | 128 | Center (default) | step |
| | 129-255 | Ratio control from center to top | proportional |
| Common effects for all gobo layers | | | |
| 28 | | Cyan | |
| | 0-255 | Cyan continuously (0-white,255-full cyan) | proportional |
| 29 | | Magenta | |
| | 0-255 | Magenta continuously (0-white,255-full magenta) | proportional |
| 30 | | Yellow | |
| | 0-255 | Yellow continuously (0-white,255-full yellow) | proportional |
| 31 | | CTF | |
| | 0 | Without CTF | step |
| | 1 | 14000 K | step |
| | 2 | 13000 K | step |
| | 3 | 12500 K | step |
| | 4 | 12000 K | step |
| | 5 | 11500 K | step |
| | 6 | 11000 K | step |
| | 7 | 10500 K | step |
| | 8 | 10000 K | step |
| | 9 | 9500 K | step |
| | 10 | 9000 K | step |
| | 11 | 8600 K | step |
| | 12 | 8575 K | step |
| | 13 | 8550 K | step |
| | : | : | : |
| | 255 | 2500 K | step |
| 32 | | Digital Iris-type selection | |
| | 0 | Circular ,outside-->in,sharp edge | step |
| | 1 | Circular ,outside-->in,fuzzy edge 1 | step |
| | 2 | Circular ,outside-->in,fuzzy edge 2 | step |
| | 3 | Circular ,outside-->in,fuzzy edge 3 | step |
| | 4 | Circular ,outside-->in,fuzzy edge 4 (maximum) | step |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control |
|-------------|-----------|---|-----------------|
| 32 | 5 | Circular ,inside-->out,sharp edge | step |
| | 6 | Circular ,inside-->out,fuzzy edge 1 | step |
| | 7 | Circular ,inside-->out,fuzzy edge 2 | step |
| | 8 | Circular ,inside-->out,fuzzy edge 3 | step |
| | 9 | Circular ,inside-->out,fuzzy edge 4 (maximum) | step |
| | 10 | Horizontal ellipse ,outside-->in,sharp edge | step |
| | 11 | Horizontal ellipse ,outside-->in,fuzzy edge 1 | step |
| | 12 | Horizontal ellipse ,outside-->in,fuzzy edge 2 | step |
| | 13 | Horizontal ellipse ,outside-->in,fuzzy edge 3 | step |
| | 14 | Horizontal ellipse ,outside-->in,fuzzy edge 4 (maximum) | step |
| | 15 | Horizontal ellipse ,inside-->out,sharp edge | step |
| | 16 | Horizontal ellipse ,inside-->out,fuzzy edge 1 | step |
| | 17 | Horizontal ellipse ,inside-->out,fuzzy edge 2 | step |
| | 18 | Horizontal ellipse ,inside-->out,fuzzy edge 3 | step |
| | 19 | Horizontal ellipse ,inside-->out,fuzzy edge 4 (maximum) | step |
| | 20 | Vertical ellipse ,outside-->in,sharp edge | step |
| | 21 | Vertical ellipse ,outside-->in,fuzzy edge 1 | step |
| | 22 | Vertical ellipse ,outside-->in,fuzzy edge 2 | step |
| | 23 | Vertical ellipse ,outside-->in,fuzzy edge 3 | step |
| | 24 | Vertical ellipse ,outside-->in,fuzzy edge 4 (maximum) | step |
| | 25 | Vertical ellipse ,inside-->out,sharp edge | step |
| | 26 | Vertical ellipse ,inside-->out,fuzzy edge 1 | step |
| | 27 | Vertical ellipse ,inside-->out,fuzzy edge 2 | step |
| | 27 | Vertical ellipse ,inside-->out,fuzzy edge 3 | step |
| | 29 | Vertical ellipse ,inside-->out,fuzzy edge 4 (maximum) | step |
| | 30 | Clockwise wipe,sharp edge | step |
| | 31 | Clockwise wipe,fuzzy edge 1 | step |
| | 32 | Clockwise wipe,fuzzy edge 2 | step |
| | 33 | Clockwise wipe,fuzzy edge 3 | step |
| | 34 | Clockwise wipe,fuzzy edge 4 (maximum) | step |
| | 35 | Anticlockwise wipe,sharp edge | step |
| | 36 | Anticlockwise wipe,fuzzy edge 1 | step |
| | 37 | Anticlockwise wipe,fuzzy edge 2 | step |
| | 38 | Anticlockwise wipe,fuzzy edge 3 | step |
| | 39 | Anticlockwise wipe,fuzzy edge 4 (maximum) | step |
| | 40 | Wedge wipe ,top-->down, sharp edge | step |
| | 41 | Wedge wipe ,top-->down, fuzzy edge 1 | step |
| | 42 | Wedge wipe ,top-->down, fuzzy edge 2 | step |
| | 43 | Wedge wipe ,top-->down, fuzzy edge 3 | step |
| | 44 | Wedge wipe ,top-->down, fuzzy edge 4 (maximum) | step |
| | 45 | Wedge wipe ,bottom-->up, sharp edge | step |
| | 46 | Wedge wipe ,bottom-->up, fuzzy edge 1 | step |
| | 47 | Wedge wipe ,bottom-->up, fuzzy edge 2 | step |
| | 48 | Wedge wipe ,bottom-->up, fuzzy edge 3 | step |
| | 49 | Wedge wipe ,bottom-->up, fuzzy edge 4 (maximum) | step |
| | 50 | Radial wipe ,left -->bottom,sharp edge | step |
| | 51 | Radial wipe ,left -->bottom,fuzzy edge 1 | step |
| | 52 | Radial wipe ,left -->bottom,fuzzy edge 2 | step |
| | 53 | Radial wipe ,left -->bottom,fuzzy edge 3 | step |
| | 54 | Radial wipe ,left -->bottom,fuzzy edge 4 (maximum) | step |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control |
|-------------|---|---|-----------------|
| 32 | 55 | Radial wipe ,bottom-->left,sharp edge | step |
| | 56 | Radial wipe ,bottom-->left,fuzzy edge 1 | step |
| | 57 | Radial wipe ,bottom-->left,fuzzy edge 2 | step |
| | 58 | Radial wipe ,bottom-->left,fuzzy edge 3 | step |
| | 59 | Radial wipe ,bottom-->left,fuzzy edge 4 (maximum) | step |
| | 60 | Radial wipe ,top-->left,sharp edge | step |
| | 61 | Radial wipe ,top-->left,fuzzy edge 1 | step |
| | 62 | Radial wipe ,top-->left,fuzzy edge 2 | step |
| | 63 | Radial wipe ,top-->left,fuzzy edge 3 | step |
| | 64 | Radial wipe ,top-->left,fuzzy edge 4 (maximum) | step |
| | 65 | Radial wipe ,left-->top,sharp edge | step |
| | 66 | Radial wipe ,left-->top,fuzzy edge 1 | step |
| | 67 | Radial wipe ,left-->top,fuzzy edge 2 | step |
| | 68 | Radial wipe ,left-->top,fuzzy edge 3 | step |
| | 69 | Radial wipe ,left-->top,fuzzy edge 4 (maximum) | step |
| | 70 | Vertical barn-doors,outside-->in,sharp edge | step |
| | 71 | Vertical barn-doors,outside-->in,fuzzy edge 1 | step |
| | 72 | Vertical barn-doors,outside-->in,fuzzy edge 2 | step |
| | 73 | Vertical barn-doors,outside-->in,fuzzy edge 3 | step |
| | 74 | Vertical barn-doors,outside-->in,fuzzy edge 4 (maximum) | step |
| | 75 | Vertical barn-doors,inside-->out,sharp edge | step |
| | 76 | Vertical barn-doors,inside-->out,fuzzy edge 1 | step |
| | 77 | Vertical barn-doors,inside-->out,fuzzy edge 2 | step |
| | 78 | Vertical barn-doors,inside-->out,fuzzy edge 3 | step |
| | 79 | Vertical barn-doors,inside-->out,fuzzy edge 4 (maximum) | step |
| | 80 | Horizontal barn-doors,outside-->in,sharp edge | step |
| | 81 | Horizontal barn-doors,outside-->in,fuzzy edge 1 | step |
| | 82 | Horizontal barn-doors,outside-->in,fuzzy edge 2 | step |
| | 83 | Horizontal barn-doors,outside-->in,fuzzy edge 3 | step |
| | 84 | Horizontal barn-doors,outside-->in,fuzzy edge 4 (maximum) | step |
| | 85 | Horizontal barn-doors,inside-->out,sharp edge | step |
| | 86 | Horizontal barn-doors,inside-->out,fuzzy edge 1 | step |
| 87 | Horizontal barn-doors,inside-->out,fuzzy edge 2 | step | |
| 88 | Horizontal barn-doors,inside-->out,fuzzy edge 3 | step | |
| 89 | Horizontal barn-doors,inside-->out,fuzzy edge 4 (maximum) | step | |
| 90 | Horizontal one-way band wipe,top left-->bottom right | step | |
| 91 | Horizontal one-way band wipe,bottom right-->top left | step | |
| 92 | Horizontal one-way band wipe,top right-->bottom left | step | |
| 93 | Horizontal one-way band wipe,bottom left-->top right | step | |
| 94 | Horizontal two-way band wipe,top left-->bottom right | step | |
| 95 | Horizontal two-way band wipe,bottom right-->top left | step | |
| 96 | Horizontal two-way band wipe,top right-->bottom left | step | |
| 97 | Horizontal two-way band wipe,bottom left-->top right | step | |
| 98 | Vertical one-way band wipe,top left-->bottom right | step | |
| 99 | Vertical one-way band wipe,bottom right-->top left | step | |
| 100 | Vertical one-way band wipe,bottom left-->top right | step | |
| 101 | Vertical one-way band wipe,top right-->bottom left | step | |
| 102 | Vertical two-way band wipe,top right-->bottom left | step | |
| 103 | Vertical two-way band wipe,bottom right-->top left | step | |
| 104 | Vertical two-way band wipe,bottom left-->top right | step | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control |
|-------------|--|--|-----------------|
| 32 | 105 | Vertical two-way band wipe,top right-->bottom left | step |
| | 106 | Horizontal bands 4x,top-->bottom | step |
| | 107 | Horizontal bands 4x,bottom-->top | step |
| | 108 | Vertical bands 4x,left -->right | step |
| | 109 | Vertical bands 4x,right -->left | step |
| | 110 | Horizontal bands 8x,top-->bottom | step |
| | 111 | Horizontal bands 8x,bottom-->top | step |
| | 112 | Vertical bands 8x,left-->right | step |
| | 113 | Vertical bands 8x,right-->left | step |
| | 114 | Horizontal bands 16x,top-->bottom | step |
| | 115 | Horizontal bands 16x,bottom-->top | step |
| | 116 | Vertical bands 16x,left-->right | step |
| | 117 | Vertical bands 16x,right-->left | step |
| | 118 | Horizontal bands 32x,top-->bottom | step |
| | 119 | Horizontal bands 32x,bottom-->top | step |
| | 120 | Vertical bands 32x,left-->right | step |
| | 121 | Vertical bands 32x,right-->left | step |
| | 122 | Horizontal crossing 4x | step |
| | 123 | Horizontal crossing 4x,inverse | step |
| | 124 | Vertical crossing 4x | step |
| | 125 | Vertical crossing 4x,inverse | step |
| | 126 | Horizontal crossing 8x | step |
| | 127 | Horizontal crossing 8x,inverse | step |
| | 128 | Vertical crossing 8x | step |
| | 129 | Vertical crossing 8x,inverse | step |
| | 130 | Horizontal crossing 16x | step |
| | 131 | Horizontal crossing 16x,inverse | step |
| | 132 | Vertical crossing 16x | step |
| | 133 | Vertical crossing 16x,inverse | step |
| | 134 | Checker wipe 3x4, left-->right | step |
| | 135 | Checker wipe 3x4, right-->left | step |
| | 136 | Checker wipe 4x4, left-->right | step |
| 137 | Checker wipe 4x4, right-->left | step | |
| 138 | Checker wipe 5x8, left-->right | step | |
| 139 | Checker wipe 5x8, right-->left | step | |
| 140 | Checker wipe 9x8, left-->right | step | |
| 141 | Checker wipe 9x8, right-->left | step | |
| 142 | Checker wipe 9x16, left-->right | step | |
| 143 | Checker wipe 9x16, right-->left | step | |
| 144 | Checker wipe 10x32, left-->right | step | |
| 145 | Checker wipe 10x32, right-->left | step | |
| 146 | 2 diagonal curtains, bottom left-->center<-- top right | step | |
| 147 | 2 diagonal curtains, top left-->center<-- bottom right | step | |
| 148 | Grid wipe 8x8,bottom right-->top left | step | |
| 149 | Grid wipe 8x8,bottom right-->top left,inverse | step | |
| 150 | Grid wipe 8x8,top right-->bottom left | step | |
| 151 | Grid wipe 8x8,top right-->bottom left,inverse | step | |
| 152 | Grid wipe 16x16,bottom right-->top left | step | |
| 153 | Grid wipe 16x16,bottom right-->top left,inverse | step | |
| 154 | Grid wipe 16x16,top right-->bottom left | step | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control |
|-------------|---|--|-----------------|
| 32 | 155 | Grid wipe 16x16,top right-->bottom left,inverse | step |
| | 156 | Grid wipe 32x32,bottom right-->top left | step |
| | 157 | Grid wipe 32x32,bottom right-->top left,inverse | step |
| | 158 | Grid wipe 32x32,top right-->bottom left | step |
| | 159 | Grid wipe 32x32,top right-->bottom left,inverse | step |
| | 160 | 4 sliding triangles | step |
| | 161-169 | Reserved | |
| | 170 | Rectangular ,outside-->in,sharp edge | step |
| | 171 | Rectangular ,outside-->in,fuzzy edge 1 | step |
| | 172 | Rectangular , outside-->in,fuzzy edge 2 | step |
| | 173 | Rectangular ,outside-->in,fuzzy edge 3 | step |
| | 174 | Rectangular ,outside-->in,fuzzy edge 4 (maximum) | step |
| | 175 | Rectangular ,inside-->out,sharp edge | step |
| | 176 | Rectangular ,inside-->out,fuzzy edge 1 | step |
| | 177 | Rectangular ,inside-->out,fuzzy edge 2 | step |
| | 178 | Rectangular ,inside-->out,fuzzy edge 3 | step |
| | 179 | Rectangular ,inside-->out,fuzzy edge 4 (maximum) | step |
| 180-255 | Reserved | | |
| 33 | | Digital Iris | |
| | 0 | Open iris | step |
| | 1-254 | From max. diameter to min. diameter | proportional |
| | 255 | Closed iris | step |
| 34 | | Digital Iris fine | |
| | 0-255 | Iris fine | proportional |
| 35 | | Digital strobe | |
| | 0 - 30 | Open light output | step |
| | 31 - 80 | Digital strobe-effect from slow to fast | proportional |
| | 81 - 110 | Open light output | step |
| | 111 - 140 | Random digital strobe-effect from slow to fast | proportional |
| | 141 - 149 | Open light output | step |
| | 150 - 154 | Iris displays current gobo from gobo layer 1 | step |
| | 155 - 159 | Iris displays current gobo from gobo layer 2 | step |
| | 160 - 164 | Iris displays current gobo from gobo layer 3 | step |
| | 165 - 189 | Reserved | |
| | 190-194 | Banner displays current gobo from gobo layer 1 | step |
| | 195-199 | Banner displays current gobo from gobo layer 2 | step |
| | 200 - 204 | Banner displays current gobo from gobo layer 3 | step |
| | 205-239 | Reserved | |
| | 240-244 | Digital strobe open/Mechanical shutter closed | step |
| 245-249 | Digital strobe closed/ Mechanical shutter open | step | |
| 250-255 | Digital strobe closed/Mechanical shutter closed | step | |
| 36 | | Banner left positioning | |
| | 0-255 | Positioning from left to right (0-default) | proportional |
| 37 | | Banner left rotation | |
| | 0-255 | Rotation +/- 45° (128-default) | proportional |
| 38 | | Banner right positioning | |
| | 0-255 | Positioning from right to left (0-default) | proportional |
| 39 | | Banner right rotation | |
| | 0-255 | Rotation +/- 45° (128-default) | proportional |

| DMX Channel | DMX Value | Function | Type of control |
|-------------|-----------|---|-----------------|
| 40 | | Banner top positioning | |
| | 0-255 | Positioning from top to bottom (0-default) | proportional |
| 41 | | Banner top rotation | |
| | 0-255 | Rotation +/- 45° (128-default) | proportional |
| 42 | | Banner bottom positioning | |
| | 0-255 | Positioning from bottom to top (0-default) | proportional |
| 43 | | Banner bottom rotation | |
| | 0-255 | Rotation +/- 45° (128-default) | proportional |
| 44 | | All Banners rotation | |
| | 0-255 | Rotation +/- 45° (128-default) | proportional |
| 45 | | Global Effect 1 | |
| | 0 | No effect | |
| | | <u>Picture merging -selection of width of overlapping edges:</u> | |
| | 1 | Width of overlapping edges -10 % | P1, P2, P3 |
| | 2 | Width of overlapping edges - 0 % | P1, P2, P3 |
| | 3 | Width of overlapping edges - 15 % | P1, P2, P3 |
| | 4 | Width of overlapping edges - 20 % | P1, P2, P3 |
| | 5 | Width of overlapping edges - 25 % | P1, P2, P3 |
| | 6 | Width of overlapping edges - 30 % | P1, P2, P3 |
| | 7 | Width of overlapping edges - 35 % | P1, P2, P3 |
| | 8-10 | Reserved | |
| | | <u>Picture merging -selection of width of overlapping edges for pre-cut content mode:</u> | |
| | 11 | Width of overlapping edges -10 % | P1, P2, P3 |
| | 12 | Width of overlapping edges - 0 % | P1, P2, P3 |
| | 13 | Width of overlapping edges - 15 % | P1, P2, P3 |
| | 14 | Width of overlapping edges - 20 % | P1, P2, P3 |
| | 15 | Width of overlapping edges - 25 % | P1, P2, P3 |
| | 16 | Width of overlapping edges - 30 % | P1, P2, P3 |
| | 17 | Width of overlapping edges - 35 % | P1, P2, P3 |
| | | <i>P1- field configuration, P2- segment selection, P3- segment edge</i> | |
| 18-255 | Reserved | | |
| 46 | | Global effect 1- Parameter 1 | |
| | 0 | None | |
| | | <u>Image field configuration for Picture merging</u> | |
| | 1-109 | Non-mirrored configurations | step |
| | 110-127 | Reserved | |
| | 128-163 | Horizontally mirrored configurations | step |
| | 164-199 | Vertically mirrored configurations | step |
| | 200-235 | Horizontally and vertically mirrored configurations | step |
| 236-255 | Reserved | | |
| 47 | | Global effect 1- Parameter 2 | |
| | 0-255 | <u>Segment selection for Pixture merging</u> | step |
| 48 | | Global effect 1- Parameter 3 | |
| | 0-170 | <u>Segment edge display for Pixture merging</u> | step |
| | 171-180 | Showing aspect ratio of image projected on the wall | step |
| | 181-255 | Reserved | |
| 49 | | Global Effect 2 | |
| | 0 | None | |
| | 1 | Vertical inside corner mapping | P1, P2,P3 |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control |
|---------------------|-----------|--|-------------------|
| | 2 | Vertical outside corner mapping | P1, P2,P3 |
| | 3 | Horizontal inside corner mapping | P1, P2,P3 |
| | 4 | Horizontal outside corner mapping | P1, P2,P3 |
| | 5 | Vertical convex cylinder mapping | P1, P2,P3 |
| | 6 | Vertical concave cylinder mapping | P1, P2,P3 |
| | 7 | Horizontal convex cylinder mapping | P1, P2,P3 |
| | 8 | Horizontal concave cylinder mapping | P1, P2,P3 |
| | 9 | Orthographic sphere mapping | P1, P2,P3 |
| | 10 | Rectangle on circle (sphere) mapping* | P1, P2,P3 |
| | 11 | Square on circle (sphere) mapping* | P1, P2,P3 |
| | 12 | Rectangle on circle (sphere) mapping with picture merging | P1, P2,P3 |
| | 13-19 | Reserved | |
| | 20 | Picture merging - R/G/B gamma adjustment in blended edges <i>P 1- red, P 2 - green, P 3- blue</i> | P1, P2,P3 |
| | 21-255 | Reserved | |
| 50 | | Global Effect 2 - Parameter 1 | |
| | 0-255 | Function depends on selected Global Effect 2 | depends on effect |
| 51 | | Global Effect 2 - Parameter 2 | |
| | 0-255 | Function depends on selected Global Effect 2 | depends on effect |
| 52 | | Global Effect 2 - Parameter 3 | |
| | 0-255 | Function depends on selected Global Effect 2 | depends on effect |
| Gobo layer 1 | | | |
| 53 | | Dimmer | |
| | 0-255 | Dimmer intensity from 0% to 100% (255-default) | proportional |
| 54 | | Gobo Folder selection | |
| | 0-20 | Factory folders | step |
| | 21-240 | User folders | step |
| | 241-250 | Reserved | |
| | 251 | Live input (grab. card)-see channel 55 | step |
| | 252 | Streaming from remote sources | step |
| | 253-255 | Reserved | |
| 55 | | Gobo selection | |
| | 0 | White | step |
| | 1-255 | 255 Gobos (one by one) | step |
| | | If Live input (251 DMX) is selected on channel 54 | |
| | 0 | White screen | step |
| | 1-20 | Video composite input-PAL system | step |
| | 21-40 | SVIDEO input- PAL system | step |
| | 21-60 | Video composite input-NTSC system | step |
| | 61-80 | SVIDEO input- NTSC system | step |
| | 81-100 | Video composite input-SECAM system | step |
| | 101-120 | SVIDEO input- SECAM system | step |
| | 121-140 | Reserved | |
| | | If Grabber Card is installed in the fixture | |
| | 141-160 | VGA input of DVI/VGA grabber card | step |
| | 161-180 | DVI-I input of DVI/VGA grabber card | step |
| | 181-200 | SDI input of SDI/ASI grabber card | step |
| | 201-220 | ASI input of SDI/ASI grabber card | step |
| 221-255 | Reserved | | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control |
|-------------|---|---|-----------------|
| 56 | | In Frame High | |
| | 0-255 | Defines the beginning of a media file segment as a percentage of the movie length (0-default) | proportional |
| 57 | | In Frame Low | |
| | 0-255 | Defines the beginning of a media file segment as a percentage of the movie length (0-default) | proportional |
| 58 | | Out Frame High | |
| | 0-255 | Defines the end of a media file segment as a percentage of the movie length (255-default) | proportional |
| 59 | | Out Frame Low | |
| | 0-255 | Defines the beginning of a media file segment as a percentage of the movie length (255-default) | proportional |
| 60 | | Gobo control | |
| | | <u>Copy mode</u> | |
| | | <i>Video stream 1:</i> | |
| | 0 | Play forward if dimmer (on layer 1) > 0, looping continuously | step |
| | 1 | Play forward if dimmer (on layer 1) > 0, hold on last frame | step |
| | 2 | Pause | step |
| | 3 | Play forward in continuous loop | step |
| | 4 | Play forward once and hold on the last frame | step |
| | 5 | No function | |
| | 6 | Scrub (Display) the selected In Frame | step |
| | 7 | Scrub (Display) the selected Out Frame | step |
| | 8-9 | Reserved | |
| | | <i>Video stream 2 (the same functionality as for Video stream 1):</i> | |
| | 10 | Play forward if dimmer (on layer 1) > 0, looping continuously | step |
| | 11 | Play forward if dimmer (on layer 1) > 0, hold on last frame | step |
| | 12 | Pause | step |
| | 13 | Play forward in continuous loop | step |
| | 14 | Play forward once and hold on the last frame | step |
| | 15 | No function | |
| | 16 | Scrub (Display) the selected In Frame | step |
| | 17 | Scrub (Display) the selected Out Frame | step |
| | 18-19 | Reserved | |
| | | <u>Addition mode</u> | |
| | | <i>Video stream 1:</i> | |
| | 20 | Play forward if dimmer (on layer 1) > 0, looping continuously | step |
| | 21 | Play forward if dimmer (on layer 1) > 0, hold on last frame | step |
| | 22 | Pause | step |
| | 23 | Play forward in continuous loop | step |
| | 24 | Play forward once and hold on the last frame | step |
| | 25 | No function | |
| | 26 | Scrub (Display) the selected In Frame | step |
| | 27 | Scrub (Display) the selected Out Frame | step |
| 28-29 | Reserved | | |
| | <i>Video stream 2:</i> | | |
| 30-37 | <i>The same functionality as for Video stream 1</i> | step | |
| 38-39 | Reserved | | |
| | <u>Substraction mode</u> | | |
| | <i>Video stream 1:</i> | | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control |
|-------------|--|---|-----------------|
| 60 | 40 | Play forward if dimmer (on layer 1) > 0, looping continuously | step |
| | 41 | Play forward if dimmer (on layer 1) > 0, hold on last frame | step |
| | 42 | Pause | step |
| | 43 | Play forward in continuous loop | step |
| | 44 | Play forward once and hold on the last frame | step |
| | 45 | No function | |
| | 46 | Scrub (Display) the selected In Frame | step |
| | 47 | Scrub (Display) the selected Out Frame | step |
| | 48-49 | Reserved | |
| | | <i>Video stream 2:</i> | |
| | 50-57 | <i>The same functionality as for Video stream 1</i> | step |
| | 58-59 | Reserved | |
| | | <u>Multiplication mode</u> | |
| | | <i>Video stream 1:</i> | |
| | 60 | Play forward if dimmer (on layer 1) > 0, looping continuously | step |
| | 61 | Play forward if dimmer (on layer 1) > 0, hold on last frame | step |
| | 62 | Pause | step |
| | 63 | Play forward in continuous loop | step |
| | 64 | Play forward once and hold on the last frame | step |
| | 65 | No function | |
| | 66 | Scrub (Display) the selected In Frame | step |
| | 67 | Scrub (Display) the selected Out Frame | step |
| | 68-69 | Reserved | |
| | | <i>Video stream 2:</i> | |
| | 70-77 | <i>The same functionality as for Video stream 1</i> | step |
| | 78-79 | Reserved | |
| | | <u>Minimum mode</u> | |
| | | <i>Video stream 1:</i> | |
| | 80 | Play forward if dimmer (on layer 1) > 0, looping continuously | step |
| | 81 | Play forward if dimmer (on layer 1) > 0, hold on last frame | step |
| | 82 | Pause | step |
| | 83 | Play forward in continuous loop | step |
| | 84 | Play forward once and hold on the last frame | step |
| | 85 | No function | |
| | 86 | Scrub (Display) the selected In Frame | step |
| | 87 | Scrub (Display) the selected Out Frame | step |
| | 88-89 | Reserved | |
| | | <i>Video stream 2:</i> | |
| | 90-97 | <i>The same functionality as for Video stream 1</i> | |
| | 98-99 | Reserved | |
| | | <u>Maximum mode</u> | |
| | | <i>Video stream 1:</i> | |
| | 100 | Play forward if dimmer (on layer 1) > 0, looping continuously | step |
| | 101 | Play forward if dimmer (on layer 1) > 0, hold on last frame | step |
| | 102 | Pause | step |
| | 103 | Play forward in continuous loop | step |
| | 104 | Play forward once and hold on the last frame | step |
| | 105 | No function | |
| | 106 | Scrub (Display) the selected In Frame | step |
| 107 | Scrub (Display) the selected Out Frame | step | |

| DMX Channel | DMX Value | Function | Type of control |
|-------------|-----------------|---|-----------------|
| | 108-109 | Reserved | |
| | | <i>Video stream 2:</i> | |
| | 110-117 | <i>The same functionality as for Video stream 1</i> | step |
| | 118-255 | Reserved | |
| 61 | | Playback Speed | |
| | 0 | Normal Speed | step |
| | 1-127 | Slow speeds from slowest ---> normal | proportional |
| | 128 | Normal Speed | step |
| | 129-255 | Faster than Normal ---> Fastest | proportional |
| 62 | | Gobo rotation and indexing | |
| | 0-63 | Clockwise rotation from fast to slow | proportional |
| | 64-127 | Indexing | proportional |
| | 128 | No rotation-centre (128-default) | step |
| | 129-192 | Indexing | proportional |
| | 193-255 | Anticlockwise rotation from slow to fast | proportional |
| 63 | | Gobo fine indexing (rotation) | |
| | 0-255 | Fine indexing (rotation) | proportional |
| 64 | | Gobo effect 1 Selection | |
| | 0 | No effect | |
| | 1 | Zoom sinus | P1-speed |
| | 2 | Zoom bump in fade out | P1-speed |
| | 3 | Zoom fade in bump out | P1-speed |
| | 4 | Reserved | |
| | 5 | Zoom in fade | P1-speed |
| | 6 | Zoom out fade | P1-speed |
| | 7 | Scale xy sinus | P1-speed |
| | 8 | Reserved | |
| | 9 | Reserved | |
| | 10 | Reserved | |
| | 11 | XY pos. circle counter-clockwise | P1-speed |
| | 12 | XY pos. circle clockwise | P1-speed |
| | 13 | XY pos. scroll up | P1-speed |
| | 14 | XY pos. scroll down | P1-speed |
| | 15 | XY pos. scroll left | P1-speed |
| | 16 | XY pos. scroll right | P1-speed |
| | 17 | Right-left diag. down scroll | P1-speed |
| | 18 | Right-left diag. up scroll | P1-speed |
| | 19 | Left-right diag. down scroll | P1-speed |
| | 20 | Left-right diag. up scroll | P1-speed |
| | 21 | X rotate | P1-speed |
| | 22 | Y rotate | P1-speed |
| | 23 | XY rotate | P1-speed |
| | 24 | XY inv. rotate | P1-speed |
| | 25 | X inv. y rotate | P1-speed |
| | 26 | Tile xy | P1-amount |
| | 27 | Tile xy | P1-speed |
| | 28 | XYZ rot. cube | P1-speed |
| | 29 | XYZ rot. sphere | P1-speed |
| | 30 | X rot. cylinder | P1-speed |
| 31 | Y rot. cylinder | P1-speed | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control | | | | | | | |
|-------------|-------------------------------|------------------------------|--|-----------|-----------|--|--|-----------|-----------|------|
| 64 | 32 | Reserved | | | | | | | | |
| | 33 | Kaleidoscope | none | | | | | | | |
| | 34 | Squeeze in | none | | | | | | | |
| | 35 | Squeeze out | none | | | | | | | |
| | 36 | Bend X | none | | | | | | | |
| | 37 | Bend Y | none | | | | | | | |
| | 38 | Tile frame | none | | | | | | | |
| | 39 | Frame | none | | | | | | | |
| | 40 | Plane Flip X | none | | | | | | | |
| | 41 | Plane Flip Y | none | | | | | | | |
| | 42 | Plane Flip XY | none | | | | | | | |
| | 43 | Plane mirror X top | none | | | | | | | |
| | 44 | Plane mirror X bottom | none | | | | | | | |
| | 45 | Plane mirror Y left | none | | | | | | | |
| | 46 | Plane mirror Y right | none | | | | | | | |
| | 47 | Plane mirror XY segment 1 | <table border="1"> <tr> <td>segment 1</td> <td>segment 2</td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td>segment 4</td> <td>segment 3</td> </tr> </table> | segment 1 | segment 2 | | | segment 4 | segment 3 | none |
| | segment 1 | segment 2 | | | | | | | | |
| | | | | | | | | | | |
| | segment 4 | segment 3 | | | | | | | | |
| | 48 | Plane mirror XY segment 2 | none | | | | | | | |
| | 49 | Plane mirror XY segment 3 | none | | | | | | | |
| | 50 | Plane mirror XY segment 4 | none | | | | | | | |
| | 51 | Plane tile 2x | none | | | | | | | |
| | 52 | Plane tile 3x | none | | | | | | | |
| | 53 | Plane tile 4x | none | | | | | | | |
| | 54 | Plane tile 5x | none | | | | | | | |
| | 55 | Plane cross tile 2x | none | | | | | | | |
| | 56 | Plane cross tile 2x inverse | none | | | | | | | |
| | 57 | Plane cross tile 3x | none | | | | | | | |
| | 58 | Plane cross tile 3x inverse | none | | | | | | | |
| | 59 | Plane cross tile 4x | none | | | | | | | |
| | 60 | Plane cross tile 4x inverse | none | | | | | | | |
| | 61 | Plane cross tile 5x | none | | | | | | | |
| | 62 | Plane cross tile 5x inverse | none | | | | | | | |
| | 63 | Plane cross tiler 5x | none | | | | | | | |
| | 64 | Plane cross tiler 5x inverse | none | | | | | | | |
| | 65 | Plane bar | none | | | | | | | |
| | 66 | Plane bar inverse | none | | | | | | | |
| | 67 | Plane bar left-right | none | | | | | | | |
| | 68 | Plane bar top-bottom | none | | | | | | | |
| | 69 | Reserved | | | | | | | | |
| | 70 | Reserved | | | | | | | | |
| 71 | Gobo disc | none | | | | | | | | |
| 72 | Gobo disc Flip X | none | | | | | | | | |
| 73 | Gobo disc Flip Y | none | | | | | | | | |
| 74 | Gobo disc Flip XY | none | | | | | | | | |
| 75 | Gobo disc mirror X | none | | | | | | | | |
| 76 | Gobo disc mirror Y | none | | | | | | | | |
| 77 | Gobo disc mirror XY | none | | | | | | | | |
| 78-79 | Reserved | | | | | | | | | |
| 80 | Plane mirror X top inverse | none | | | | | | | | |
| 81 | Plane mirror X bottom inverse | none | | | | | | | | |
| 82 | Plane mirror Y left inverse | none | | | | | | | | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control | |
|-------------|--|--|-------------------|--|
| | 83 | Plane mirror Y right inverse | none | |
| | 84 | Plane mirror XY inverse | none | |
| | 85 | Plane mirror X-inverse,Y | none | |
| | 86 | Plane mirror X,Y-inverse | none | |
| | 87-89 | Reserved | | |
| | 90 | Circular effect (Fish eye) <i>P1-character, P2-X ratio, P3-Y ratio</i> | P1, P2, P3 | |
| | 91 | Iris on layer <i>P1-size, P2-iris type, P3-texture mode</i> | P1, P2, P3 | |
| | 92 | Auto Iris effect on layer <i>P1-speed, P2-mask type, P3-opening/closing command</i> | P1, P2, P3 | |
| | 93-94 | Reserved | | |
| | 95 | Zoom In/Move XY <i>P1-zoom, P2-X-movement, P3-Y-movement</i> | P1, P2, P3 | |
| | 96 | Zoom In/Auto Move XY <i>P1-zoom, P2-X-speed, P3- Y-speed</i> | P1, P2, P3 | |
| | 97-99 | Reserved | | |
| | kaleidoscope - mode and mosaic segment selection: | | | |
| | 100 | Square -static mode | P1, P2, P3 | |
| | 101 | Square -dynamic mode | P1, P2, P3 | |
| | 102 | Right triangular - static mode | P1, P2, P3 | |
| 103 | Right triangular - dynamic mode | P1, P2, P3 | | |
| 104 | Isosceles triangular - static mode | P1, P2, P3 | | |
| 105 | Isosceles triangular - dynamic mode | P1, P2, P3 | | |
| 106 | Triangular 1 - static mode | P1, P2, P3 | | |
| 107 | Triangular 1 -dynamic mode | P1, P2, P3 | | |
| 108 | Triangular 2 -static mode | P1, P2, P3 | | |
| 109 | Triangular 2 - dynamic mode | P1, P2, P3 | | |
| 110 | Centered kaleidoscope (rough)-static mode | P1, P2, P3 | | |
| 111 | Centered kaleidoscope (rough)-dynamic mode | P1, P2, P3 | | |
| 112 | Centered kaleidoscope (fine)-static mode | P1, P2, P3 | | |
| 113 | Centered kaleidoscope (fine)-dynamic mode <i>Stat. mode:P1-density, P2-content (coarse), P3-content (fine)</i> <i>Dyn. mode:P1-density, P2-size and pulsation, P3-movement</i> | P1, P2, P3 | | |
| 114-149 | Reserved | | | |
| 150 | Layer keystoneing <i>P1-skewing in X, P2-skewing in Y, P3-squeezing/stretching in Y</i> | P1,P2,P3 | | |
| 151-255 | Reserved | | | |
| 65 | | Gobo effect 1 - Parameter 1 | | |
| | 0-255 | Effect control | depends on effect | |
| 66 | | Gobo effect 1 - Parameter 2 | | |
| | 0-255 | Effect control | depends on effect | |
| 67 | | Gobo effect 1 - Parameter 3 | | |
| | 0-255 | Effect control | depends on effect | |
| 68 | | Gobo effect 2 Selection | | |
| | 0 | No effect | | |
| | 1 | Colour to black and white | P1-amount | |
| | 2 | Colour to black and white inverse | P1-amount | |
| | 3 | Black and white to black and white inverse | P1-amount | |
| | 4 | Inversion | P1-amount | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control | |
|-------------|-----------|--|-----------------------------|------------|
| 68 | 5 | Black Mask | P1-amount | |
| | 6 | Black Mask inverse | P1-amount | |
| | 7 | Contrast | P1-amount | |
| | 8 | Brightness | P1-amount | |
| | 9 | RGB to GBR | P1-amount | |
| | 10 | RGB to BRG | P1-amount | |
| | 11 | RGB to RBG | P1-amount | |
| | 12 | Black and white to black and white inverse timed | P1-speed | |
| | 13 | Colour to black and white timed | P1-speed | |
| | 14 | Colour to inverse timed | P1-speed | |
| | 15 | Cycle | P1-speed | |
| | 16 | Cycle inverse | P1-speed | |
| | 17 | Reserved | | |
| | 18 | Reserved | | |
| | 19 | Colour Key | P1-amount | |
| | 20 | Colour Key inverse | P1-amount | |
| | 21 | Key Black | P1-amount | |
| | 22 | Key Black inverse | P1-amount | |
| | 23 | Key White | P1-amount | |
| | 24 | Key White inverse | P1-amount | |
| | 25 | White flash | P1-amount | |
| | 26 | Black flash | P1-amount | |
| | 27 | Alpha flash | P1-amount | |
| | 28 | Invert flash | P1-amount | |
| | 29 | BW Flash | P1-amount | |
| | 30 | Black and white to black and white inverse Flash | P1-amount | |
| | 31 | Gradient Wipe X | P1-amount | |
| | 32 | Gradient Wipe Y | P1-amount | |
| | 33-39 | Reserved | | |
| | 40 | Gaussian filter | P1-amount | |
| | 41 | Mean filter | P1-amount | |
| | 42 | Laplacian filter | P1-amount | |
| | 43 | Emboss filter | P1-amount | |
| | 44 | Sharpness filter | P1-amount | |
| | 45-49 | Reserved | | |
| | | | RGB effects: | |
| | | 50 | RGB subtract All Pixels | P1, P2, P3 |
| | | 51 | RGB add All Pixels | P1, P2, P3 |
| | | 52 | RGB add non-black Pixels | P1, P2, P3 |
| | | 53 | RGB subtract/add All Pixels | P1, P2, P3 |
| | | 54 | Swap RGB to RBG | P1, P2, P3 |
| | | 55 | Swap RGB to GRB | P1, P2, P3 |
| | | 56 | Swap RGB to GBR | P1, P2, P3 |
| | | 57 | Swap RGB to BRG | P1, P2, P3 |
| | | 58 | Swap RGB to BGR | P1, P2, P3 |
| | | 59 | RGB invert | P1, P2, P3 |
| | | 60 | Invert and swap RGB to BRG | P1, P2, P3 |
| | | 61 | Invert and swap RGB to GBR | P1, P2, P3 |
| | | 62 | Colour to Alpha | P1, P2, P3 |
| | 63 | Colour to Alpha inverted | P1, P2, P3 | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control | |
|-------------|-----------|--|-----------------------------------|-------------------|
| | 64-67 | Reserved | | |
| | 68 | RGB scale <i>P1-red, P2-green, P3-blue</i> | P1, P2, P3 | |
| | 69 | Brightness scale <i>P1, P2 - inclination of conversion line</i> | P1, P2 | |
| | 70 | Swirl effect <i>P1-radius, P2-angle, P3-diagonal position</i> | P1, P2, P3 | |
| | 71 | Pixelation effect <i>P1-num. of pixels (X), P2-num. of pixels (Y), P3-position in X-axis</i> | P1, P2, P3 | |
| | 72 | Cross-stitching effect <i>P1-pattern density, P2-colour of stitch, P3- position in X-axis</i> | P1, P2, P3 | |
| | 73 | Posterization effect <i>P1-number of colours, P2-Gamma correction</i> | P1, P2 | |
| | 74-94 | Reserved | | |
| | 95 | Zoom In/Move XY <i>P1-zoom, P2-X-movement, P3-Y-movement</i> | P1, P2, P3 | |
| | 96 | Zoom In/Auto Move XY <i>P1-zoom, P2-X-speed, P3- Y-speed</i> | P1, P2, P3 | |
| | 97-149 | Reserved | | |
| | 150 | Layer keystoneing <i>P1-squeezing/stretching in X, P2/P3-compressing & expanding in X/Y</i> | P1,P2,P3 | |
| | 151-199 | Reserved | | |
| | 200 | Picture merging - R/G/B gamma adjustment in blended edges <i>P 1- red, P 2 - green, P 3- blue</i> | P1, P2,P3 | |
| | 201-255 | Reserved | | |
| | 69 | | Gobo effect 2 -Parameter 1 | |
| | | 0-255 | Effect control | depends on effect |
| | 70 | | Gobo effect 2 -Parameter 2 | |
| | | 0-255 | Effect control | depends on effect |
| | 71 | | Gobo effect 2 -Parameter 3 | |
| | | 0-255 | Effect control | depends on effect |
| 72 | | Gobo Position X coarse | | |
| | 0-127 | Movement forward | proportional | |
| | 128 | Centre (128-default) | step | |
| 73 | | Gobo position X fine | | |
| | 0-255 | Position X fine | proportional | |
| | 129-255 | Movement backward | proportional | |
| 74 | | Gobo position Y coarse | | |
| | 0-127 | Movement down | proportional | |
| | 128 | Centre (128-default) | step | |
| 75 | | Gobo position Y fine | | |
| | 0-255 | Position Y fine | proportional | |
| | 129-255 | Movement up | proportional | |
| 76 | | Gobo zoom X coarse | | |
| | 0-127 | Narrowing | proportional | |
| | 128 | Centre (128-default) | step | |
| | 129-255 | Widening | proportional | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control |
|---------------------|-----------------------------------|---|-----------------|
| 77 | | Gobo zoom X fine | |
| | 0-255 | Zoom X fine | proportional |
| 78 | | Gobo zoom Y coarse | |
| | 0-127 | Narrowing | proportional |
| | 128 | Centre (128-default) | step |
| | 129-255 | Widening | proportional |
| 79 | | Gobo zoom Y fine | |
| | 0-255 | Zoom Y fine | proportional |
| 80 | | Synchronization to ID | |
| | 0 | No function | step |
| | 1-255 | Synchronization to fixture ID | proportional |
| Gobo layer 2 | | | |
| 81 | | Dimmer | |
| | 0-255 | Dimmer intensity from 0% to 100% (255-default) | proportional |
| 82 | | Gobo Folder selection | |
| | 0-20 | Factory folders | step |
| | 21-240 | User folders | step |
| | 241-250 | Reserved | |
| | 251 | Live input (grab. card)-see channel 83 | step |
| | 252 | Streaming from remote sources | step |
| | 253-255 | Reserved | |
| 83 | | Gobo selection | |
| | 0 | White | step |
| | 1-255 | 255 Gobos (one by one) | step |
| | | <i>If Live input (251 DMX) is selected on channel 82:</i> | |
| | 0 | White screen | step |
| | 1-20 | Video composite input-PAL system | step |
| | 21-40 | SVIDEO input- PAL system | step |
| | 21-60 | Video composite input-NTSC system | step |
| | 61-80 | SVIDEO input- NTSC system | step |
| | 81-100 | Video composite input-SECAM system | step |
| | 101-120 | SVIDEO input- SECAM system | step |
| | 121-140 | Reserved | |
| | | <i>If Grabber Card is installed in the fixture</i> | |
| | 141-160 | VGA input of DVI/VGA grabber card | step |
| | 161-180 | DVI-I input of DVI/VGA grabber card | step |
| 181-200 | SDI input of SDI/ASI grabber card | step | |
| 201-220 | ASI input of SDI/ASI grabber card | step | |
| | 221-255 | Reserved | |
| 84 | | In Frame High | |
| | 0-255 | Defines the beginning of a media file segment as a percentage of the movie length (0-default) | proportional |
| 85 | | In Frame Low | |
| | 0-255 | Defines the beginning of a media file segment as a percentage of the movie length (0-default) | proportional |
| 86 | | Out Frame High | |
| | 0-255 | Defines the end of a media file segment as a percentage of the movie length (255-default) | proportional |

| DMX Channel | DMX Value | Function | Type of control |
|-------------|-----------|---|-----------------|
| 87 | | Out Frame Low | |
| | 0-255 | Defines the beginning of a media file segment as a percentage of the movie length (255-default) | proportional |
| 88 | | Gobo control | |
| | | <u>Copy mode</u> | |
| | | <i>Video stream 1</i> | |
| | 0 | Play forward if dimmer (on layer 2) > 0, looping continuously | step |
| | 1 | Play forward if dimmer (on layer 2) > 0, hold on last frame | step |
| | 2 | Pause | step |
| | 3 | Play forward in continuous loop | step |
| | 4 | Play forward once and hold on the last frame | step |
| | 5 | No function | |
| | 6 | Scrub (Display) the selected In Frame | step |
| | 7 | Scrub (Display) the selected Out Frame | step |
| | 8-9 | Reserved | |
| | | <i>Video stream 2 (the same functionality as for Video stream 1):</i> | |
| | 10 | Play forward if dimmer (on layer 2) > 0, looping continuously | step |
| | 11 | Play forward if dimmer (on layer 2) > 0, hold on last frame | step |
| | 12 | Pause | step |
| | 13 | Play forward in continuous loop | step |
| | 14 | Play forward once and hold on the last frame | step |
| | 15 | No function | |
| | 16 | Scrub (Display) the selected In Frame | step |
| | 17 | Scrub (Display) the selected Out Frame | step |
| | 18-19 | Reserved | |
| | | <u>Addition mode</u> | |
| | | <i>Video Stream 1</i> | |
| | 20 | Play forward if dimmer (on layer 2) > 0, looping continuously | step |
| | 21 | Play forward if dimmer (on layer 2) > 0, hold on last frame | step |
| | 22 | Pause | step |
| | 23 | Play forward in continuous loop | step |
| | 24 | Play forward once and hold on the last frame | step |
| | 25 | No function | |
| | 26 | Scrub (Display) the selected In Frame | step |
| | 27 | Scrub (Display) the selected Out Frame | step |
| | 28-29 | Reserved | |
| | | <i>Video stream 2</i> | |
| | 30-37 | <i>the same functionality as for Video stream 1</i> | step |
| | 38-39 | Reserved | |
| | | <u>Substraction mode</u> | |
| | | <i>Video Stream 1</i> | |
| | 40 | Play forward if dimmer (on layer 2) > 0, looping continuously | step |
| | 41 | Play forward if dimmer (on layer 2) > 0, hold on last frame | step |
| | 42 | Pause | step |
| | 43 | Play forward in continuous loop | step |
| | 44 | Play forward once and hold on the last frame | step |
| | 45 | No function | |
| | 46 | Scrub (Display) the selected In Frame | step |
| | 47 | Scrub (Display) the selected Out Frame | step |
| | 48-49 | Reserved | |

| DMX Channel | DMX Value | Function | Type of control |
|-------------|---|---|-----------------|
| 88 | | <i>Video Stream 2</i> | |
| | 50-57 | <i>the same functionality as for Video stream 1</i> | step |
| | 58-59 | Reserved | |
| | | <u>Multiplication mode</u> | |
| | | <i>Video stream 1</i> | |
| | 60 | Play forward if dimmer (on layer 2) > 0, looping continuously | step |
| | 61 | Play forward if dimmer (on layer 2) > 0, hold on last frame | step |
| | 62 | Pause | step |
| | 63 | Play forward in continuous loop | step |
| | 64 | Play forward once and hold on the last frame | step |
| | 65 | No function | |
| | 66 | Scrub (Display) the selected In Frame | step |
| | 67 | Scrub (Display) the selected Out Frame | step |
| | 68-69 | Reserved | |
| | | <i>Video Stream 2</i> | |
| | 70-77 | <i>the same functionality as for Video stream 1</i> | step |
| | 78-79 | Reserved | |
| | | <u>Minimum mode</u> | |
| | | <i>Video stream 1</i> | |
| | 80 | Play forward if dimmer (on layer 2) > 0, looping continuously | step |
| | 81 | Play forward if dimmer (on layer 2) > 0, hold on last frame | step |
| | 82 | Pause | step |
| | 83 | Play forward in continuous loop | step |
| | 84 | Play forward once and hold on the last frame | step |
| | 85 | No function | |
| | 86 | Scrub (Display) the selected In Frame | step |
| | 87 | Scrub (Display) the selected Out Frame | step |
| | 88-89 | Reserved | |
| | | <i>Video Stream 2</i> | |
| | 90-97 | <i>the same functionality as for Video stream 1</i> | step |
| | 98-99 | Reserved | |
| | | <u>Maximum mode</u> | |
| | | <i>Video stream 1</i> | |
| | 100 | Play forward if dimmer (on layer 2) > 0, looping continuously | step |
| | 101 | Play forward if dimmer (on layer 2) > 0, hold on last frame | step |
| | 102 | Pause | step |
| | 103 | Play forward in continuous loop | step |
| | 104 | Play forward once and hold on the last frame | step |
| | 105 | No function | |
| | 106 | Scrub (Display) the selected In Frame | step |
| | 107 | Scrub (Display) the selected Out Frame | step |
| | 108-109 | Reserved | |
| | <i>Video Stream 2</i> | | |
| 110-117 | <i>the same functionality as for Video stream 1</i> | step | |
| 118-255 | Reserved | | |
| 89 | | Playback Speed | |
| | 0 | Normal Speed | step |
| | 1-127 | Slow speeds from slowest ---> normal | proportional |
| | 128 | Normal Speed | step |
| | 129-255 | Faster than Normal ---> Fastest | proportional |

| DMX Channel | DMX Value | Function | Type of control |
|-------------|--------------|--|-----------------|
| 90 | | Gobo rotation and indexing | |
| | 0-63 | Clockwise rotation from fast to slow | proportional |
| | 64-127 | Indexing | proportional |
| | 128 | No rotation-centre (128-default) | step |
| | 129-192 | Indexing | proportional |
| | 193-255 | Anticlockwise rotation from slow to fast | proportional |
| 91 | | Gobo fine indexing (rotation) | |
| | 0-255 | Fine indexing (rotation) | proportional |
| 92 | | Gobo effect 1 Selection | |
| | 0 | No effect | |
| | 1 | Zoom sinus | P1-speed |
| | 2 | Zoom bump in fade out | P1-speed |
| | 3 | Zoom fade in bump out | P1-speed |
| | 4 | Reserved | |
| | 5 | Zoom in fade | P1-speed |
| | 6 | Zoom out fade | P1-speed |
| | 7 | Scale xy sinus | P1-speed |
| | 8 | Reserved | |
| | 9 | Reserved | |
| | 10 | Reserved | |
| | 11 | XY pos. circle counter-clockwise | P1-speed |
| | 12 | XY pos. circle clockwise | P1-speed |
| | 13 | XY pos. scroll up | P1-speed |
| | 14 | XY pos. scroll down | P1-speed |
| | 15 | XY pos. scroll left | P1-speed |
| | 16 | XY pos. scroll right | P1-speed |
| | 17 | Right-left diag. down scroll | P1-speed |
| | 18 | Right-left diag. up scroll | P1-speed |
| | 19 | Left-right diag. down scroll | P1-speed |
| | 20 | Left-right diag. up scroll | P1-speed |
| | 21 | X rotate | P1-speed |
| | 22 | Y rotate | P1-speed |
| | 23 | XY rotate | P1-speed |
| | 24 | XY inv. rotate | P1-speed |
| | 25 | X inv. y rotate | P1-speed |
| | 26 | Tile xy | P1-amount |
| | 27 | Tile xy | P1-speed |
| | 28 | XYZ rot. cube | P1-speed |
| | 29 | XYZ rot. sphere | P1-speed |
| | 30 | X rot. cylinder | P1-speed |
| | 31 | Y rot. cylinder | P1-speed |
| | 32 | Reserved | |
| | 33 | Kaleidoscope | none |
| | 34 | Squeeze in | none |
| | 35 | Squeeze out | none |
| | 36 | Bend X | none |
| | 37 | Bend Y | none |
| | 38 | Tile frame | none |
| 39 | Frame | none | |
| 40 | Plane Flip X | none | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control | |
|-------------|-----------|-------------------------------|---|------------|
| 92 | 41 | Plane Flip Y | none | |
| | 42 | Plane Flip XY | none | |
| | 43 | Plane mirror X top | none | |
| | 44 | Plane mirror X bottom | none | |
| | 45 | Plane mirror Y left | none | |
| | 46 | Plane mirror Y right | none | |
| | 47 | Plane mirror XY segment 1 | none | |
| | 48 | Plane mirror XY segment 2 | segment 1 segment 2 | none |
| | 49 | Plane mirror XY segment 3 | segment 4 segment 3 | none |
| | 50 | Plane mirror XY segment 4 | segment 4 segment 3 | none |
| | 51 | Plane tile 2x | | none |
| | 52 | Plane tile 3x | | none |
| | 53 | Plane tile 4x | | none |
| | 54 | Plane tile 5x | | none |
| | 55 | Plane cross tile 2x | | none |
| | 56 | Plane cross tile 2x inverse | | none |
| | 57 | Plane cross tile 3x | | none |
| | 58 | Plane cross tile 3x inverse | | none |
| | 59 | Plane cross tile 4x | | none |
| | 60 | Plane cross tile 4x inverse | | none |
| | 61 | Plane cross tile 5x | | none |
| | 62 | Plane cross tile 5x inverse | | none |
| | 63 | Plane cross tiler 5x | | none |
| | 64 | Plane cross tiler 5x inverse | | none |
| | 65 | Plane bar | | none |
| | 66 | Plane bar inverse | | none |
| | 67 | Plane bar left-right | | none |
| | 68 | Plane bar top-bottom | | none |
| | 69 | Reserved | | |
| | 70 | Reserved | | |
| | 71 | Gobo disc | | none |
| | 72 | Gobo disc Flip X | | none |
| | 73 | Gobo disc Flip Y | | none |
| | 74 | Gobo disc Flip XY | | none |
| | 75 | Gobo disc mirror X | | none |
| | 76 | Gobo disc mirror Y | | none |
| | 77 | Gobo disc mirror XY | | none |
| | 78-79 | Reserved | | |
| | 80 | Plane mirror X top inverse | | none |
| | 81 | Plane mirror X bottom inverse | | none |
| | 82 | Plane mirror Y left inverse | | none |
| | 83 | Plane mirror Y right inverse | | none |
| | 84 | Plane mirror XY inverse | | none |
| | 85 | Plane mirror X-inverse,Y | | none |
| | 86 | Plane mirror X,Y-inverse | | none |
| | 87-89 | Reserved | | |
| | 90 | Circular effect (Fish eye) | | P1, P2, P3 |
| | | | <i>P1-character, P2-X ratio, P3-Y ratio</i> | |
| | 91 | Iris on layer | | P1, P2, P3 |
| | | | <i>P1-size, P2-iris type, P3-texture mode</i> | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control | |
|-------------|--|--|-------------------|--|
| | 92 | Auto Iris effect on layer <i>P1-speed, P2-mask type, P3-opening/closing command</i> | P1, P2, P3 | |
| | 93-94 | Reserved | | |
| | 95 | Zoom In/Move XY <i>P1-zoom, P2-X-movement, P3-Y-movement</i> | P1, P2, P3 | |
| | 96 | Zoom In/Auto Move XY <i>P1-zoom, P2-X-speed, P3- Y-speed</i> | P1, P2, P3 | |
| | 97-99 | Reserved | | |
| | | kaleidoscope - mode and mosaic segment selection: | | |
| | 100 | Square -static mode | P1, P2, P3 | |
| | 101 | Square -dynamic mode | P1, P2, P3 | |
| | 102 | Right triangular - static mode | P1, P2, P3 | |
| | 103 | Right triangular - dynamic mode | P1, P2, P3 | |
| | 104 | Isosceles triangular - static mode | P1, P2, P3 | |
| | 105 | Isosceles triangular - dynamic mode | P1, P2, P3 | |
| | 106 | Triangular 1 - static mode | P1, P2, P3 | |
| | 107 | Triangular 1 -dynamic mode | P1, P2, P3 | |
| | 108 | Triangular 2 -static mode | P1, P2, P3 | |
| | 109 | Triangular 2 - dynamic mode | P1, P2, P3 | |
| | 110 | Centered kaleidoscope (rough)-static mode | P1, P2, P3 | |
| | 111 | Centered kaleidoscope (rough)-dynamic mode | P1, P2, P3 | |
| | 112 | Centered kaleidoscope (fine)-static mode | P1, P2, P3 | |
| 113 | Centered kaleidoscope (fine)-dynamic mode <i>Stat. mode:P1-density, P2-content (coarse), P3-content (fine)</i> <i>Dyn. mode:P1-density, P2-size and pulsation, P3-movement</i> | P1, P2, P3 | | |
| 114-149 | Reserved | | | |
| 150 | Layer keystoneing <i>P1-skewing in X, P2-skewing in Y, P3-squeezing/stretching in Y</i> | P1,P2,P3 | | |
| 151-255 | Reserved | | | |
| 93 | | Gobo effect 1 - Parameter 1 | | |
| | 0-255 | Effect control | depends on effect | |
| 94 | | Gobo effect 1 - Parameter 2 | | |
| | 0-255 | Effect control | depends on effect | |
| 95 | | Gobo effect 1 - Parameter 3 | | |
| | 0-255 | Effect control | depends on effect | |
| 96 | | Gobo effect 2 Selection | | |
| | 0 | No effect | | |
| | 1 | Colour to black and white | P1-amount | |
| | 2 | Colour to black and white inverse | P1-amount | |
| | 3 | Black and white to black and white inverse | P1-amount | |
| | 4 | Inversion | P1-amount | |
| | 5 | Black Mask | P1-amount | |
| | 6 | Black Mask inverse | P1-amount | |
| | 7 | Contrast | P1-amount | |
| | 8 | Brightness | P1-amount | |
| | 9 | RGB to GBR | P1-amount | |
| | 10 | RGB to BRG | P1-amount | |
| | 11 | RGB to RBG | P1-amount | |
| | 12 | Black and white to black and white inverse timed | P1-speed | |
| | 13 | Colour to black and white timed | P1-speed | |

| DMX Channel | DMX Value | Function | Type of control | |
|-------------|-----------|--|-----------------------------|------------|
| 96 | 14 | Colour to inverse timed | P1-speed | |
| | 15 | Cycle | P1-speed | |
| | 16 | Cycle inverse | P1-speed | |
| | 17 | Reserved | | |
| | 18 | Reserved | | |
| | 19 | Colour Key | P1-amount | |
| | 20 | Colour Key inverse | P1-amount | |
| | 21 | Key Black | P1-amount | |
| | 22 | Key Black inverse | P1-amount | |
| | 23 | Key White | P1-amount | |
| | 24 | Key White inverse | P1-amount | |
| | 25 | White flash | P1-amount | |
| | 26 | Black flash | P1-amount | |
| | 27 | Alpha flash | P1-amount | |
| | 28 | Invert flash | P1-amount | |
| | 29 | BW Flash | P1-amount | |
| | 30 | Black and white to black and white inverse Flash | P1-amount | |
| | 31 | Gradient Wipe X | P1-amount | |
| | 32 | Gradient Wipe Y | P1-amount | |
| | 33-39 | Reserved | | |
| | 40 | Gaussian filter | P1-amount | |
| | 41 | Mean filter | P1-amount | |
| | 42 | Laplacian filter | P1-amount | |
| | 43 | Emboss filter | P1-amount | |
| | 44 | Sharpness filter | P1-amount | |
| | 45-49 | Reserved | | |
| | | | RGB effects: | |
| | | 50 | RGB subtract All Pixels | P1, P2, P3 |
| | | 51 | RGB add All Pixels | P1, P2, P3 |
| | | 52 | RGB add non-black Pixels | P1, P2, P3 |
| | | 53 | RGB subtract/add All Pixels | P1, P2, P3 |
| | | 54 | Swap RGB to RBG | P1, P2, P3 |
| | 55 | Swap RGB to GRB | P1, P2, P3 | |
| | 56 | Swap RGB to GBR | P1, P2, P3 | |
| | 57 | Swap RGB to BRG | P1, P2, P3 | |
| | 58 | Swap RGB to BGR | P1, P2, P3 | |
| | 59 | RGB invert | P1, P2, P3 | |
| | 60 | Invert and swap RGB to BRG | P1, P2, P3 | |
| | 61 | Invert and swap RGB to GBR | P1, P2, P3 | |
| | 62 | Colour to Alpha | P1, P2, P3 | |
| | 63 | Colour to Alpha inverted | P1, P2, P3 | |
| | 64-67 | Reserved | | |
| | 68 | RGB scale | P1, P2, P3 | |
| | | <i>P1-red, P2-green, P3-blue</i> | | |
| | 69 | Brightness scale | P1, P2 | |
| | | <i>P1, P2 - inclination of conversion line</i> | | |
| | 70 | Swirl effect | P1, P2, P3 | |
| | | <i>P1-radius, P2-angle, P3-diagonal position</i> | | |
| | 71 | Pixelation effect | P1, P2, P3 | |
| | | <i>P1-num. of pixels (X), P2-num. of pixels (Y), P3-position in X-axis</i> | | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control | |
|-------------|-----------|--|-----------------------------------|-------------------|
| | 72 | Cross-stitching effect <i>P1-pattern density, P2-colour of stitch, P3- position in X-axis</i> | P1, P2, P3 | |
| | 73 | Posterization effect <i>P1-number of colours, P2-Gamma correction</i> | P1, P2 | |
| | 74-94 | <i>Reserved</i> | | |
| | 95 | Zoom In/Move XY <i>P1-zoom, P2-X-movement, P3-Y-movement</i> | P1, P2, P3 | |
| | 96 | Zoom In/Auto Move XY <i>P1-zoom, P2-X-speed, P3- Y-speed</i> | P1, P2, P3 | |
| | 97-149 | <i>Reserved</i> | | |
| | 150 | Layer keystoneing <i>P1-squeezing/stretching in X, P2/P3-compressing & expanding in X/Y</i> | P1,P2,P3 | |
| | 151-199 | <i>Reserved</i> | | |
| | 200 | Picture merging - R/G/B gamma adjustment in blended edges <i>P 1- red, P 2 - green, P 3- blue</i> | P1, P2,P3 | |
| | 201-255 | <i>Reserved</i> | | |
| | 97 | | Gobo effect 2 -Parameter 1 | |
| | | 0-255 | Effect control | depends on effect |
| | 98 | | Gobo effect 2 -Parameter 2 | |
| 0-255 | | Effect control | depends on effect | |
| 99 | | Gobo effect 2 -Parameter 3 | | |
| | 0-255 | Effect control | depends on effect | |
| 100 | | Gobo Position X coarse | | |
| | 0-127 | Movement forward | proportional | |
| | 128 | Centre (128-default) | step | |
| | 129-255 | Movement backward | proportional | |
| 101 | | Gobo position X fine | | |
| | 0-255 | Position X fine | proportional | |
| 102 | | Gobo position Y coarse | | |
| | 0-127 | Movement down | proportional | |
| | 128 | Centre (128-default) | step | |
| | 129-255 | Movement up | proportional | |
| 103 | | Gobo position Y fine | | |
| | 0-255 | Position Y fine | proportional | |
| 104 | | Gobo zoom X coarse | | |
| | 0-127 | Narrowing | proportional | |
| | 128 | Centre (128-default) | step | |
| | 129-255 | Widening | proportional | |
| 105 | | Gobo zoom X fine | | |
| | 0-255 | Zoom X fine | proportional | |
| 106 | | Gobo zoom Y coarse | | |
| | 0-127 | Narrowing | proportional | |
| | 128 | Centre (128-default) | step | |
| | 129-255 | Widening | proportional | |
| 107 | | Gobo zoom Y fine | | |
| | 0-255 | Zoom Y fine | proportional | |
| 108 | | Synchronization to ID | | |
| | 0 | No function | step | |
| | 1-255 | Synchronization to fixture ID | proportional | |

| DMX Channel | DMX Value | Function | Type of control |
|---------------------|-------------|---|-----------------|
| Gobo layer 3 | | | |
| 109 | | Dimmer | |
| | 0-255 | Dimmer intensity from 0% to 100% (255-default) | proportional |
| 110 | | Gobo Folder selection | |
| | 0-20 | Factory folders | step |
| | 21-240 | User folders | step |
| | 241-250 | Reserved | |
| | 251 | Live input (grab. card)-see channel 111 | step |
| | 252 | Straming from remote sources | step |
| | 253-255 | Reserved | |
| 111 | | Gobo selection | |
| | 0 | White | step |
| 111 | 1-255 | 255 Gobos (one by one) | step |
| | | If Live input (251 DMX) is selected on channel 110: | |
| | 0 | White screen | step |
| | 1-20 | Video composite input-PAL system | step |
| | 21-40 | SVIDEO input- PAL system | step |
| | 21-60 | Video composite input-NTSC system | step |
| | 61-80 | SVIDEO input- NTSC system | step |
| | 81-100 | Video composite input-SECAM system | step |
| | 101-120 | SVIDEO input- SECAM system | step |
| | 121-140 | Reserved | |
| | | <i>If Grabber Card is installed in the fixture</i> | |
| | 141-160 | VGA input of DVI/VGA grabber card | step |
| | 161-180 | DVI-I input of DVI/VGA grabber card | step |
| | 181-200 | SDI input of SDI/ASI grabber card | step |
| | 201-220 | ASI input of SDI/ASI grabber card | step |
| 121-255 | Reserved | | |
| 112 | | In Frame High | |
| | 0-255 | Defines the beginning of a media file segment as a percentage of the movie length (0-default) | proportional |
| 113 | | In Frame Low | |
| | 0-255 | Defines the beginning of a media file segment as a percentage of the movie length (0-default) | proportional |
| 114 | | Out Frame High | |
| | 0-255 | Defines the end of a media file segment as a percentage of the movie length (255-default) | proportional |
| 115 | | Out Frame Low | |
| | 0-255 | Defines the beginning of a media file segment as a percentage of the movie length (255-default) | proportional |
| 116 | | Gobo control | |
| | | Copy mode | |
| | | <i>Video stream 1</i> | |
| | 0 | Play forward if dimmer (on layer 3) > 0, looping continuously | step |
| | 1 | Play forward if dimmer (on layer 3) > 0, hold on last frame | step |
| | 2 | Pause | step |
| | 3 | Play forward in continuous loop | step |
| | 4 | Play forward once and hold on the last frame | step |
| 5 | No function | | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control |
|-------------|-----------|--|-----------------|
| 116 | 6 | Scrub (Display) the selected In Frame | step |
| | 7 | Scrub (Display) the selected Out Frame | step |
| | 8-9 | Reserved | |
| | | <i>Video stream 2 (the same functionality as for Video stream 1):</i> | |
| | 10 | Play forward if dimmer (on layer 3) > 0, looping continuously | step |
| | 11 | Play forward if dimmer (on layer 3) > 0, hold on last frame | step |
| | 12 | Pause | step |
| | 13 | Play forward in continuous loop | step |
| | 14 | Play forward once and hold on the last frame | step |
| | 15 | No function | |
| | 16 | Scrub (Display) the selected In Frame | step |
| | 17 | Scrub (Display) the selected Out Frame | step |
| | 18-19 | Reserved | |
| | | <u>Addition mode</u> | |
| | | <i>Video Stream 1</i> | |
| | 20 | Play forward if dimmer (on layer 3) > 0, looping continuously | step |
| | 21 | Play forward if dimmer (on layer 3) > 0, hold on last frame | step |
| | 22 | Pause | step |
| | 23 | Play forward in continuous loop | step |
| | 24 | Play forward once and hold on the last frame | step |
| | 25 | No function | |
| | 26 | Scrub (Display) the selected In Frame | step |
| | 27 | Scrub (Display) the selected Out Frame | step |
| | 28-29 | Reserved | |
| | | <i>Video stream 2</i> | |
| | 30-37 | <i>the same functionality as for Video stream 1</i> | step |
| | 38-39 | Reserved | |
| | | <u>Substraction mode</u> | |
| | | <i>Video Stream 1</i> | |
| | 40 | Play forward if dimmer (on layer 3) > 0, looping continuously | step |
| | 41 | Play forward if dimmer (on layer 3) > 0, hold on last frame | step |
| | 42 | Pause | step |
| | 43 | Play forward in continuous loop | step |
| | 44 | Play forward once and hold on the last frame | step |
| | 45 | No function | |
| | 46 | Scrub (Display) the selected In Frame | step |
| | 47 | Scrub (Display) the selected Out Frame | step |
| | 48-49 | Reserved | |
| | | <i>Video Stream 2</i> | |
| | 50-57 | <i>the same functionality as for Video stream 1</i> | step |
| | 58-59 | Reserved | |
| | | <u>Multiplication mode</u> | |
| | | <i>Video stream 1</i> | |
| | 60 | Play forward if dimmer (on layer 3) > 0, looping continuously | step |
| | 61 | Play forward if dimmer (on layer 3) > 0, hold on last frame | step |
| | 62 | Pause | step |
| | 63 | Play forward in continuous loop | step |
| | 64 | Play forward once and hold on the last frame | step |
| | 65 | No function | |
| | 66 | Scrub (Display) the selected In Frame | step |

| DMX Channel | DMX Value | Function | Type of control |
|-------------|---|---|-----------------|
| 116 | 67 | Scrub (Display) the selected Out Frame | step |
| | 68-69 | Reserved | |
| | | <i>Video Stream 2</i> | |
| | 70-77 | <i>the same functionality as for Video stream 1</i> | step |
| | 78-79 | Reserved | |
| | | Minimum mode | |
| | | <i>Video stream 1</i> | |
| | 80 | Play forward if dimmer (on layer 3) > 0, looping continuously | step |
| | 81 | Play forward if dimmer (on layer 3) > 0, hold on last frame | step |
| | 82 | Pause | step |
| | 83 | Play forward in continuous loop | step |
| | 84 | Play forward once and hold on the last frame | step |
| | 85 | No function | |
| | 86 | Scrub (Display) the selected In Frame | step |
| | 87 | Scrub (Display) the selected Out Frame | step |
| | 88-89 | Reserved | |
| | | <i>Video Stream 2</i> | |
| | 90-97 | <i>the same functionality as for Video stream 1</i> | step |
| | 98-99 | Reserved | |
| | | Maximum mode | |
| | | <i>Video stream 1</i> | |
| | 100 | Play forward if dimmer (on layer 3) > 0, looping continuously | step |
| | 101 | Play forward if dimmer (on layer 3) > 0, hold on last frame | step |
| | 102 | Pause | step |
| | 103 | Play forward in continuous loop | step |
| 104 | Play forward once and hold on the last frame | step | |
| 105 | No function | | |
| 106 | Scrub (Display) the selected In Frame | step | |
| 107 | Scrub (Display) the selected Out Frame | step | |
| 108-109 | Reserved | | |
| | <i>Video Stream 2</i> | | |
| 110-117 | <i>the same functionality as for Video stream 1</i> | step | |
| 118-255 | Reserved | | |
| 117 | | Playback Speed | |
| | 0 | Normal Speed | step |
| | 1-127 | Slow speeds from slowest ---> normal | proportional |
| | 128 | Normal Speed | step |
| | 129-255 | Faster than Normal ---> Fastest | proportional |
| 118 | | Gobo rotation and indexing | |
| | 0-63 | Clockwise rotation from fast to slow | proportional |
| | 64-127 | Indexing | proportional |
| | 128 | No rotation-centre (128-default) | step |
| | 129-192 | Indexing | proportional |
| 193-255 | Anticlockwise rotation from slow to fast | proportional | |
| 119 | | Gobo fine indexing (rotation) | |
| | 0-255 | Fine indexing (rotation) | proportional |
| 120 | | Gobo effect 1 Selection | |
| | 0 | No effect | |
| | 1 | Zoom sinus | P1-speed |
| | 2 | Zoom bump in fade out | P1-speed |

| DMX Channel | DMX Value | Function | Type of control | | |
|-------------|-----------|----------------------------------|-----------------|-----------|------|
| 120 | 3 | Zoom fade in bump out | P1-speed | | |
| | 4 | Reserved | | | |
| | 5 | Zoom in fade | P1-speed | | |
| | 6 | Zoom out fade | P1-speed | | |
| | 7 | Scale xy sinus | P1-speed | | |
| | 8 | Reserved | | | |
| | 9 | Reserved | | | |
| | 10 | Reserved | | | |
| | 11 | XY pos. circle counter-clockwise | P1-speed | | |
| | 12 | XY pos. circle clockwise | P1-speed | | |
| | 13 | XY pos. scroll up | P1-speed | | |
| | 14 | XY pos. scroll down | P1-speed | | |
| | 15 | XY pos. scroll left | P1-speed | | |
| | 16 | XY pos. scroll right | P1-speed | | |
| | 17 | Right-left diag. down scroll | P1-speed | | |
| | 18 | Right-left diag. up scroll | P1-speed | | |
| | 19 | Left-right diag. down scroll | P1-speed | | |
| | 20 | Left-right diag. up scroll | P1-speed | | |
| | 21 | X rotate | P1-speed | | |
| | 22 | Y rotate | P1-speed | | |
| | 23 | XY rotate | P1-speed | | |
| | 24 | XY inv. rotate | P1-speed | | |
| | 25 | X inv. y rotate | P1-speed | | |
| | 26 | Tile xy | P1-amount | | |
| | 27 | Tile xy | P1-speed | | |
| | 28 | XYZ rot. cube | P1-speed | | |
| | 29 | XYZ rot. sphere | P1-speed | | |
| | 30 | X rot. cylinder | P1-speed | | |
| | 31 | Y rot. cylinder | P1-speed | | |
| | 32 | Reserved | | | |
| | 33 | Kaleidoscope | none | | |
| | 34 | Squeeze in | none | | |
| | 35 | Squeeze out | none | | |
| | 36 | Bend X | none | | |
| | 37 | Bend Y | none | | |
| | 38 | Tile frame | none | | |
| | 39 | Frame | none | | |
| | 40 | Plane Flip X | none | | |
| | 41 | Plane Flip Y | none | | |
| | 42 | Plane Flip XY | none | | |
| | 43 | Plane mirror X top | none | | |
| | 44 | Plane mirror X bottom | none | | |
| | 45 | Plane mirror Y left | none | | |
| | 46 | Plane mirror Y right | none | | |
| | 47 | Plane mirror XY segment 1 | | none | |
| | 48 | Plane mirror XY segment 2 | segment 1 | segment 2 | none |
| | 49 | Plane mirror XY segment 3 | | | none |
| | 50 | Plane mirror XY segment 4 | segment 4 | segment 3 | none |
| | 51 | Plane tile 2x | | none | |
| | 52 | Plane tile 3x | | none | |

| DMX Channel | DMX Value | Function | Type of control | |
|-------------|-----------|--|----------------------|----------|
| 120 | 53 | Plane tile 4x | none | |
| | 54 | Plane tile 5x | none | |
| | 55 | Plane cross tile 2x | none | |
| | 56 | Plane cross tile 2x inverse | none | |
| | 57 | Plane cross tile 3x | none | |
| | 58 | Plane cross tile 3x inverse | none | |
| | 59 | Plane cross tile 4x | none | |
| | 60 | Plane cross tile 4x inverse | none | |
| | 61 | Plane cross tile 5x | none | |
| | 62 | Plane cross tile 5x inverse | none | |
| | 63 | Plane cross tiler 5x | none | |
| | 64 | Plane cross tiler 5x inverse | none | |
| | 65 | Plane bar | none | |
| | 66 | Plane bar inverse | none | |
| | 67 | Plane bar left-right | none | |
| | 68 | Plane bar top-bottom | none | |
| | 69 | Reserved | | |
| | 70 | Reserved | | |
| | 71 | Gobo disc | none | |
| | 72 | Gobo disc Flip X | none | |
| | 73 | Gobo disc Flip Y | none | |
| | 74 | Gobo disc Flip XY | none | |
| | 75 | Gobo disc mirror X | none | |
| | 76 | Gobo disc mirror Y | none | |
| | 77 | Gobo disc mirror XY | none | |
| | 78-79 | Reserved | | |
| | 80 | Plane mirror X top inverse | none | |
| | 81 | Plane mirror X bottom inverse | none | |
| | 82 | Plane mirror Y left inverse | none | |
| | 83 | Plane mirror Y right inverse | none | |
| | 84 | Plane mirror XY inverse | none | |
| | 85 | Plane mirror X-inverse,Y | none | |
| | 86 | Plane mirror X,Y-inverse | none | |
| | 87-89 | Reserved | | |
| | 90 | Circular effect (Fish eye) <i>P1-character, P2-X ratio, P3-Y ratio</i> | P1, P2, P3 | |
| | 91 | Iris on layer <i>P1-size, P2-iris type, P3-texture mode</i> | P1, P2, P3 | |
| | 92 | Auto Iris effect on layer <i>P1-speed, P2-mask type, P3-opening/closing command</i> | P1, P2, P3 | |
| | 93-94 | Reserved | | |
| | 95 | Zoom In/Move XY <i>P1-zoom, P2-X-movement, P3-Y-movement</i> | P1, P2, P3 | |
| | 96 | Zoom In/Auto Move XY <i>P1-zoom, P2-X-speed, P3- Y-speed</i> | P1, P2, P3 | |
| | 97-99 | Reserved | | |
| | | <i>kaleidoscope - mode and mosaic segment selection:</i> | | |
| | | 100 | Square -static mode | P1,P2,P3 |
| | | 101 | Square -dynamic mode | P1,P2,P3 |
| | 102 | Right triangular - static mode | P1,P2,P3 | |

| DMX Channel | DMX Value | Function | Type of control | |
|-------------|-------------------|--|---|----------|
| | 103 | Right triangular - dynamic mode | P1,P2,P3 | |
| | 104 | Isosceles triangular - static mode | P1,P2,P3 | |
| | 105 | Isosceles triangular - dynamic mode | P1,P2,P3 | |
| | 106 | Triangular 1 - static mode | P1,P2,P3 | |
| | 107 | Triangular 1 -dynamic mode | P1,P2,P3 | |
| | 108 | Triangular 2 -static mode | P1,P2,P3 | |
| | 109 | Triangular 2 - dynamic mode | P1,P2,P3 | |
| | 110 | Centered kaleidoscope (rough)-static mode | P1, P2, P3 | |
| | 111 | Centered kaleidoscope (rough)-dynamic mode | P1, P2, P3 | |
| | 112 | Centered kaleidoscope (fine)-static mode | P1, P2, P3 | |
| | 113 | Centered kaleidoscope (fine)-dynamic mode | P1, P2, P3 | |
| | | | <i>Stat. mode:P1-density, P2-content (coarse), P3-content (fine)</i> | |
| | | | <i>Dyn. mode:P1-density, P2-size and pulsation, P3-movement</i> | |
| | 114-149 | Reserved | | |
| | | 150 | Layer keystoneing | P1,P2,P3 |
| | | | <i>P1-skewing in X, P2-skewing in Y, P3-squeezing/stretching in Y</i> | |
| 151-255 | | Reserved | | |
| 121 | | Gobo effect 1 - Parameter 1 | | |
| | 0 - 255 | Effect control | depends on effect | |
| 122 | | Gobo effect 1 - Parameter 2 | | |
| | 0 - 255 | Effect control | depends on effect | |
| 123 | | Gobo effect 1 - Parameter 3 | | |
| | 0 - 255 | Effect control | depends on effect | |
| 124 | | Gobo effect 2 Selection | | |
| | 0 | No effect | | |
| | 1 | Colour to black and white | P1-amount | |
| | 2 | Colour to black and white inverse | P1-amount | |
| | 3 | Black and white to black and white inverse | P1-amount | |
| | 4 | Inversion | P1-amount | |
| | 5 | Black Mask | P1-amount | |
| | 6 | Black Mask inverse | P1-amount | |
| | 7 | Contrast | P1-amount | |
| | 8 | Brightness | P1-amount | |
| | 9 | RGB to GBR | P1-amount | |
| | 10 | RGB to BRG | P1-amount | |
| | 11 | RGB to RBG | P1-amount | |
| | 12 | Black and white to black and white inverse timed | P1-speed | |
| | 13 | Colour to black and white timed | P1-speed | |
| | 14 | Colour to inverse timed | P1-speed | |
| | 15 | Cycle | P1-speed | |
| | 16 | Cycle inverse | P1-speed | |
| | 17 | Reserved | | |
| | 18 | Reserved | | |
| | 19 | Colour Key | P1-amount | |
| | 20 | Colour Key inverse | P1-amount | |
| | 21 | Key Black | P1-amount | |
| | 22 | Key Black inverse | P1-amount | |
| | 23 | Key White | P1-amount | |
| 24 | Key White inverse | P1-amount | | |
| 25 | White flash | P1-amount | | |

Appendix - DMX protocol

| DMX Channel | DMX Value | Function | Type of control |
|-------------|-----------|--|-----------------|
| | 26 | Black flash | P1-amount |
| | 27 | Alpha flash | P1-amount |
| | 28 | Invert flash | P1-amount |
| | 29 | BW Flash | P1-amount |
| | 30 | Black and white to black and white inverse Flash | P1-amount |
| | 31 | Gradient Wipe X | P1-amount |
| | 32 | Gradient Wipe Y | P1-amount |
| | 33-39 | Reserved | |
| | 40 | Gaussian filter | P1-amount |
| | 41 | Mean filter | P1-amount |
| | 42 | Laplacian filter | P1-amount |
| | 43 | Emboss filter | P1-amount |
| | 44 | Sharpness filter | P1-amount |
| | 45-49 | Reserved | |
| | | RGB effects: | |
| | 50 | RGB subtract All Pixels | P1, P2, P3 |
| | 51 | RGB add All Pixels | P1, P2, P3 |
| | 52 | RGB add non-black Pixels | P1, P2, P3 |
| | 53 | RGB subtract/add All Pixels | P1, P2, P3 |
| | 54 | Swap RGB to RBG | P1, P2, P3 |
| | 55 | Swap RGB to GRB | P1, P2, P3 |
| | 56 | Swap RGB to GBR | P1, P2, P3 |
| | 57 | Swap RGB to BRG | P1, P2, P3 |
| | 58 | Swap RGB to BGR | P1, P2, P3 |
| | 59 | RGB invert | P1, P2, P3 |
| | 60 | Invert and swap RGB to BRG | P1, P2, P3 |
| | 61 | Invert and swap RGB to GBR | P1, P2, P3 |
| | 62 | Colour to Alpha | P1, P2, P3 |
| | 63 | Colour to Alpha inverted | P1, P2, P3 |
| | 64-67 | Reserved | |
| | 68 | RGB scale <i>P1-red, P2-green, P3-blue</i> | P1, P2, P3 |
| | 69 | Brightness scale <i>P1, P2 - inclination of conversion line</i> | P1, P2, P3 |
| | 70 | Swirl effect <i>P1-radius, P2-angle, P3-diagonal position</i> | P1, P2, P3 |
| | 71 | Pixelation effect <i>P1-num. of pixels (X), P2-num. of pixels (Y), P3-position in X-axis</i> | P1, P2, P3 |
| | 72 | Cross-stitching effect <i>P1-pattern density, P2-colour of stitch, P3- position in X-axis</i> | P1, P2, P3 |
| | 73 | Posterization effect <i>P1-number of colours, P2-Gamma correction</i> | P1, P2 |
| | 74-94 | Reserved | |
| | 95 | Zoom In/Move XY <i>P1-zoom, P2-X-movement, P3-Y-movement</i> | P1, P2, P3 |
| | 96 | Zoom In/Auto Move XY <i>P1-zoom, P2-X-speed, P3- Y-speed</i> | P1, P2, P3 |
| | 97-149 | Reserved | |
| | 150 | Layer keystoneing <i>P1-squeezing/stretching in X, P2/P3-compressing & expanding in X/Y</i> | P1,P2,P3 |

| DMX Channel | DMX Value | Function | Type of control |
|--|-----------|--|-------------------|
| | 151-199 | <i>Reserved</i> | |
| | 200 | Picture merging - R/G/B gamma adjustment in blended edges <i>P 1- red, P 2 - green, P 3- blue</i> | P1, P2,P3 |
| | | | |
| | 201-255 | <i>Reserved</i> | |
| 125 | | Gobo effect 2 -Parameter 1 | |
| | 0-255 | Effect control | depends on effect |
| 126 | | Gobo effect 2 -Parameter 2 | |
| | 0-255 | Effect control | depends on effect |
| 127 | | Gobo effect 2 -Parameter 3 | |
| | 0-255 | Effect control | depends on effect |
| 128 | | Gobo Position X coarse | |
| | 0-127 | Movement forward | proportional |
| | 128 | Centre (128-default) | step |
| | 129-255 | Movement backward | proportional |
| 129 | | Gobo position X fine | |
| | 0-255 | Position X fine | proportional |
| 130 | | Gobo position Y coarse | |
| | 0-127 | Movement down | proportional |
| | 128 | Centre (128-default) | step |
| | 129-255 | Movement up | proportional |
| 131 | | Gobo position Y fine | |
| | 0-255 | Position Y fine | proportional |
| 132 | | Gobo zoom X coarse | |
| | 0-127 | Narrowing | proportional |
| | 128 | Centre (128-default) | step |
| 132 | 129-255 | Widening | proportional |
| 133 | | Gobo zoom X fine | |
| | 0-255 | Zoom X fine | proportional |
| 134 | | Gobo zoom Y coarse | |
| | 0-127 | Narrowing | proportional |
| | 128 | Centre (128-default) | step |
| | 129-255 | Widening | proportional |
| 135 | | Gobo zoom Y fine | |
| | 0-255 | Zoom Y fine | proportional |
| 136 | | Synchronization to ID | |
| | 0 | No function | step |
| | 1-255 | Synchronization to fixture ID | proportional |
| * DMX value 10 and 11 changes meaning of channels 18-25. | | | |
| See chapter "Projection onto angular, cylindric or spheric surfaces" in the User manual. | | | |